

HVRM-D800E
Installation & User's Guide



Caution

Since this device is operation purpose and registered as suitable electromagnetic waves, seller or user should be cautious on this point. If the device is sold or purchased wrongly, it is required to replace as Home use.

FCC Compliance Statement

Caution : Any changes or modifications in construction of this device which are not expressly approved the party responsible for compliance could void the user's authority to operate the equipment.

NOTE : This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications, Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures

Warning

1. In case of changing built-in lithium battery, it should be replaced as same or kindred one to prevent a danger of explosion. Since old batteries could be a factor of environment contamination, be cautious to treat them.
2. Do not throw the batteries to fire or heating. Neither short circuit or disassembly is prohibited.
3. Do not charge the batteries provided with Remote Controller

Important Notice

1. Do not place heavy objects on the top of the HVRM-D800E
2. HVRM-D800E is for indoor use. It is not weatherproof. Use HVRM-D800E with referring to its environmental specifications (Temperature & Humidity). To clean the HVRM-D800E, gently wipe the outside with a clean dry cloth.
3. HVRM-D800E use AC power of 110V~240V. Be cautions not to cause electric damages to HVRM-D800E.
4. Be careful not to drop the HVRM-D800E. Physical shocks may harm the products including internal HDD. In addition, be sure the HVRM-D800E is secured after installation.
5. HVRM-D800E is made of metal. Therefore you can hurt human beings if you throw it to them or hit on them. When HVRM-D800E is installed, be cautious to locate on safe places where children are unreachable.
6. If HVRM-D800E does not operate properly, please contact the closest HUNT ELECTRONIC USA INC. distributor for after sales service. Tempering or disassembling the product will void warranty.
7. Security surveillance laws may differ for each country. Therefore, please contact the local region first to avoid any surveillance law violations.

The content of this manual can differ according to firmware or Software upgrading, and the standard and appearance of products may be changed for the improvement of quality without an advance notice.

Contents

INSTALLATION GUIDE	10
OVERVIEW	10
1. Introduction	10
2. Supplied accessories	12
3. Description & Function	13
INSTALLATION AND CONNECTION	15
4. Connecting & Running	15
4.1. Connecting camera	15
4.2. Connecting monitor	16
4.3. Audio Connection	16
4.4. Power Supply	17
5. Running OSD menu	18
5.1. Structure of Menu	18
5.2. Dialogue box to edit a word	19
6. Setting remote controller	20
6.1. Setting ID of HVRM-D800E	20
6.2. Selecting HVRM-D800E	21
6.3. Operable range of remote controller	21
6.4. Loading the batteries into remote controller	21
7. HVRM-D800E configuration	22
7.1. Basic Configuration	22
7.2. Advanced configuration	22
7.3. External storage & Back up configuration	23
7.4. Internet/ Intranet configuration	23
8. HVRM-D800E basic setting	24
8.1. Viewing Image	24
8.2. Setting Date & Time	25
8.2.1. Time Zone	25
8.2.2. Daylight Saving	25
8.2.3. Sync with NTP	25
8.2.4. Time Format	26

8.2.5.	Date.....	26
8.2.6.	Time.....	26
8.2.7.	Apply Date/Time.....	26
8.3.	Setting recording condition.....	27
8.3.1.	Configuration Status.....	27
8.3.2.	Recording Speed/Quality.....	28
8.3.3.	Speed(ips).....	28
8.3.4.	Quality.....	28
8.3.5.	Audio Recording.....	28
8.3.6.	Alarm Recording.....	28
8.3.7.	Apply.....	28
9.	Connecting and configuring DIO ports.....	29
9.1.	Connecting and configuring sensor.....	29
9.1.1.	Specification.....	29
9.1.2.	Connecting sensor input.....	30
9.1.3.	Configuring Sensor at OSD menu.....	31
9.2.	Connecting & configuring relay out.....	32
9.2.1.	Specifications.....	32
9.2.2.	Connecting Relay Out.....	33
9.2.3.	Configuring relay out as OSD menu.....	34
9.3.	Connecting serial port.....	35
9.3.1.	Configuring Serial ports for Pan/Tilt/Zoom.....	35
9.3.2.	Diagram of serial ports.....	36
9.3.3.	Configuring Serial.....	37
9.4.	Connecting external device with serial port.....	38
9.4.1.	Connecting text inout device (ATM / POS / Access Control).....	38
9.4.2.	Configuring serial setup (COM1) at OSD menu.....	39
9.4.3.	Configuring text.....	40
9.5.	Connecting USB device.....	41
9.6.	Connecting Video in/output.....	42
10.	Connecting External Storage.....	43
10.1.	eSATA port.....	43
10.2.	Connecting eSATA Device.....	43
10.3.	Available HDD.....	44
10.4.	Registering & Formating HDD.....	44
11.	Network monitoring & managing.....	45

11.1.	Connecting Ethernet	45
11.2.	Configuring Network information of HVRM-D800E	46
12.	Using Control Center Lite	47
12.1.	Starting	47
12.1.1.	PC system requirements for running Control Center Lite.....	47
12.2.	Installing Control Center Lite	47
12.3.	Log-In	48
12.4.	Configuration Tool	49
12.5.	Monitor	49
12.6.	Playback.....	50
USER'S GUIDE.....		51
13.	Description	51
13.1.	Front Part	51
13.1.1.	HVRM-D800E front part.....	51
13.2.	Rear Part	53
13.2.1.	HVRM-D800E rear part.....	53
13.3.	Summary of Installation.....	53
Basic Structure.....		54
14.	Monitoring.....	54
14.1.	Basic Screen monitoring	54
14.2.	Single full screen mode.....	54
14.3.	Multi screen mode.....	54
14.4.	Manual Recording.....	55
14.5.	Auto Switch mode.....	55
14.5.1.	System Standard mode	56
14.5.2.	User Sequence mode.....	57
14.6.	Alarm mode.....	58
14.7.	Zoom Screen mode.....	58
14.8.	Pause Live screen.....	58
14.9.	PTZ Control.....	59
14.9.1.	Pan/Tilt Control.....	59
14.9.2.	Zoom/Focus Control	59
14.9.3.	Utilizing Load Preset	59
14.9.4.	Utilizing Save Preset.....	60
14.9.5.	Utilizing Clear Preset	60

14.9.6.	Utilizing Auxiliary On.....	60
14.9.7.	Utilizing Auxiliary Off.....	60
14.10.	Relay control	61
14.11.	Screen Lock control.....	61
14.12.	Bookmark Function.....	62
15.	Playback.....	62
15.1.	Various Playback mode(Playback).....	62
15.1.1.	Playback on standard monitor (full screen)	62
15.1.2.	Playback to divided Channel(4/9).....	62
15.1.3.	Playback channel no. 5~8 at 4/9 channel division	62
15.1.4.	Zoon Playback screen	62
15.1.5.	Various Playback functions.....	63
15.2.	Search mode	64
15.3.	Copy / Backup / Delete	65
15.3.1.	Copy Image.....	65
15.3.2.	Backup Data.....	66
15.3.3.	Delete Data	67
16.	Configuration.....	67
16.1.	Quick Setup.....	67
16.1.1.	Tim Set(Date/Time)	67
16.1.2.	Recording Setup	70
16.2.	Camera Setup.....	72
16.3.	Manual Recording setup	75
16.4.	Schedule Recording Setup.....	76
16.4.1.	Global Setup	76
16.4.2.	Setup by Channel.....	77
16.5.	Alarm Recording Setup.....	80
16.5.1.	Sensor Setup	80
16.5.2.	Motion Detection Setup.....	81
16.5.3.	Text Setup.....	84
16.5.4.	Global Alarm Recording.....	86
16.5.5.	Setup by Channel.....	87
16.6.	Alarm Action Setup.....	89
16.6.1.	Schedule	89
16.6.2.	Setup	90
16.6.3.	System Alarm.....	91

16.7.	Monitor Setup	93
16.8.	System Setup	94
16.8.1.	Audio Setup	94
16.8.2.	Time Schedule Setup	95
16.8.3.	Special Time	96
16.8.4.	Security Setup	97
16.8.5.	Disk Setup	99
16.8.6.	Network Setup.....	100
16.8.7.	Serial Setup.....	105
16.8.8.	Status Overview	106
16.8.9.	Miscellaneous	107
16.9.	Disk Manager (Utility).....	109
16.9.1.	Disk Manager.....	110
16.9.2.	USB Utility.....	112
17.	Web Viewer	114
17.1.	Login	114
17.1.	User Connection setup.....	114
17.2.	Usable Browser.....	116
17.3.	Monitor	118
17.3.1.	Screen division & Change of video location.....	118
17.3.2.	Change to Resolution	120
17.3.3.	Change of Frame Rate.....	120
17.3.4.	Moving Playback.....	121
17.3.5.	Channel On/Off.....	121
17.3.6.	Sensor Indication.....	121
17.3.7.	Relay Operation.....	122
17.3.8.	Using Microphone	122
17.3.9.	Event data	123
17.3.10.	Video Recording & recording Pause Video.....	123
17.3.11.	Using PTZ.....	124
17.3.12.	Using Audio	126
17.3.13.	Closing Video Channel.....	126
17.4.	Playback.....	127
17.4.1.	Video Division & Changing Channel.....	127
17.4.2.	Image recording.....	128
17.4.3.	Printing.....	129
17.4.4.	Backup	129

17.4.5.	Web Monitor	130
17.4.6.	Channel On/Off.....	130
17.4.7.	Saving time & Checking Rec. Capacity	131
17.4.8.	Searching Calander	131
17.4.9.	Functional function at the buttom of monitor.....	131
Extension	133
18.	External device connection.....	133
18.1.	Using Text device.....	133
18.1.1.	Setup in Text	133
18.1.2.	Setup in RS232 menu of Serial Setup	134
18.1.3.	Setup in Alarm Rec	135
18.1.4.	Setup in Recording	136
18.2.	Using Keyboard	137
18.2.1.	Setup in COM1 menu of Serial Setup	137
18.2.2.	Setup in PTZ menu of Serial Setup.....	137
APPENDIX	138
#1.	HDD	139
#1.1.	Fundamental notions & terms.....	139
#2.	Specification	142

INSTALLATION GUIDE

OVERVIEW

1. Introduction

HVRM Series is new conceptual HVRM-D800E (Digital Video Recorder), which can record 8ch analog video channel, Audio, Text & Alarm data etc simultaneously. Also, it upgrades video quality and file size applying MPEG algorithm.

Quick Setup menu in HVRM Series makes possible to direct recording by only connection between Power & CCTV video. Quick Setup menu is programmed to optimize video quality and recording performance.

Also, HVRM Series can extend the storage to maximum 8TB through eSATA. For easy backup, it is easy to apply through user PC for HDD backup by FAT32 which is main Windows format type. Through 1 USB port, F/W upgrading and saving & retrieving setting value and copy smaller size images is available.

HVRM Series offers with Control Center Lite-D software. Control Center Lite-D S/W makes available for easy setup, saving, playback via remote PC.






Main features

- It supports 8ch video
- Supports 1 ch bi-directional audio
- Supports recording, playback, network recording, network playback simultaneously (Pentaplex)
- Max. CIF, 480(NTSC) / 400(PAL) ips¹ recording speed
- Max. 480(HVRM-D800E) ips real-time display speed
- Real time video surveillance and recording via PC monitor & CCTV monitor
- Support 1 VGA monitor
- Internal software multiplexer for 8channel division monitoring
(1 / 4 / 9 channel mode)
- Max. 8TB storage (External HDD expansion via eSATA)
- Various Recording & playback
- Independent file system for effective alarm data management
- Recording text data from ATM/POS in relevant to video data
- 8 sensor input & 4 alarm output
- MD searching (330 different specified MD area set, when Control Center operates)
- Text Searching (when Control Center operates)
- Internal CD/DVD Writer backup
- PTZ control through RS485
- 32bit True Color graphic OSD menu for easy to use (Support Anti-Flicker)
- Support Static IP and DHCP, dynamic IP and xDSL, cable modem user
- Apply embedded Linux OS for reliability and efficiency
- Support Remote controller
- Firmware upgrading, Setup, retrieving through USB memory device
- Digital Water Mark
- Register max. 16 units HVRM-D800E to Control Center Lite-D (PC user interfacer)
[Total 128 channel managements (16 HVRM-D800E x 8ch) through one S/W program]

¹ ips = image per second


2. Supplied accessories

Unpack and check all the items as below;
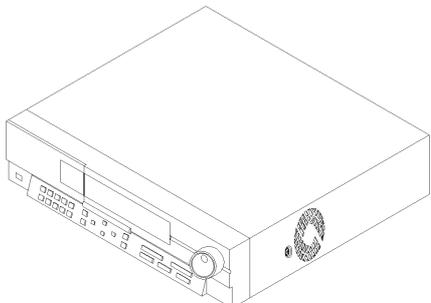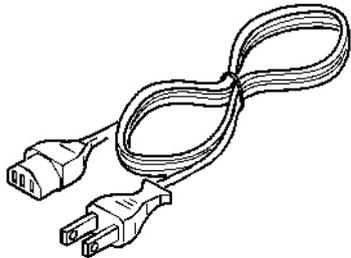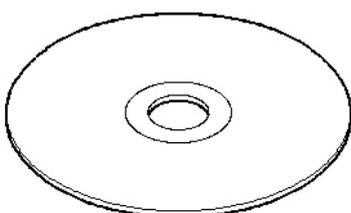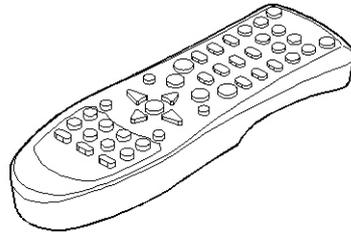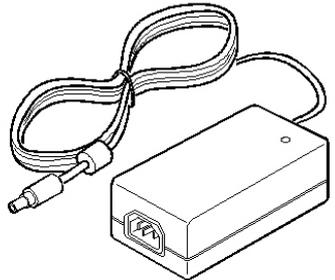
<p>1. HVRM-D800E (1EA)</p> 	<p>2. AC Power Cord (1EA)</p> 
<p>3. CD (Including Software) (1EA)</p> 	<p>4. Remote Controller (1EA)</p> 
<p>5. Power (applied adaptor) (1EA)</p> 	


3. Description & Function

HVRM-D800E front

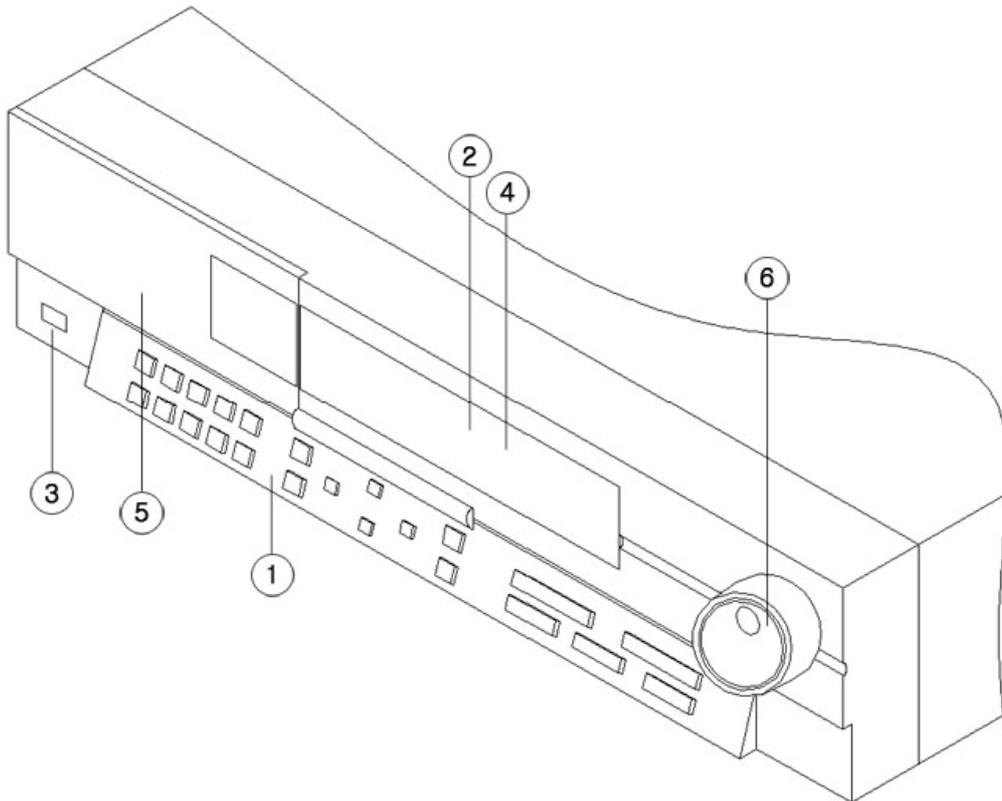

- (1) Function buttons
- (2) LED
- (3) USB port
- (4) Remote controller receiver
- (5) CD/DVD-RW
- (6) Shuttle

HVRM-D800E rear

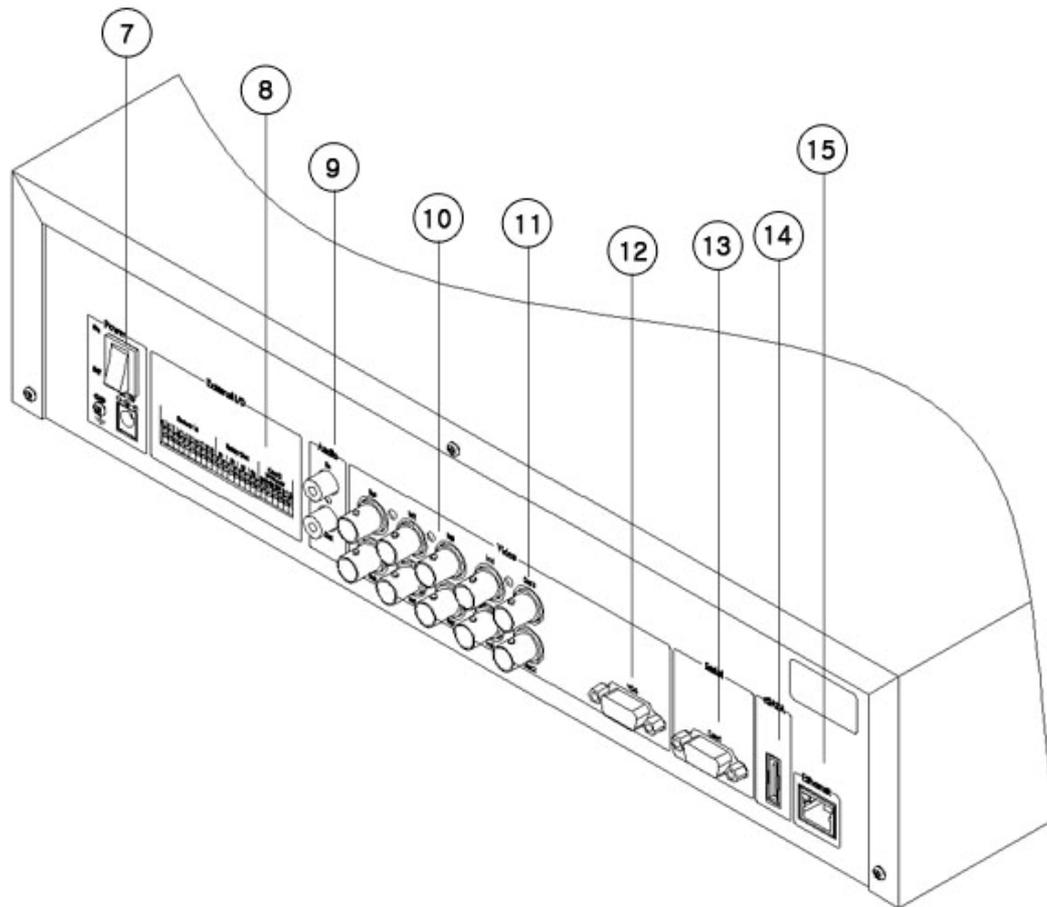


- (7) power connector
- (8) Terminal block for sensor, relay, and serial input/output
- (9) Audio input/ output connector
- (10) BNC connector for video input
- (11) BNC connector for video output
- (12) VGA connector for video output
- (13) Serial input/output
- (14) eSATA connector
- (15) Ethernet connector

INSTALLATION AND CONNECTION

4. Connecting & Running

4.1. Connecting camera

- (1) Connect CCTV camera to HVRM-D800E with BNC cable as below.

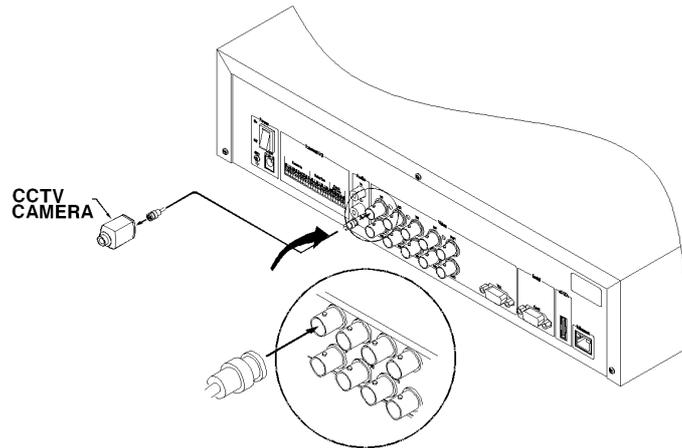


<Note>

1. The video type for all channels should be either NTSC or PAL, not be combined both.
2. HVRM-D800E sets video signal's impedance (75Ω) automatically.
Impedance is set as 75Ω basically. If connecting a device to video output, impedance will be "Hi-z" status. Please refer to "9.6 connecting Video In/Output" on page 12
3. Video Type (NTSC/PAL) should be changed after opening HVRM-D800E. The order of camera recognition follows Ch1 camera through Ch8 camera and 1st recognized camera type leads other camera type.


4.2. Connecting monitor

(1) Connect CCTV monitor to HVRM-D800E with BNC cable as shown below;

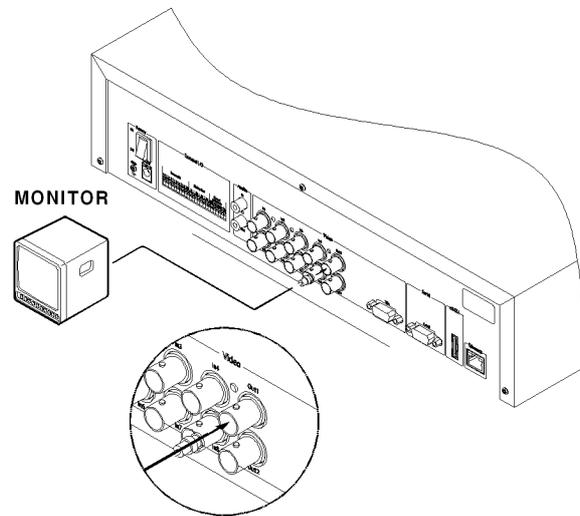


4.3. Audio Connection

(1) Connect auto signal to HVRM-D800E with using RCA cable.

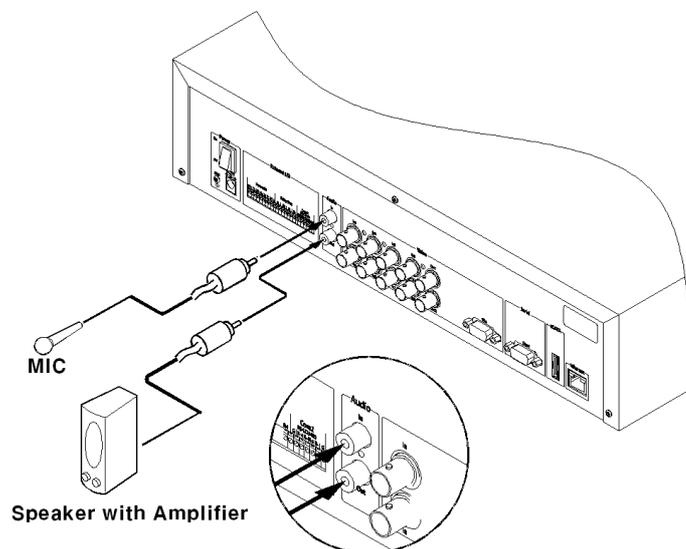


4.4. Power Supply

(1) Connect power cable as shown below

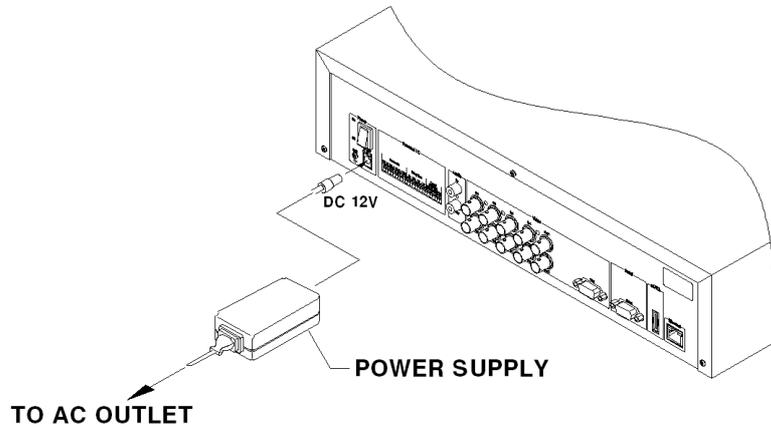

<Note>


1. When supplying power, HVRM-D800E starts booting automatically.
2. In order to cut off power, press the power switch on HVRM-D800E front during 4 seconds and enter admin password after appearing a pop window.
3. For power supply again, push the power switch.

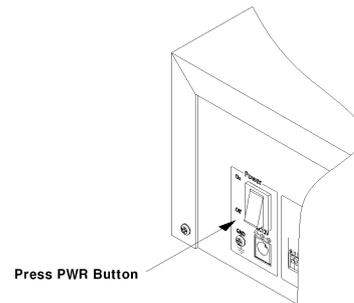

5. Running OSD menu

5.1. Structure of Menu

Press the [MENU] in keypad of front to open the OSD Configuration Menu

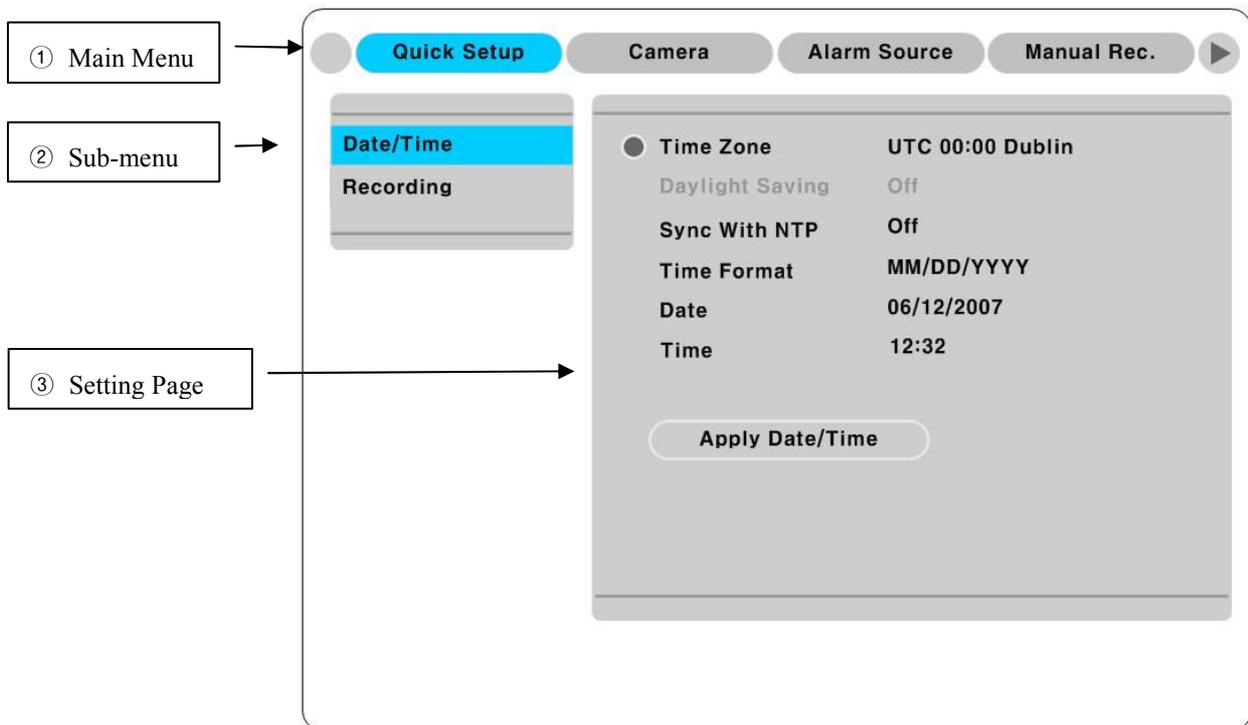


(1) **Main Menu** : The selected tab is shown in blue and the related sub-menu will be shown below the tab. To move to the previous/next Main Menu tab, use the [◀/▶] arrow buttons. To move to a sub-menu, press the [▷]/[▼] arrow buttons.

(2) **Sub-menu** : The selected sub-menu is shown in blue and the related setting will be shown to the right of the sub-menu. Use the [▲/▼] arrow buttons to move within the sub-menu list. To move to the setting page, press [▷] button. To exit the setting page, press the [EXIT] button.

(3) **Setting Page** : The selected sub-menu is shown as a circle on the left side of the name and gray color for setting value. To move within each page, use the [◀/▶] or [▲/▼] arrow buttons. Press the [▷] button to change the value of a setting. When setting value is a word, a dialogue box to edit the word will open. When setting value is a number, it should be set with using [◀/▶] or [▲/▼] arrow buttons. After the value is set, press the [EXIT] button. To exit the Setting page, press the [EXIT] button.

5.2. Dialogue box to edit a word

There are two methods to input a word..

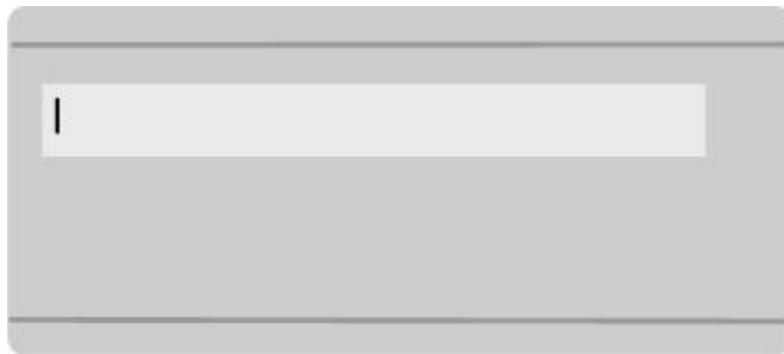

(1) Entering words

Move pressing [▶] arrow button to enter next word until the word is looking for is shown using [▲/▼] arrow buttons. In case of spacing words, press [▶] to move one space and enter the word. To exit the Dialogue box, press the [▷] arrow button.

(2) Available words range to use

1 2 3 4 5 6 7 8 9 0

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z


a b c d e f g h i j k l m n o p q r s t u v w x y z

() - . \$ # @

6. Setting remote controller

When controlling several HVRM-D800Es with one remote controller, set Remote Control ID as follows.

6.1. Setting ID of HVRM-D800E

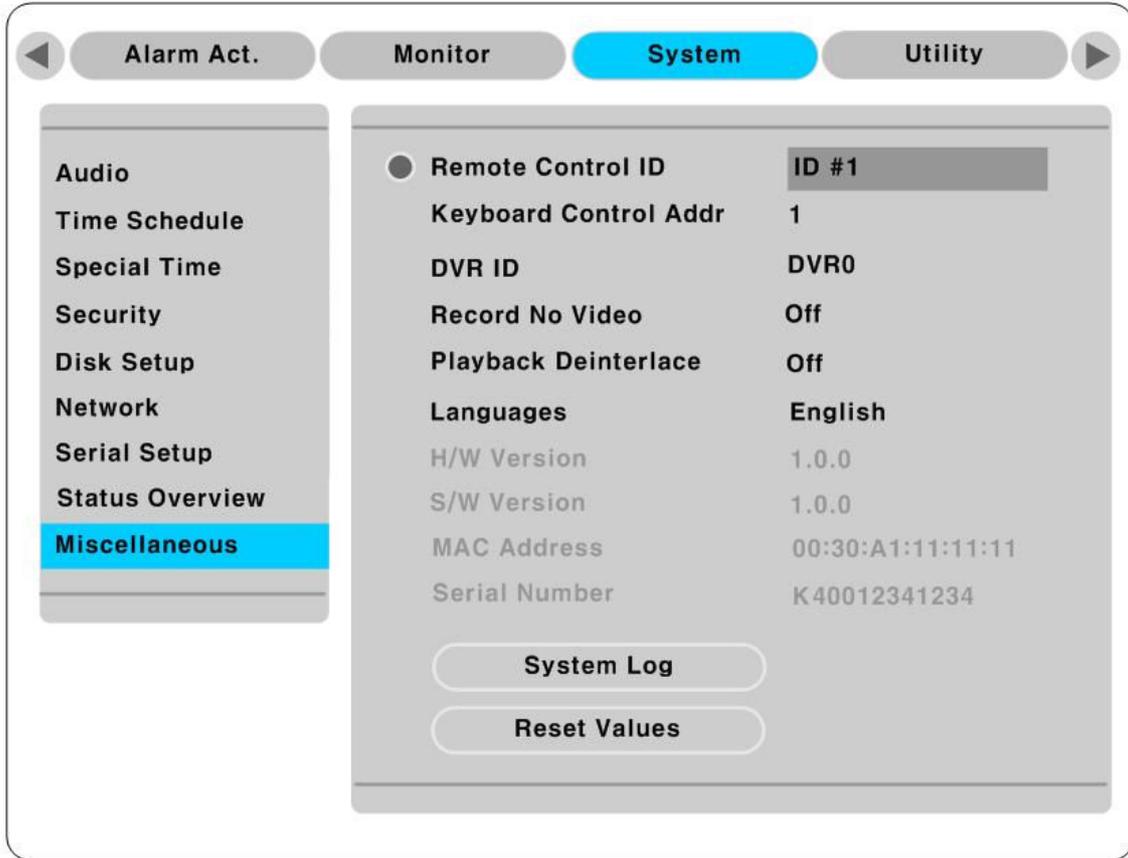

- (1) Press the [MENU] button
- (2) Select “System” with using [▶] button and press the [▷] or [▼] button
- (3) Select “Miscellaneous” from the sub-menu list using the button [▼] and press [▷] button.
- (4) Select “Remote Control ID” and press the [▷].
- (5) Select a value using the [◀/▶] buttons and press the [EXIT] button.
- (6) Press the [EXIT] button to exit the Settings Page and return to Monitor mode.

<Note> Remote Control ID


Up to 16 HVRM-D800Es can be controlled with a single remote controller.

When not using remote controller, set the Remote Control ID as “Off”.

6.2. Selecting HVRM-D800E

If several HVRM-D800Es are set with unique ID numbers, they can be controlled with one remote controller. To select a specific HVRM-D800E, Keep pressing the ID button of remote controller until a buzzer sounds during 2 seconds.

Press repeatedly
till to select eDVR
that you want

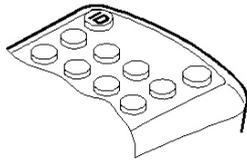


Remote Controller

Unselected	 PWR NET REC PLAY	
Selected	 PWR * NET * REC * PLAY	 LED Blink One Time

<Note>

Because remote controller ID is sixteen, HVRM-D800E will correspond until pressing ID button sixteen times.


6.3. Operable range of remote controller

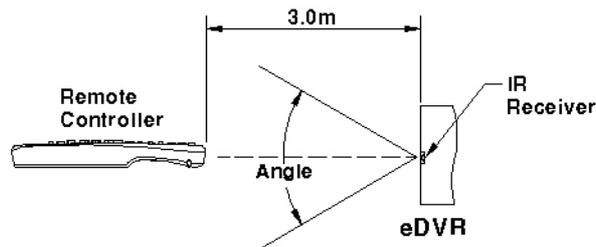


Horizontal Angle : $\pm 45^\circ$
Vertical Angle : $\pm 60^\circ$

6.4. Loading the batteries into remote controller


Remote Controller requires two AAA-type batteries

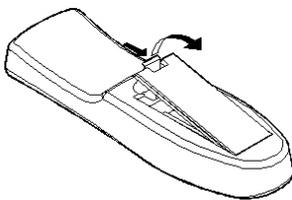

1. Remove the battery cover

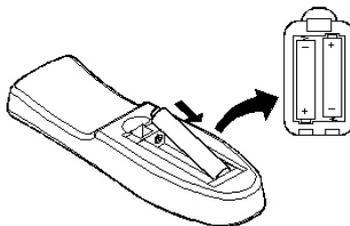

2. Taking care that the poles(+/-)
Are correctly positioned.

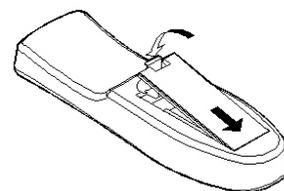


3. Replace the battery cover

<Note>


Batteries are not included as a packing accessory

7. HVRM-D800E configuration


7.1. Basic Configuration

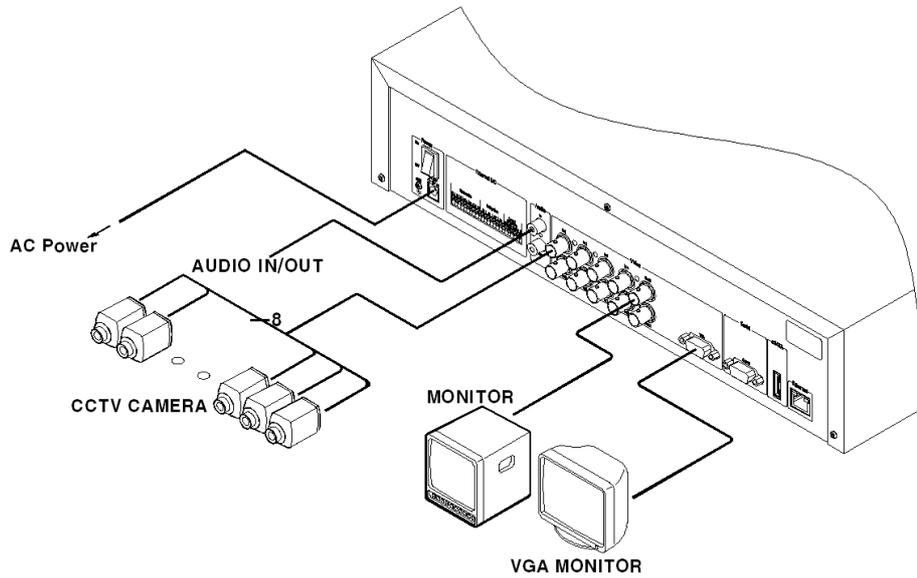


7.2. Advanced configuration

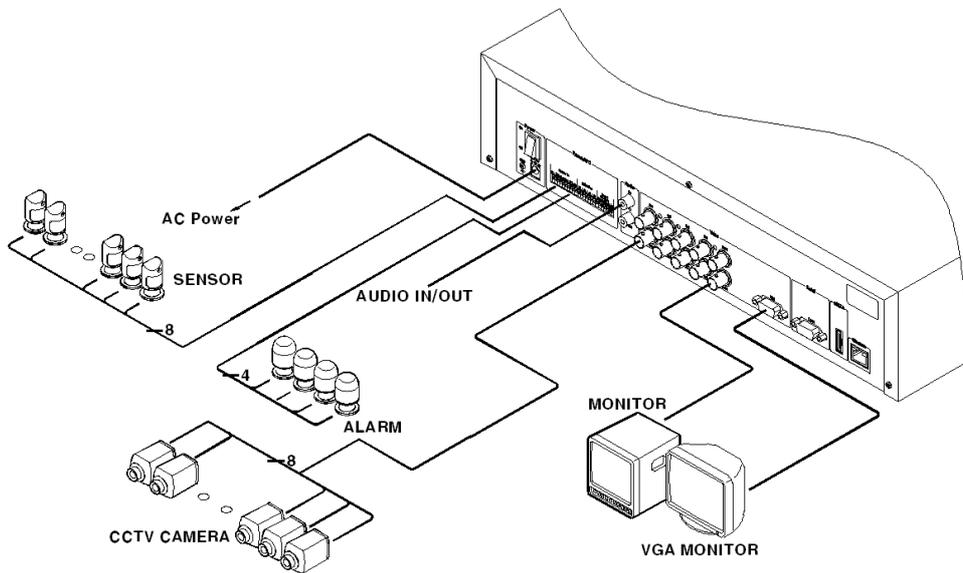

7.3. External storage & Back up configuration

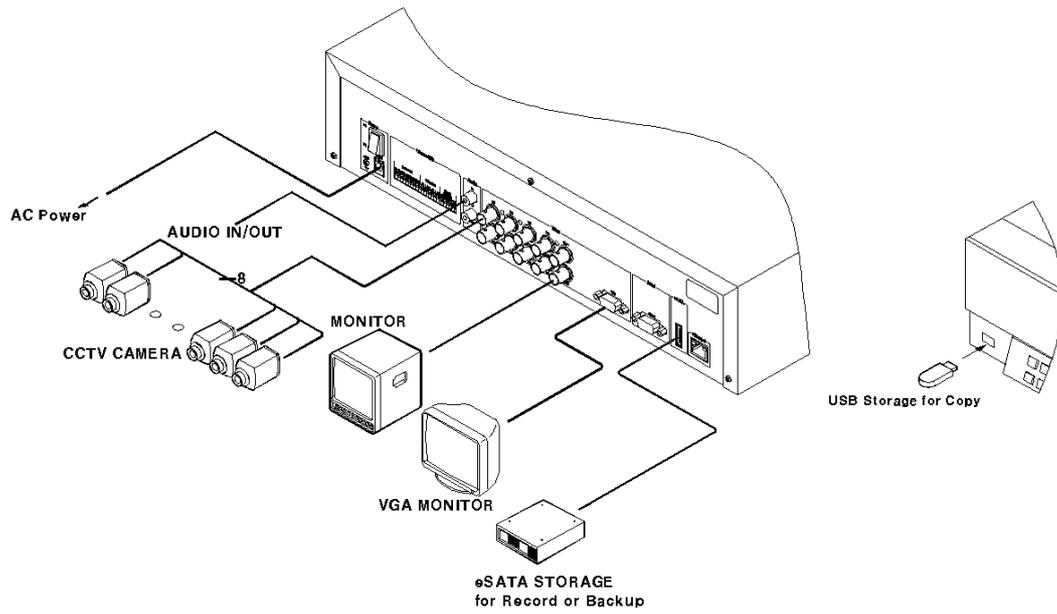

7.4. Internet/ Intranet configuration

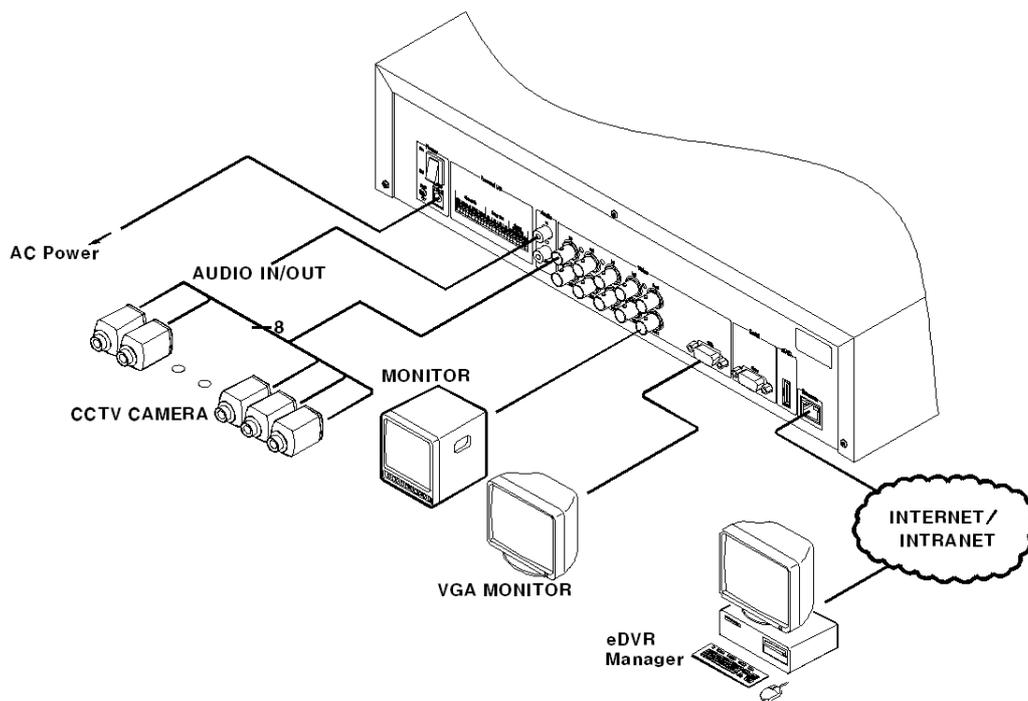

8. HVRM-D800E basic setting

8.1. Viewing Image


When power is on, HVRM-D800E starts automatically and images are displayed in basic 9division screen after the booting.

<Note>

If user password is set, a prompt for entering the password will appear. Factory default is reserved as not responding key pad on HVRM-D800E front (It is not set from factory default)



8.2. Setting Date & Time

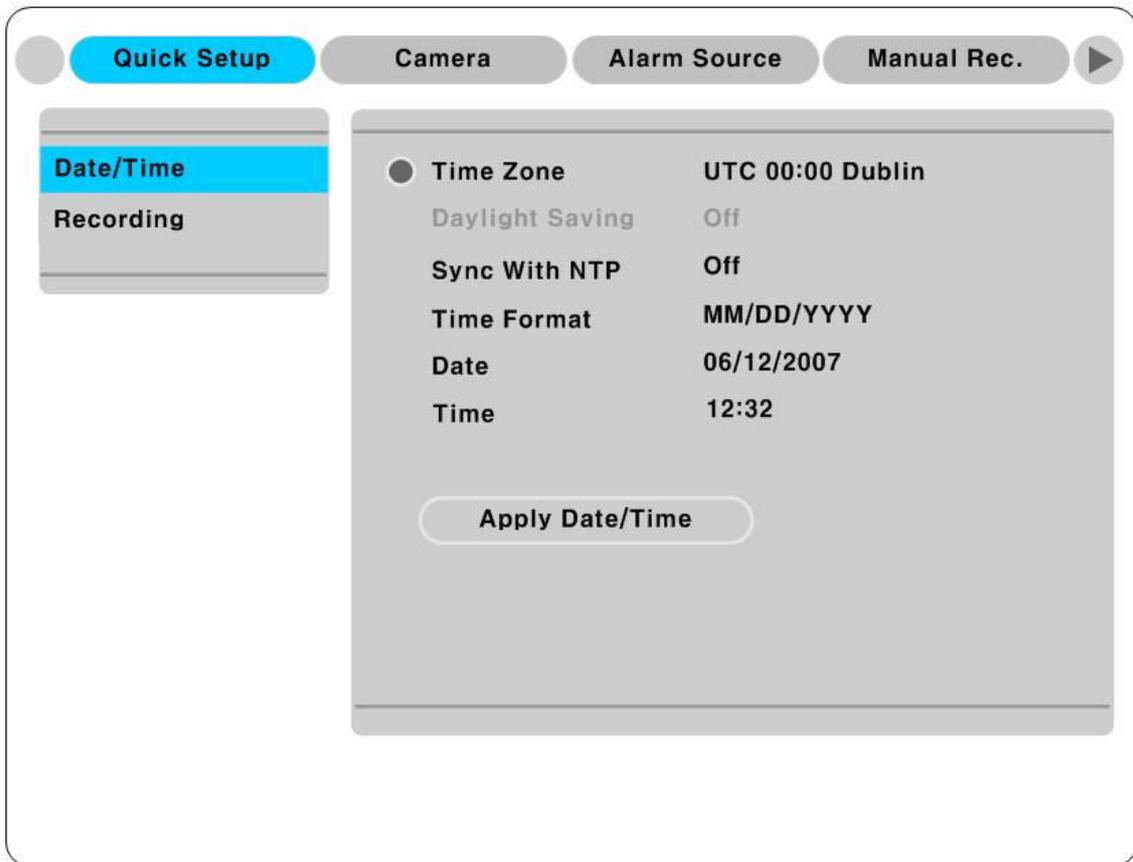

- (1) Press [MENU] button and select “Quick Setup” tab.
- (2) Select “Date/Time” using the [▷] or [▼] and press [EXIT] button.

8.2.1. Time Zone

- (1) Select “Time Zone” using the [◀/▶] or [▲/▼] button and press [▷] to configure.
- (2) Select Time Zone using the [◀/▶] button and press [EXIT].

8.2.2. Daylight Saving

- (1) Daylight Saving Time is only activated for Time Zone that uses Daylight Savings.
- (2) Select “Daylight Saving” using the [◀/▶] or [▲/▼] button and press [▷] button.
- (3) [◀/▶] Select On/Off using the [◀/▶] and press [EXIT].

8.2.3. Sync with NTP

In order to synchronize time with NTP (Network Time Protocol) server, select “on”.

- (1) Select “Sync with NTP” using the [◀/▶] or [▲/▼] button and press [▷] button.
- (2) Select On/Off using the [◀/▶] button and press the [EXIT] button.

8.2.4. Time Format

- (1) Select “Time Format” using the [◀/▶] or [▲/▼] button and press [▷] button..
- (2) Two time formats are available; ‘DD/MM/YYYY’, ‘MM/DD/YYYY’, ‘YYYY/MM/DD’; Select a value using [▲/▼] buttons and press the [EXIT] button when it is finished. (Factory default is set as ‘MM/DD/YYYY’)

8.2.5. Date

- (1) Select “Date” using the [◀/▶] or the [▲/▼] buttons and press [▷]. Select ‘MM’, ‘DD’, ‘YYYY’ using the [◀/▶] buttons.
- (2) Press the [EXIT] button when setting is finished.

8.2.6. Time

- (1) Select “Time” using the [◀/▶] or [▲/▼] buttons and press [▷].
- (2) Select ‘HH’, ‘MM’ using the [◀/▶] buttons, and select the value using the [▲/▼] button.
- (3) Press the [EXIT] button when setting is finished.

8.2.7. Apply Date/Time


Most setting values are applied automatically, when exiting from the related menu page. But “Date” & “Time” setting are not applied automatically because they may critically affect the file system of the recorded HDD. To apply Date/ Time settings confirm with [Apply Date/ Time] buttons.

- (1) Select “Apply Date/time” using the [◀/▶] or [▲/▼] buttons and press [▷]. A warning message will be appeared will be appeared as below;
- (2) Select “OK” using [◀/▶] or [▲/▼] buttons and press [ENTER] button. To cancel, press the [EXIT] button.



8.3. Setting recording condition

Recording conditions under the “Quick Setup” menu tab apply the same values to all analog channels 1~8. All settings are applied for 24 hours/ day regardless of the value set for “Time Schedule” or “Alarm Rec.”

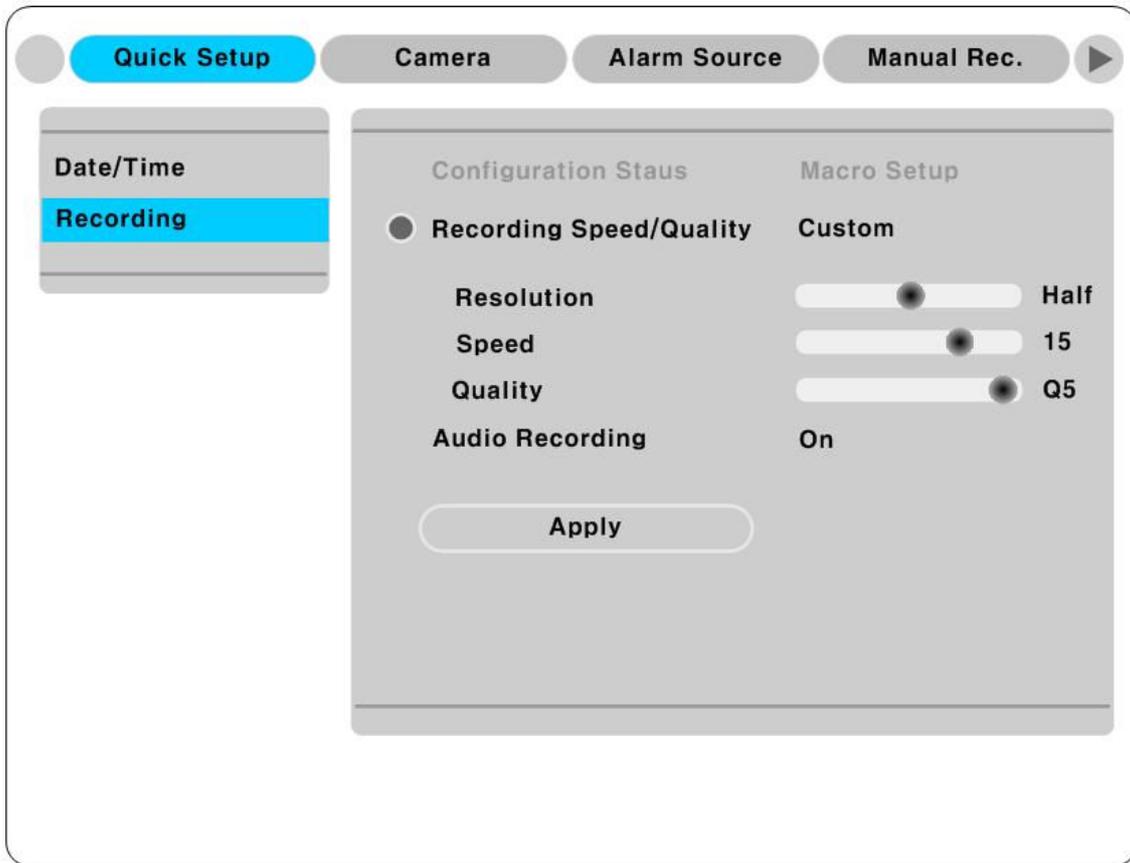

- (1) Press [MENU] button and select “Quick Setup” when OSD menu is shown.
- (2) Move to sub-menu by pressing [▷] or [▼] button.
- (3) Select “Recording” using the [▲/▼] buttons and press [▷].

8.3.1. Configuration Status

Displays the recording configuration status. When setting through the “Quick Setup” menu, “Quick Setup” will be shown. When setting up through “Normal Rec,” or “Alarm Rec,” “Custom Setup” will be shown.

<Note>

Only when normal recording of all channels are same, it is marked as ‘Macro Setup’.

8.3.2. Recording Speed/Quality

- (1) Select “Recording Speed/ Quality using [▲/▼] buttons and press [▷].
- (2) Select a value using the[◀/▶] button. Press the [EXIT] button when it is finished.

8.3.3. Speed(ips)

When “Recording Speed/Quality” is set as” Custom”, values can be set manually.

- (1) Select “Speed” using the [▲/▼] button and press [▷].
- (2) Select a value using the [◀/▶] button. Press the [EXIT] button when it is finished.

8.3.4. Quality

When “Recording Speed/Quality” is set as “Custom”, values can be set normally.

- (1) Select “Quality” using the[▲/▼] button and press [▷].
- (2) Select a value using the [◀/▶] button. Press [EXIT] button when it is finished.

8.3.5. Audio Recording

- (1) Select “Audio Recording” using the[▲/▼] buttons and press [▷].
- (2) Select a value using the[◀/▶] button and press [EXIT] button when it is finished.

8.3.6. Alarm Recording

- (1) Select “Alarm Recording” using the[▲/▼] buttons and press [▷].
- (2) Select a value using the[◀/▶] button and press [EXIT] button when it is finished.

8.3.7. Apply


- (1) Select “Apply” using [▲/▼] buttons and press [▷].
- (2) Setting values are applied and the previous menu will be displayed.

9. Connecting and configuring DIO ports

<Note> Wire Handling

Trimming Wire

When connecting a wire to a terminal block, follow the instructions below. Note the different types of wire that can be used.

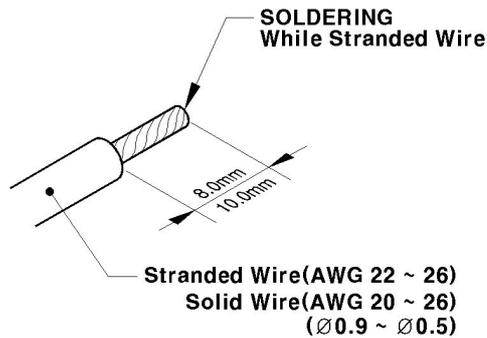


Standard Wire : Peel off the wiring, cover 8~10mm and solder it. Wire gage should be AWG 22~26.

Solid Wire : Peel off the wiring cover 8~10mm and solder it. Wire gage should be AWG 20~26

Inserting & removing wire

To insert & remove wire in TERMINAL BLOCK, use a screwdriver in the diagram to the right.

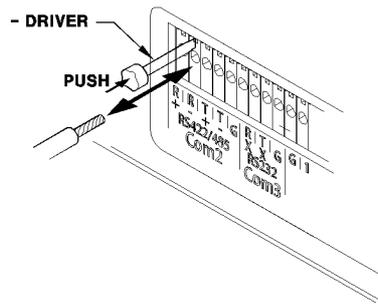

9.1. Connecting and configuring sensor



9.1.1. Specification

In order to run sensor input of HVRM-D800E normally, the following conditions are required.

Spec.	Input Ch.	8Ch Transister inputs
	Input type	N.C (Normal Close)/ N.O. (Normal Open) type.
	Supported sensor	Dry contact sensor
	Connecting	Connecting the trimmed wire to terminal block
Performance	Available input pulse range	Min. 500ms
	Output current	Typical DC 12mA

9.1.2. Connecting sensor input

Connect S1 ~ S8 with referring to the followings. It shows to connect a dry contact (Please refer to “<Note> *Wire Handling*” on page 27). When connecting a non-dry contact type of sensor (e.g. Open collector output) please contact HUNT ELECTRONIC USA INC. customer Support team.

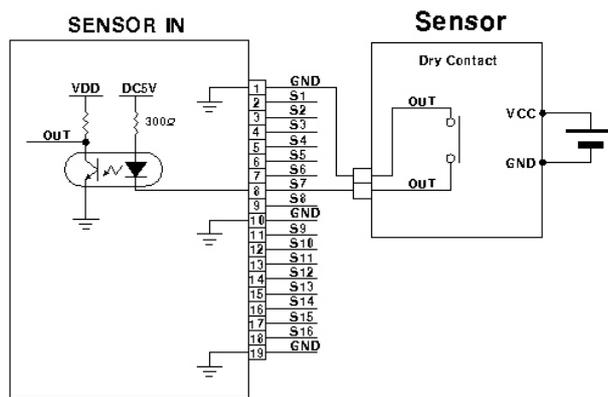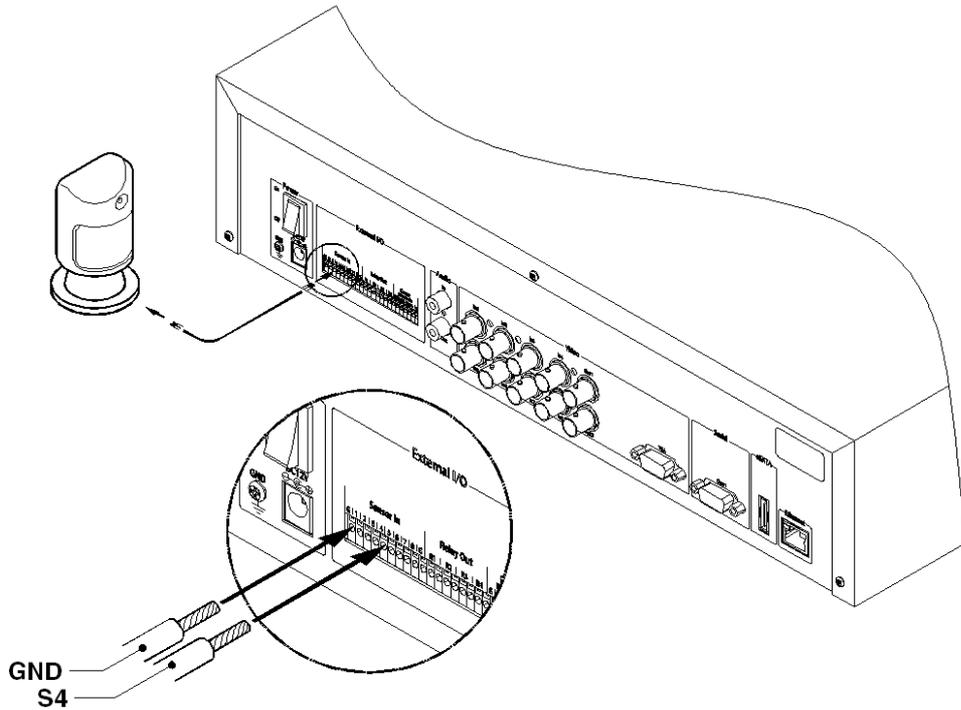

9.1.3. Configuring Sensor at OSD menu



- (1) Press the [Menu] button and select “Alarm Source”.
- (2) Press [▷] or [▼] button to move to Sub-Menu, select “Sensor” and press [▷].

9.1.3.1. Global

Use when selecting all 8 sensors simultaneously, which can be selected as “Do not use”(Off). “Normal Open” (N.O), and “Normal Close” (N.C.).

- (1) Select a “Global” and set a type as Off, N.O. or N.C...
- (2) Press “Apply” to save a configuration

9.1.3.2. Configuration

Use when selecting each 8 sensor individually.

- (1) Select a “Configuration” and press [▷].
- (2) Select a sensor (S1 ~ S8) and set a type.
- (3) Press [Exit] to out from OSD Menu.

<Note>

1. Configuration a sensor is to set On/Off usage and type.
2. Please refer to “Alarm Rec” for saving and “Alarm Act” for relay-out on the “*User’s Guide*”

9.2. Connecting & configuring relay out



9.2.1. Specifications

In order to run relay output of HVRM-D800E normally, the following conditions are required.


Spec.	Output Ch.	4Ch relay differential outptus
	Output type	Dry Contact
	Connecting type	Connect the trimmed wire to terminal block
Performance	DC	30V 1A
	AC	125V 0.5A

9.2.2. Connecting Relay Out

Connect R1 ~ R4 with referring to the followings, It shows how to connect a Warning light. Please refer to “<Note> *Wire Handling*” on page 25.

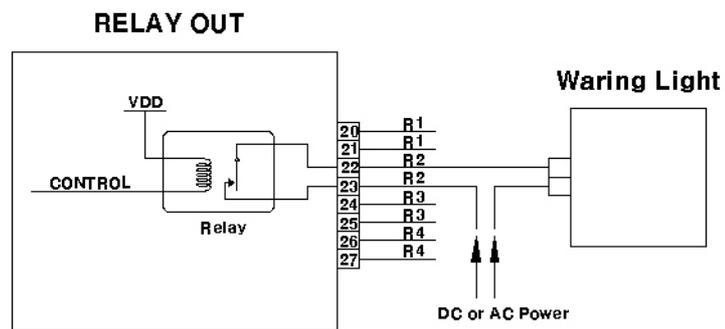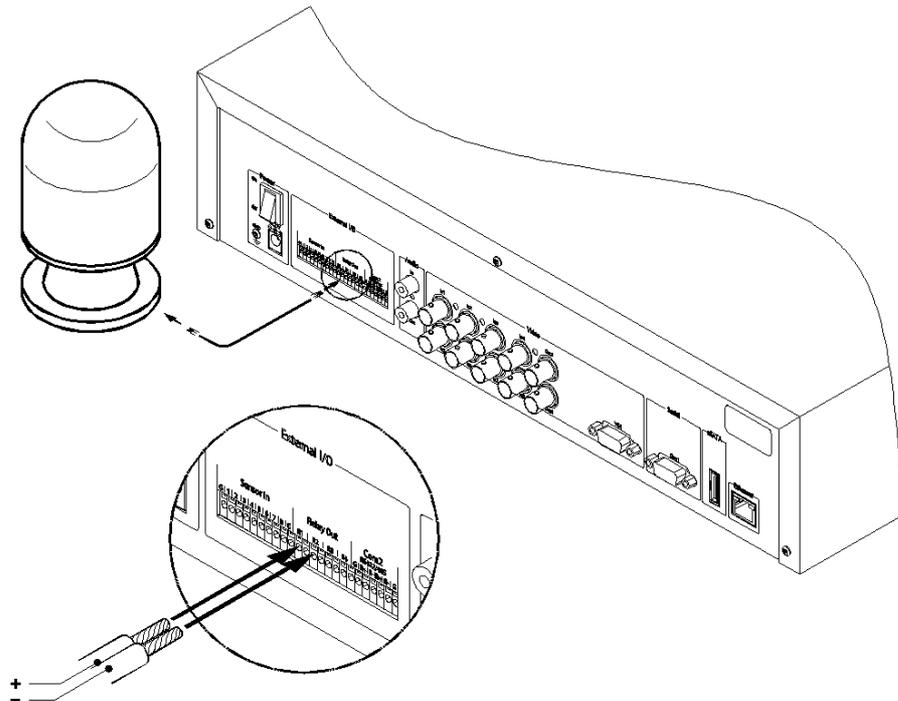

9.2.3. Configuring relay out as OSD menu.

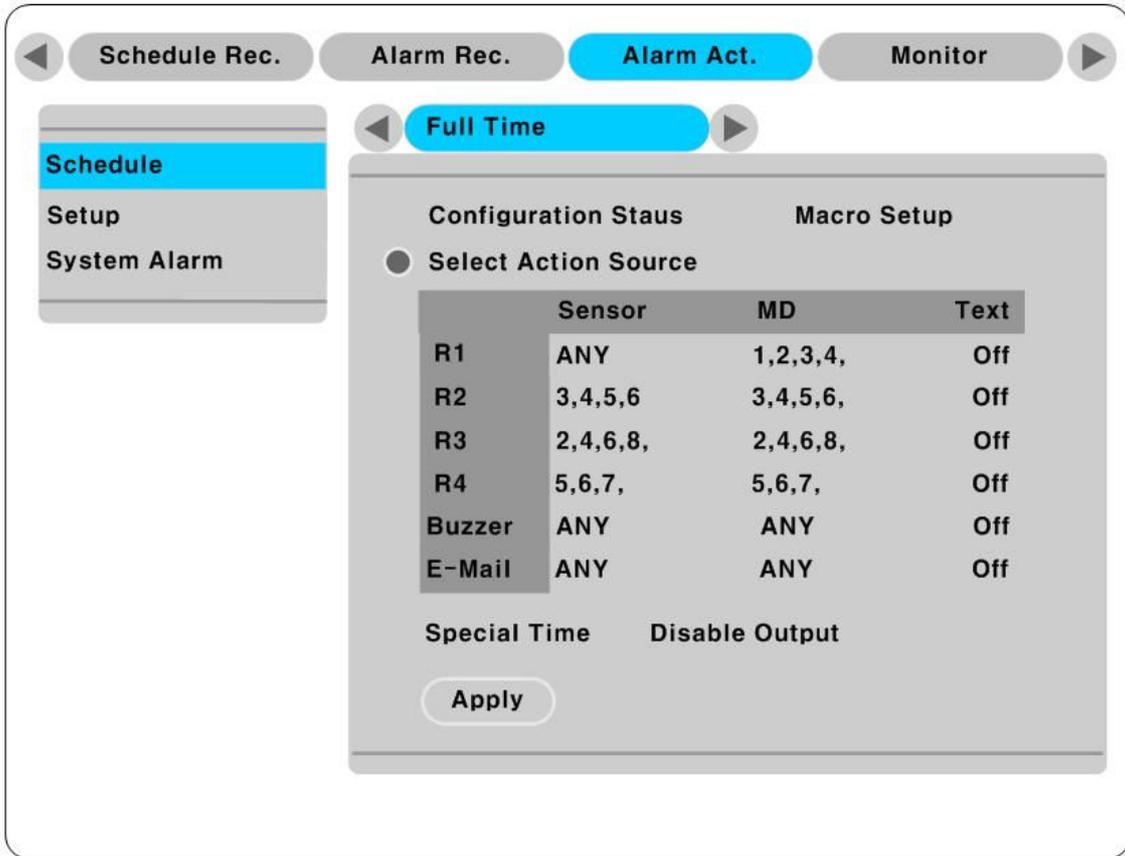

Relay can run by sensor or MD and its condition can be set differently according to schedule. When using the [Relay] button + [Number] button on the front panel or Control Center Lite-D S/W, relay can be operated from remote site.

<Note>

Please refer to the *“User’s Guide”* for more information.


9.3. Connecting serial port

9.3.1. Configuring Serial ports for Pan/Tilt/Zoom

The HVRM-D800E have most major PTZ protocols already pre-programmed. Makes and models not supported can still be controlled using the Transparent Protocol. For a list of supported protocols, refer to the list on the OSD Configuration menu.


The following figure shows how to connect PTZ camera to RS485 (COM2). When using another serial port, connect it with referring to each connection diagram below.

Please refer to the “<Note> *Wire Handling*” on page 27.

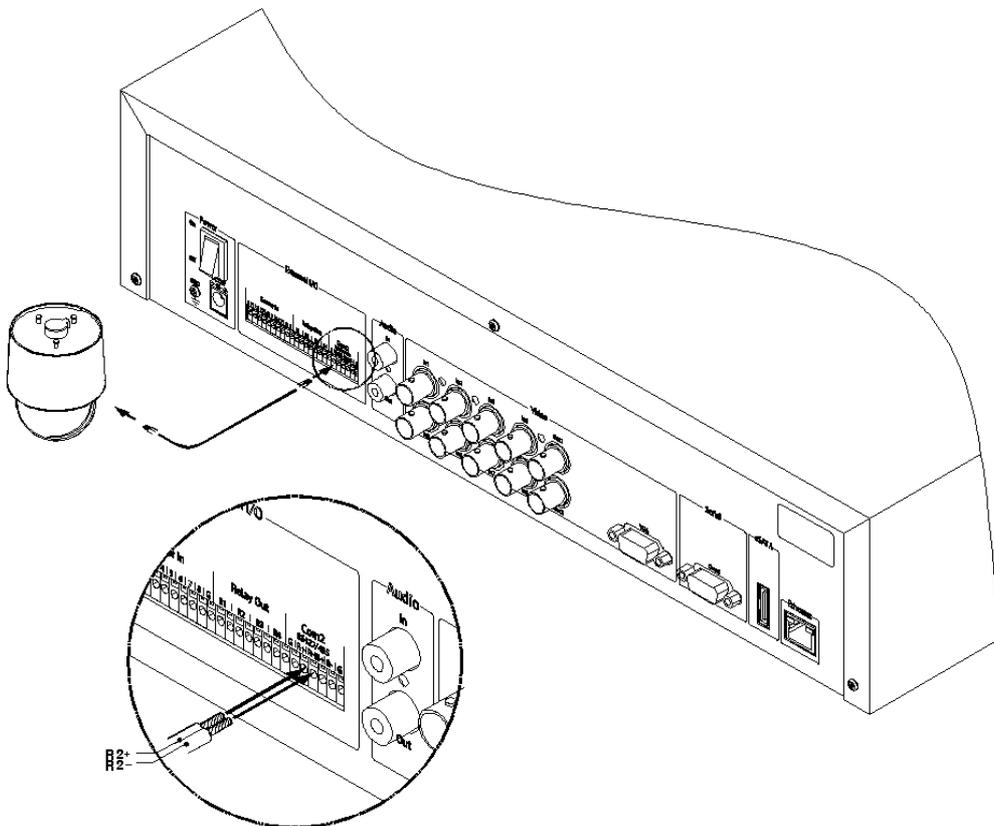


9.3.2. Diagram of serial ports


9.3.2.1. Diagram of COM1 (RS232)

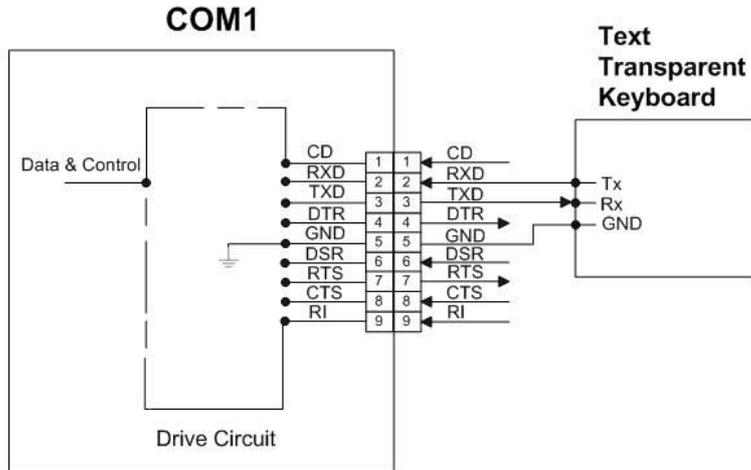

9.3.2.2. Diagram of COM2 (RS485)

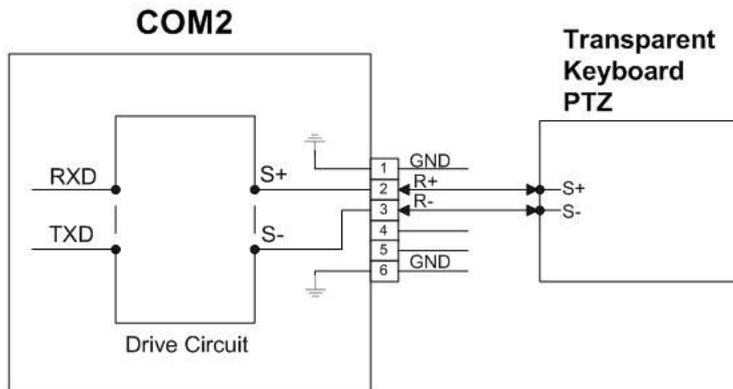


9.3.2.3. Diagram of COM3 (RS485)

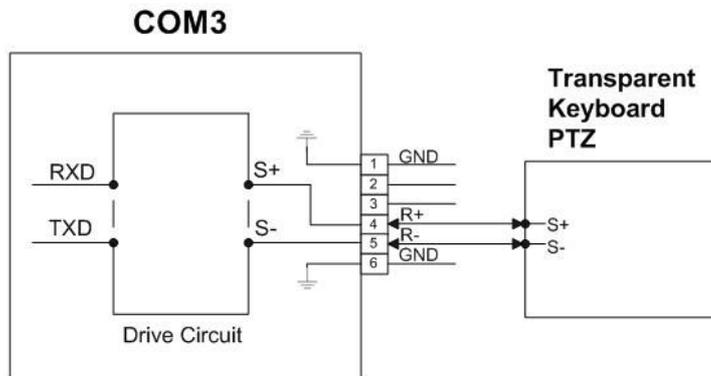


9.3.3. Configuring Serial

Configure PTZ COM ports and available models at “System/ Serial Setup” in HVRM-D800E.

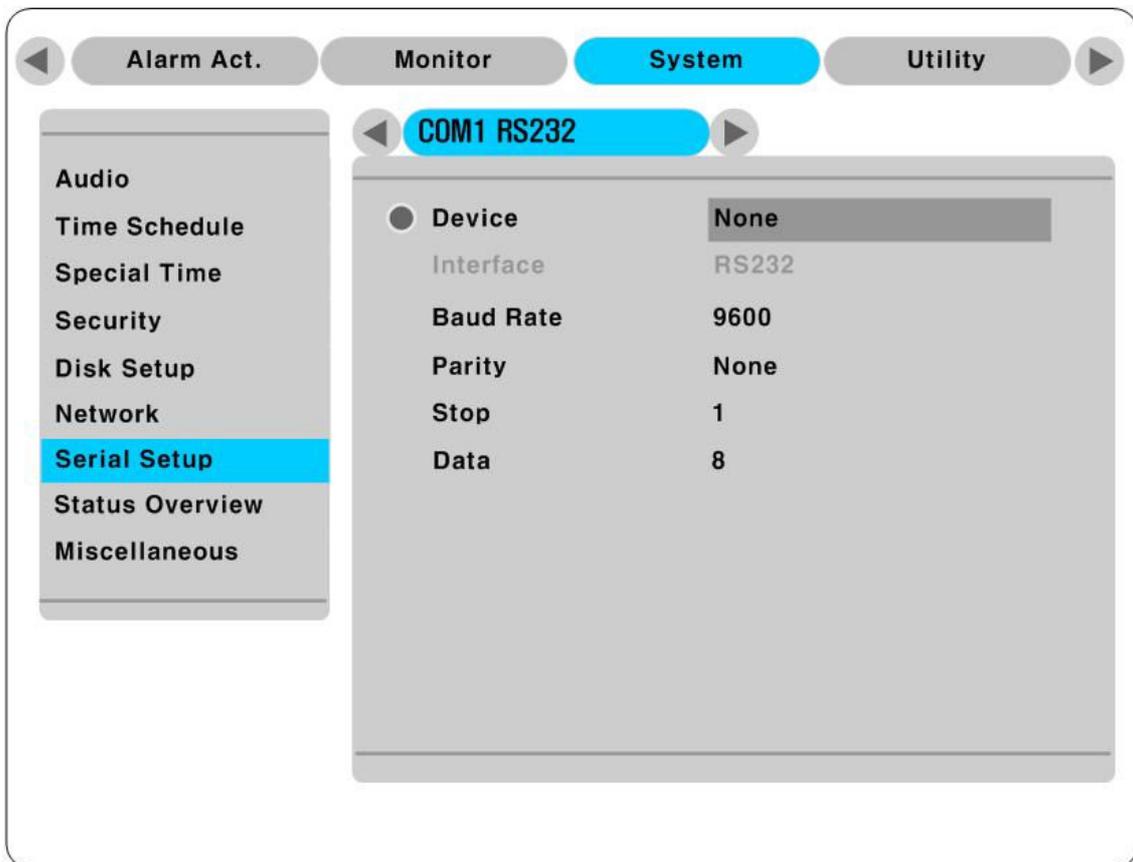


After completing serial setup, configure base address or port for each channel at “Camera menu” tab. When connecting PTZ devices to several cameras, be sure base address matches address for the camera.

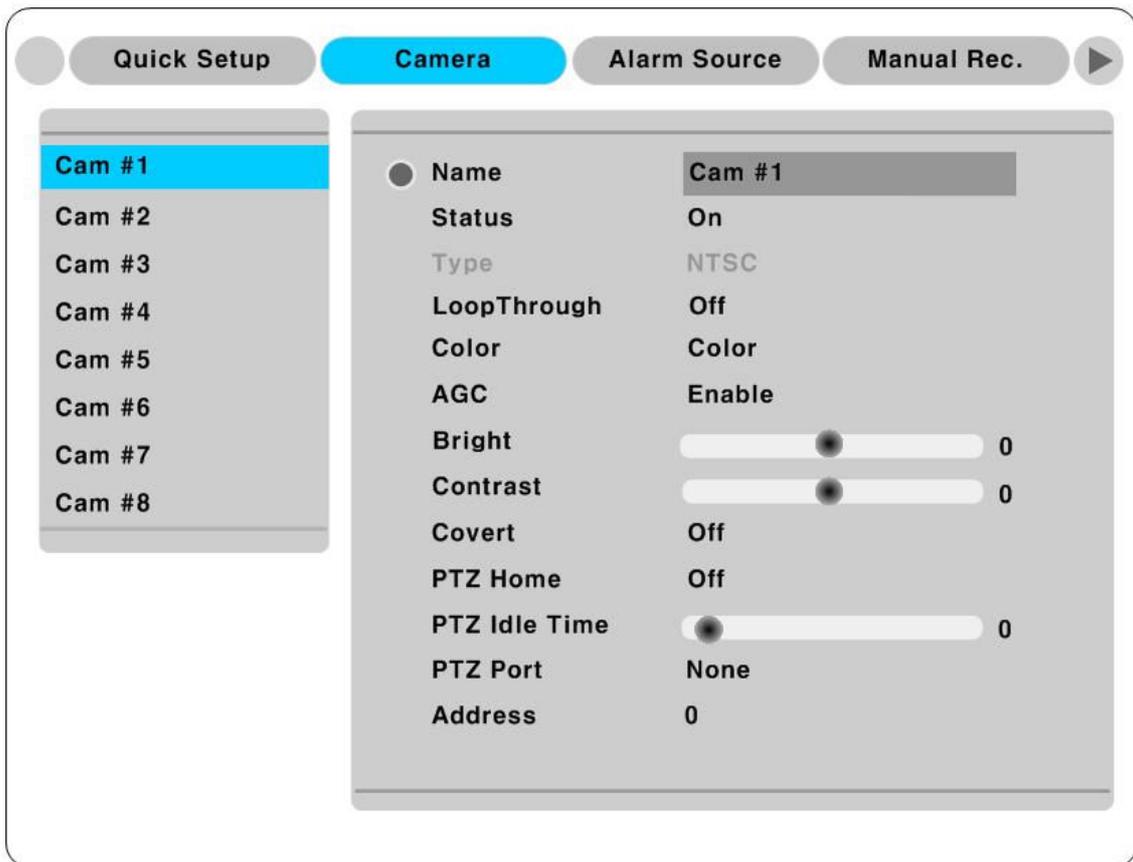

9.4. Connecting external device with serial port


9.4.1. Connecting text input device (ATM / POS / Access Control)

The HVRM-D800E can record text data received from POS/ATM through the COM/RS232 serial port.

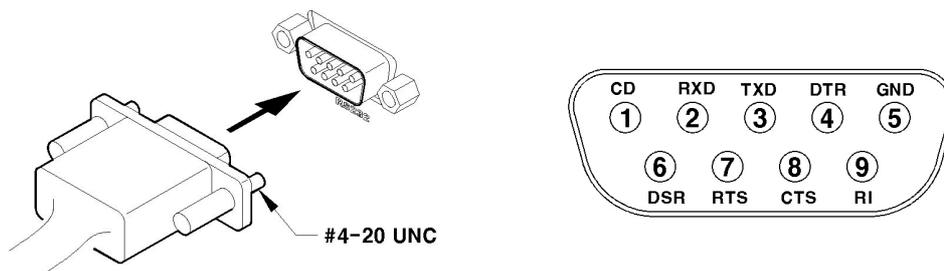


Connect to COM1/RS232 (9Pin D-Sub) of HVRM-D800E and configure the “Serial Setup” sub-menu under the “System” tab and “Text” sub-menu under the “Alarm Source” tab shown as above figure.

9.4.2. Configuring serial setup (COM1) at OSD menu

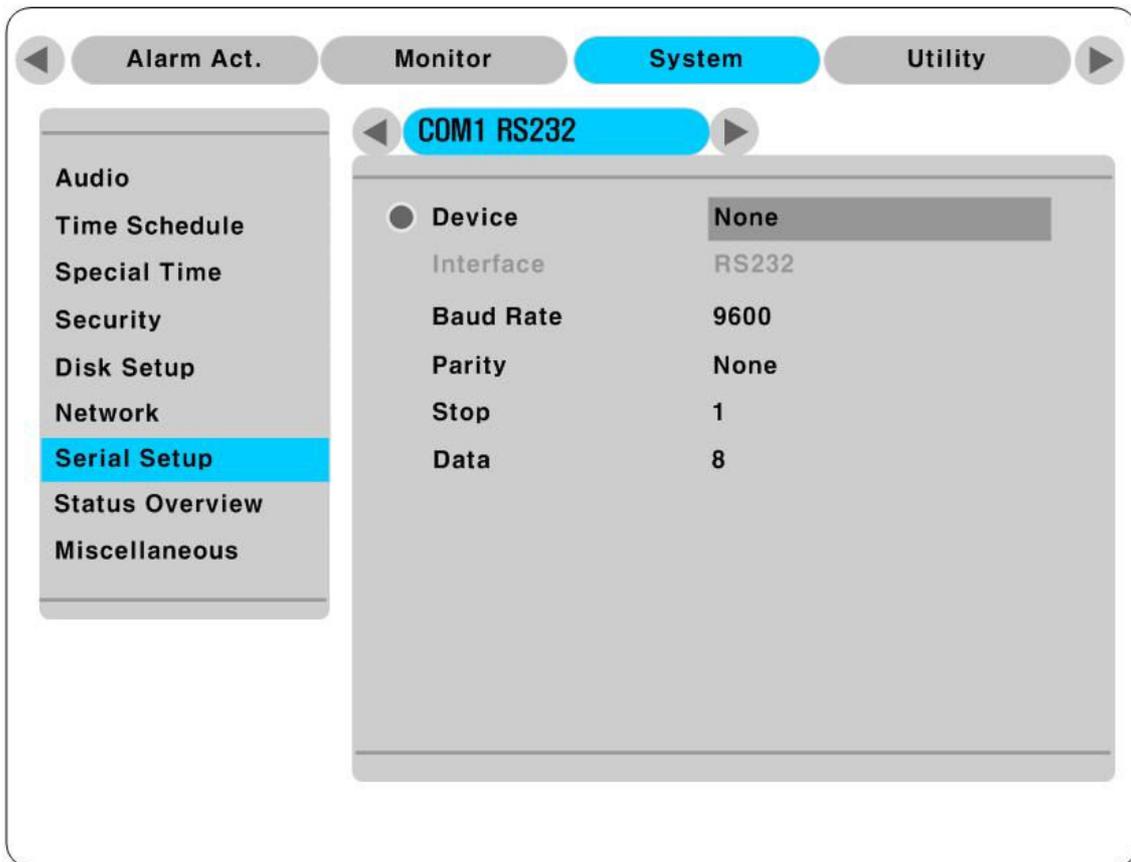

- (1) Set the “System” in OSD menu and move to “Serial Setup” menu.
- (2) Select COM in “Serial Setup”, set Devices as “Text”.
- (3) Set Baud Rate/ Parity/ Stop bit with referring to manual of the connected external device.

9.4.3. Configuring text

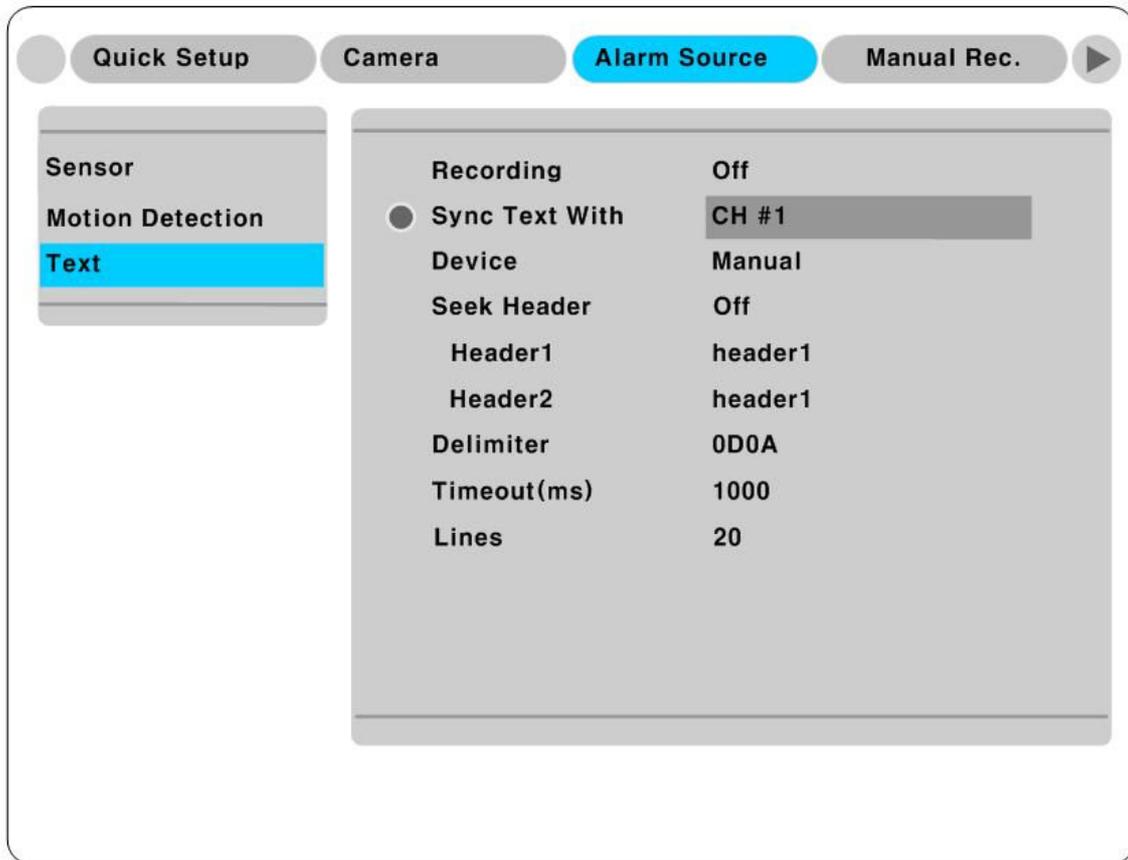

- (1) Select the “Alarm Source” menu among OSD menus.
- (2) Select the “Text” and set each value.


<Note>

Before installing any external device, consult with the local HUNT ELECTRONIC USA INC. distributor. Some external devices may not be compatible with the HVRM-D800E.

9.5. Connecting USB device

USB port can be used to copy up to 1 minute of images to a USB Flash memory disk. When connecting USB Device, do not exceed the rated values of USB device as below;


USB Spec.	Ver 2.0
Available Device	USB Memory Stick,
Output Voltage/Current	Max. 200mA per DC 5V/ Port

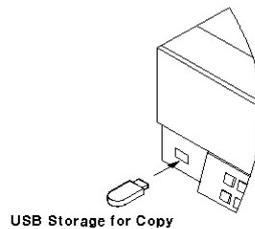

<Note>

The disk should be formatted with FAT32 type.


If properly connected the disk is recognized automatically as in the following picture. To copy images the process is as follows; Set copy range (up to 1 minute) → Select drive → Copy

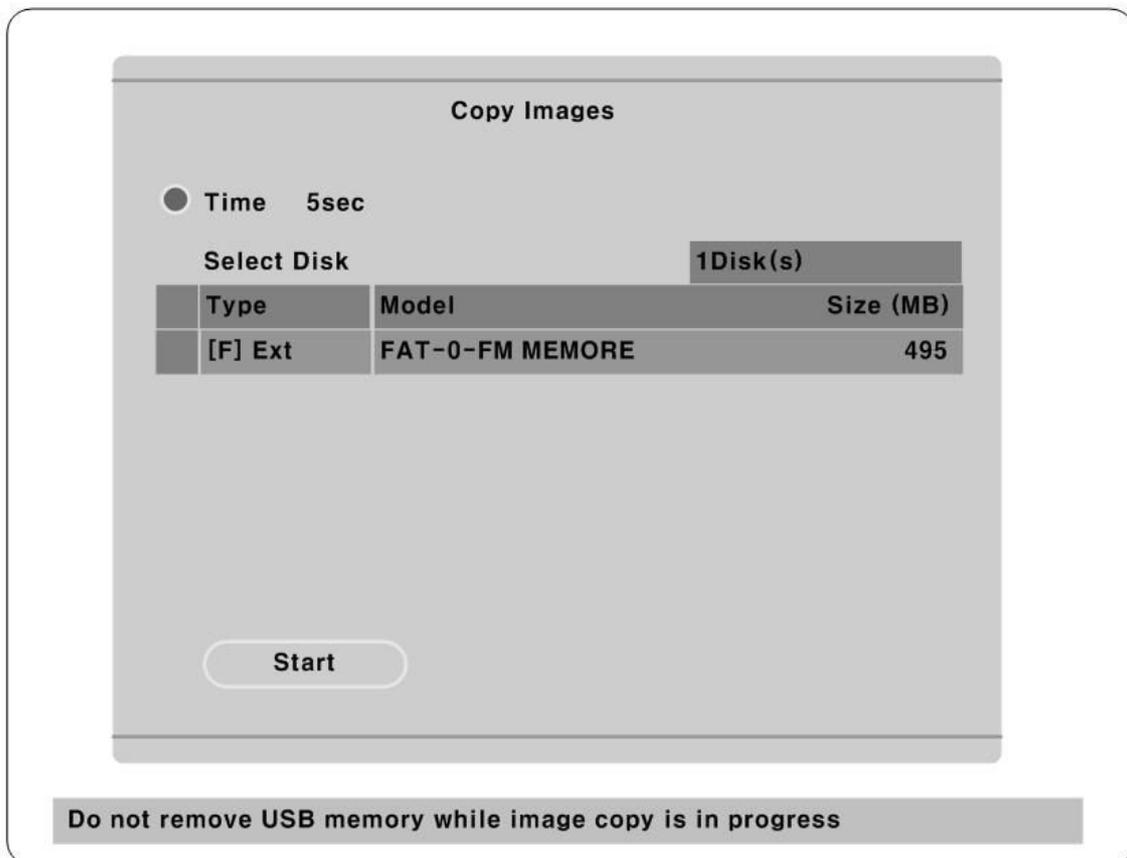

<Note>

1. USB Flash products that required a Windows program to operate may not be recognized by the HVRM-D800E
2. For more information about copy function, please refer to the “*User’s Guide*”

9.6. Connecting Video in/output

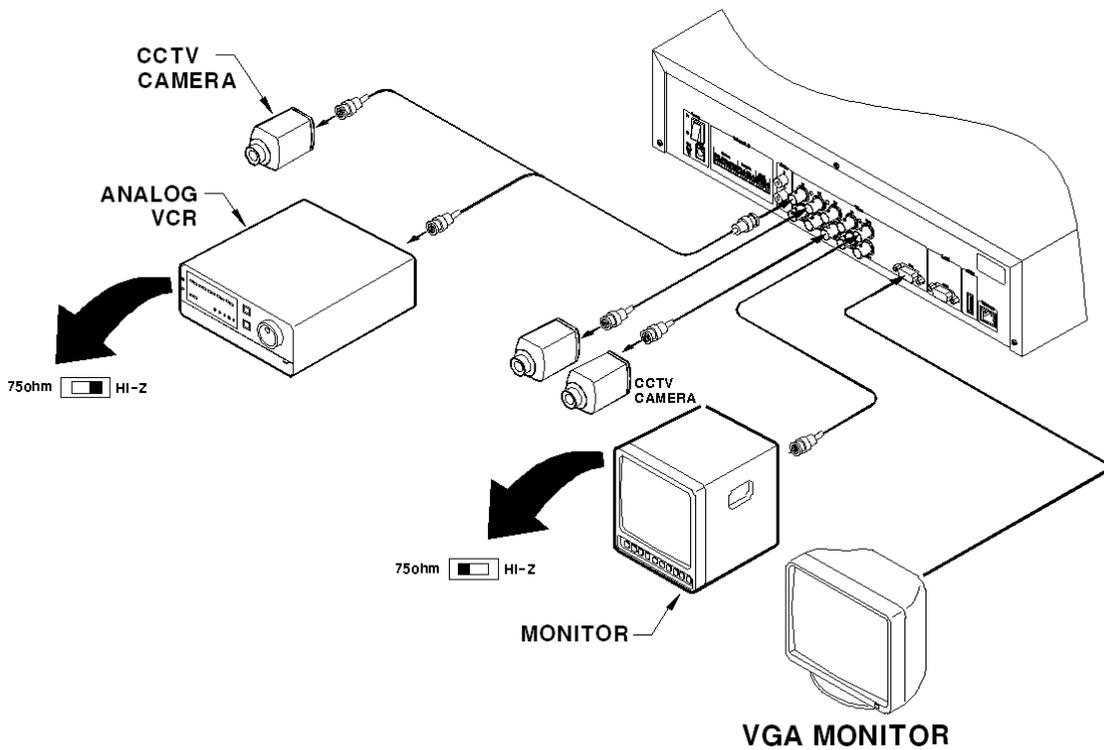

10. Connecting External Storage

10.1. eSATA port


HVRM-D800E have two eSATA ports (Rear: 1-ports) for external storage device interface.

<Note>

Some eSATA may not be recognized by the HVRM-D800E according to the method. Before purchasing, please consult with the local distributor.

10.2. Connecting eSATA Device

When using external eSATA supporting FireWire, hard drive bays can be connected through 1 port in the rear panel. HVRM-D800E do not supply power to the hard drive bay; therefore the device using external power is only available.

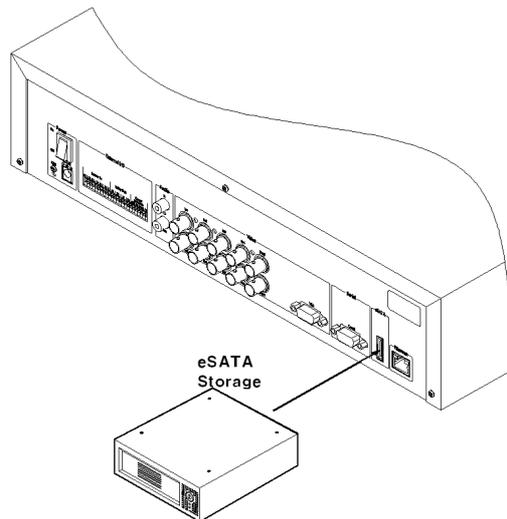

<Note>

While operating HVRM-D800E, it can recognize eSATA connecting. But it may not recognize based on external device. It recommends the connection in following orders;

1. Power off HVRM-D800E
2. Connect external device and eSATA interface cable.
3. Power on external device
4. Power on HVRM-D800E


10.3. Available HDD

It is recommended to use following HDD models with the HVRM-D800E. If a non-recommended HDD is used, HUNT ELECTRONIC USA INC. will guarantee the warranty.

10.4. Registering & Formating HDD

“Disk Manager” will automatically run on start-up installing a HDD as below;

If “Disk Manager” deos not automatically run on start-up, make sure the HDD is properly installed.

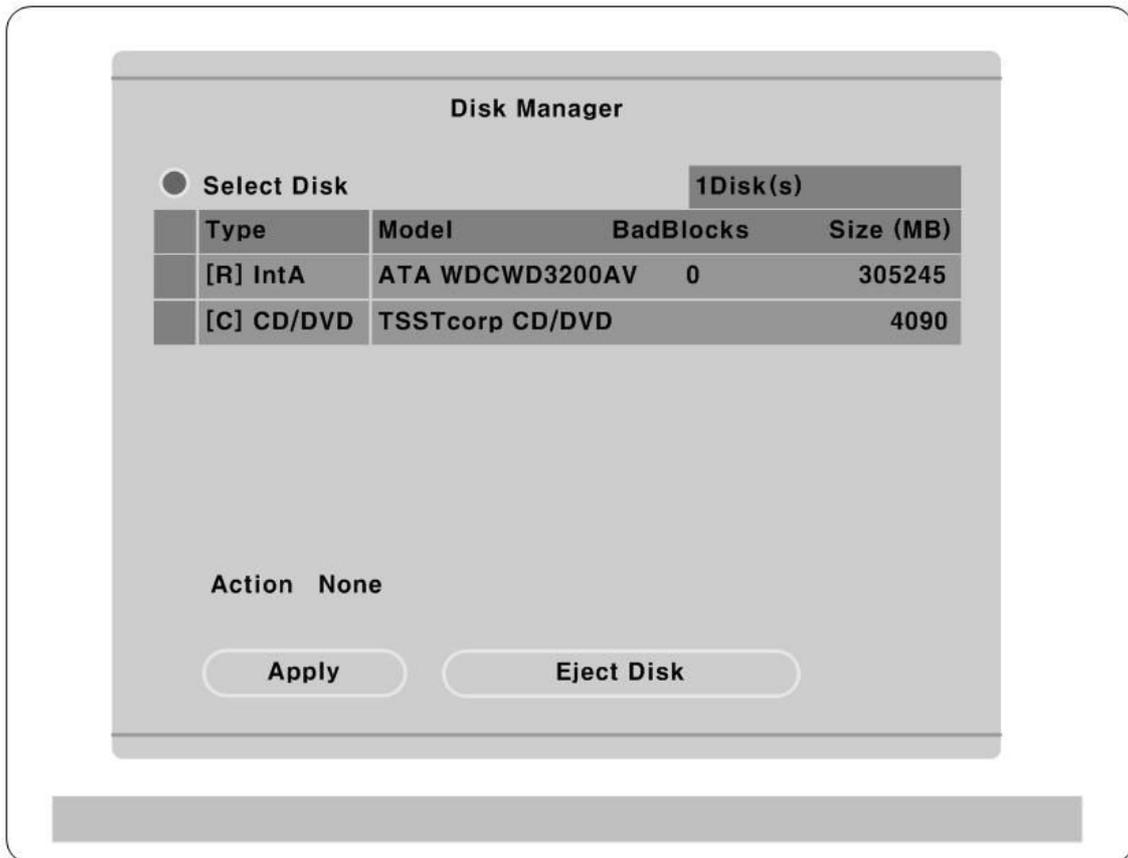


- (1) Press [▷] button marked at “Select Disk”.
- (2) Select new added HDD(indicated as “[F]”) using [▲/▼] button and press [EXIT].
- (3) Select “Action” using [▲/▼] button and press [▷].
- (4) Select “Add” using [◀/▶] button and press [EXIT].
- (5) Select “Apply” using [▲/▼] button and press [▷]. The HDD status is changed to “[*]”.
- (6) Select “Action” using [▲/▼] button and press [▷].
- (7) Select “Format” using [◀/▶] button and press [EXIT] button.
- (8) Select “Apply” using [▲/▼] button and press [▷] button. The HDD status is changed to “[R]” after formatting.
- (9) Shut down “Disk Manager” by pressing [EXIT] button.

11. Network monitoring & managing

HVRM-D800E can be accessed, controlled, and managed from remote site using PC via Internet/ Intranet, which is same way as local access for controlling & monitoring features.

11.1. Connecting Ethernet

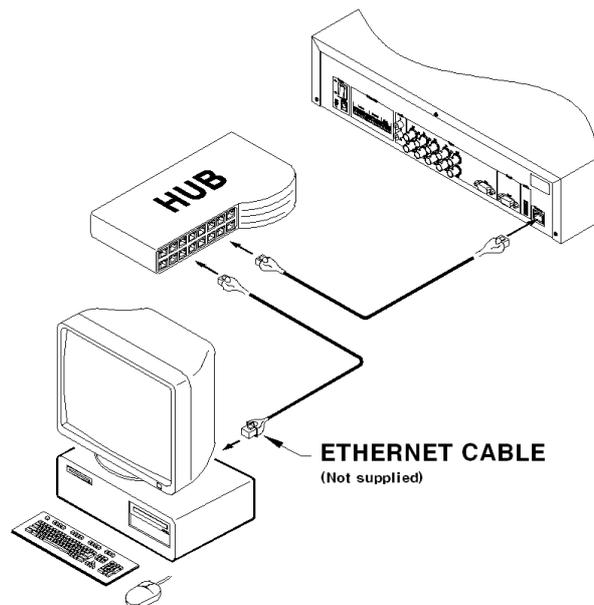


- (1) Turn off power switch of HVRM-D800E
- (2) Connect HVRM-D800E to hub with Ethernet cable
- (3) Turn on power switch of HVRM-D800E

<Note>

1. Supply power to HVRM-D800E after connecting Ethernet cable to protect against electrical damage to HVRM-D800E.
2. Check cable connection status.
3. Check LED on rear panel of HVRM-D800E after supplying power.

11.2. Configuring Network information of HVRM-D800E

The following description is based on Ethernet connection. For more detailed information on the Network setting page and way of using xDSL, please refer "USERS' GUIDE".

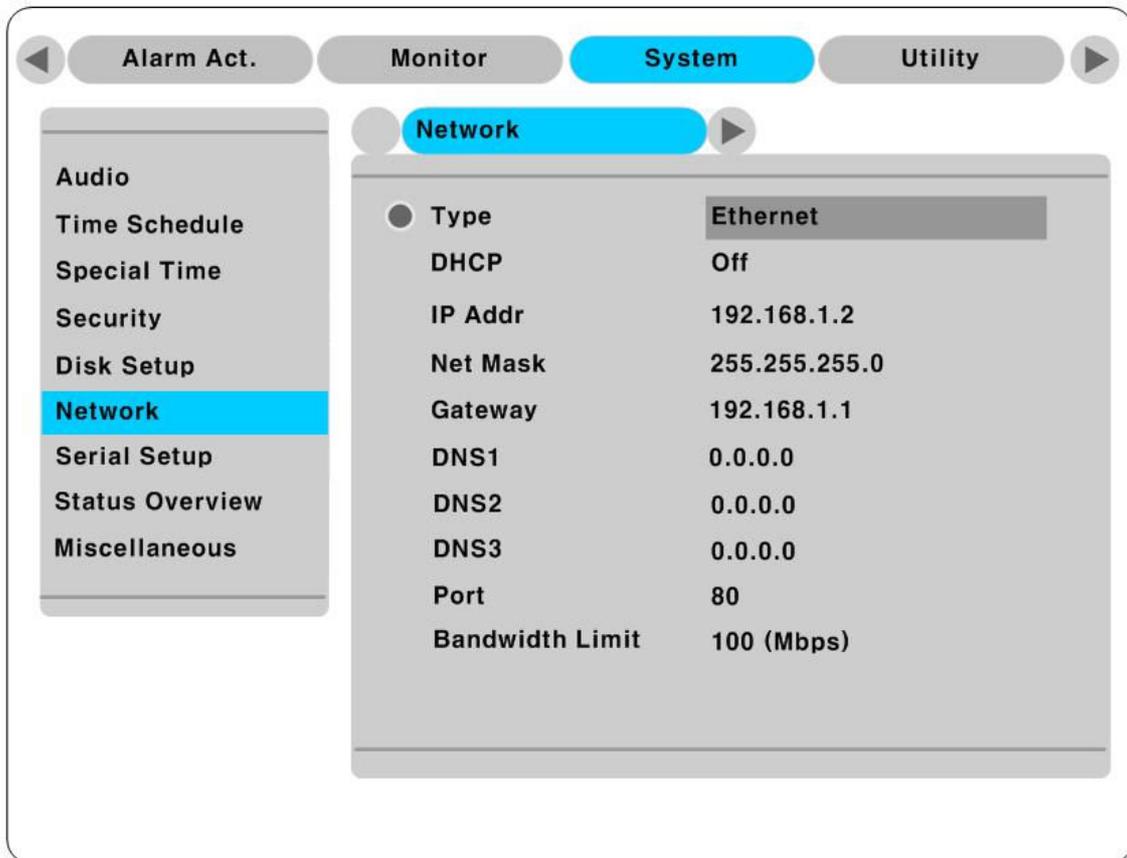

- (1) Press [MENU] button
- (2) Select "System" using the [◀/▶] buttons and press the [▷] button.
- (3) Select "Network" using the [▲/▼] buttons and press the [▷] button.
- (4) Select "IP Addr" using the [▲/▼] and press the [▷] button.
- (5) Press [EXIT] button after entering IP address in the dialogue box.
- (6) Select "Net Mask" using the [▲/▼] buttons and press the [▷] button.
- (7) Press [EXIT] button after entering Net Mask in the dialogue box.
- (8) Select "Gateway" using the [▲/▼] and press the [▷] button.
- (9) Press [EXIT] button after entering Gateway in the dialogue box.
- (10) Select "DNS" using the [▲/▼] buttons and press [▷] button.
- (11) Press [EXIT] button after entering DNS in the dialogue box.
- (12) Press [EXIT] button to exit to monitor mode

12. Using Control Center Lite

Control Center Lite is a HVRM-D800E Management Software and it makes HVRM-D800E installation & setting more easier through a PC which is connected with HVRM-D800E in Network. All configuration could be handled in OSD menu of HVRM-D800E without a PC, however, Control Center Lite makes the complete setting more simply.

12.1. Starting

To do setting HVRM-D800E through Control Center Lite, PC and HVRM-D800E should be connected via Network and installed Control Center Lite on the PC.


12.1.1. PC system requirements for running Control Center Lite

	Minimum	Recommended
CPU	Intel Pentium4 3Ghz (Hyper-Thread)	Intel Core™ 2 Duo 1.86Ghz (FSB 1.066Ghz)
Memory	512MB	2GB
Video Card	128MB	128MB
Resolution	1280 x 1024	1280 x 1024
HDD storage space	1GB or higher	1GB or higher
OS	Windows XP SP2	Windows XP SP2
Others	DirectX 8.1 or higher	DirectX 8.1 or higher


12.2. Installing Control Center Lite

1> Execute "1.x.x.x Setup.exe" file in Set up CD.


To install Control Center Lite, user level of the PC should be Administrator mode.

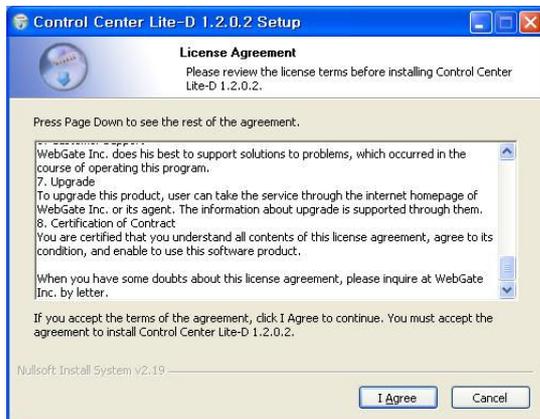

2> Click “I Agree” button to accept the license agreement

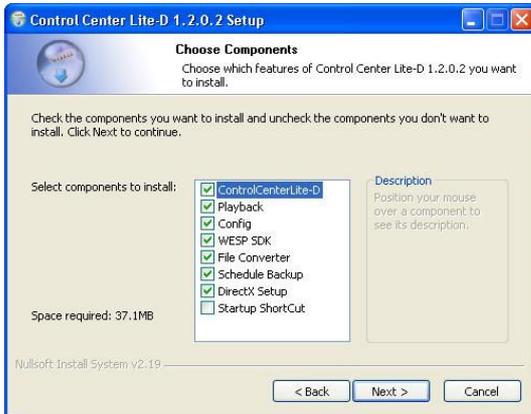

3> Select components which wish to install and press “Next” button.
“WESP SDK” must be installed.

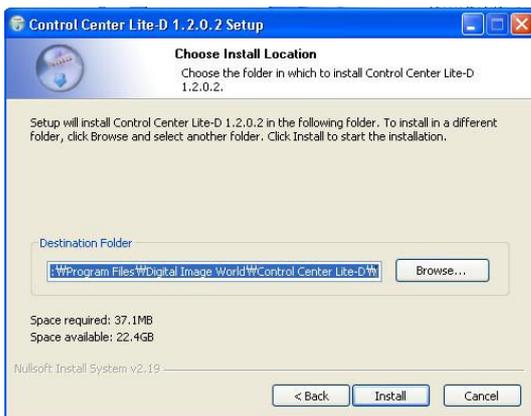

4>.Click the “Install” button after selecting a directory to be insatalled.

12.3. Log-In




Enter User Name, Password and press “Ok” button.

The factory default value : User Name:Administrator, Password:admin

12.4. Configuration Tool



Click the icon on the desk top to run “Control Center Lite Configuration Tool”.

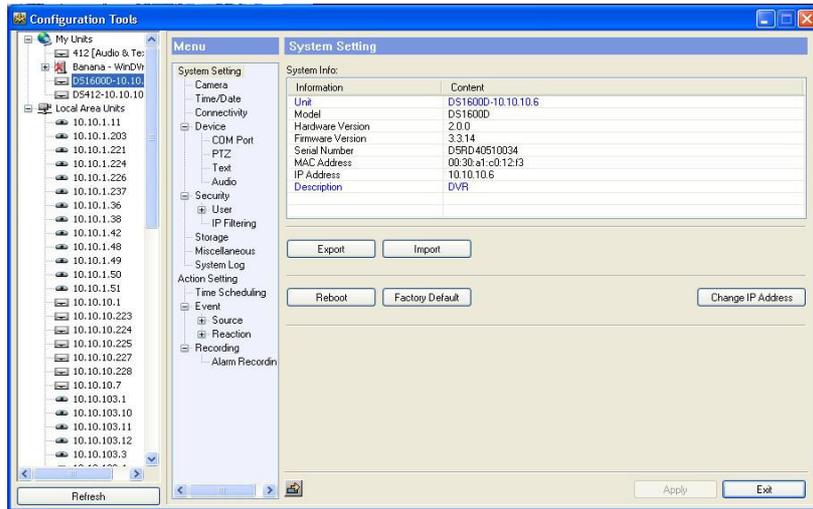


12.5. Monitor

* Max. 5 users could be connected simultaneously in one unit of HVRM-D800E.



Click the icon on the desk top to run “Control Center Lite Monitor”.

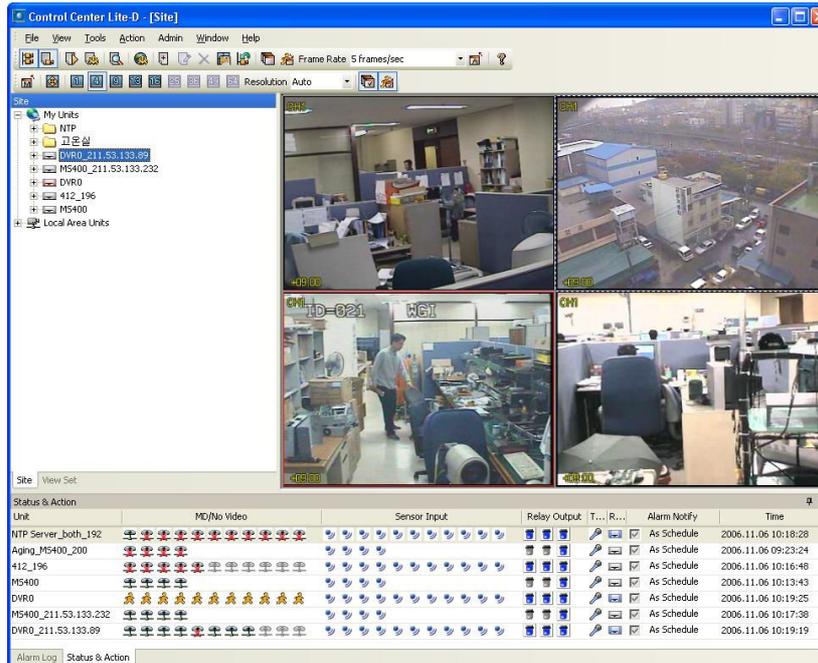


12.6. Playback

* Max. 2 user could be connected for playback in one unit of HVRM-D800E.



Click the icon on the desk top to run “Control Center Lite Playback”.

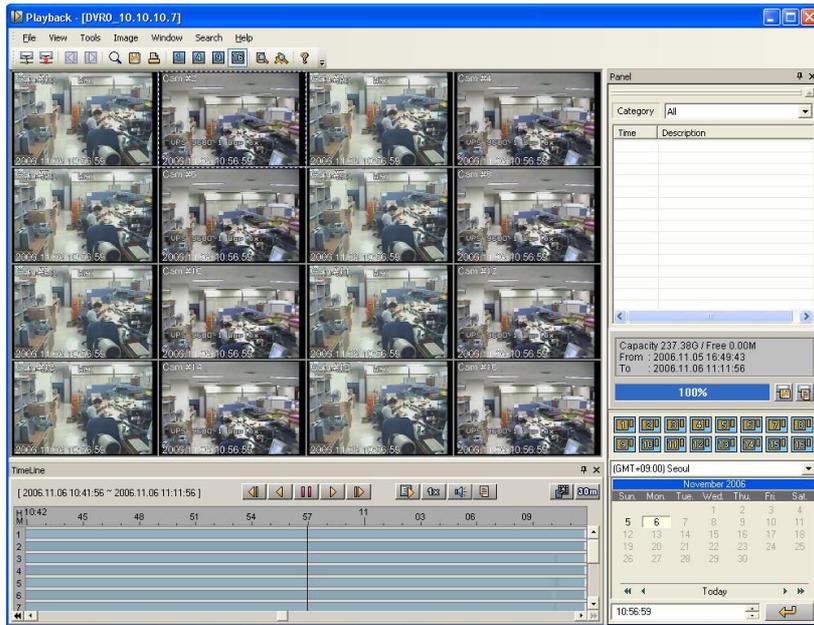


USER'S GUIDE

13. Description

13.1. Front Part

13.1.1. HVRM-D800E front part

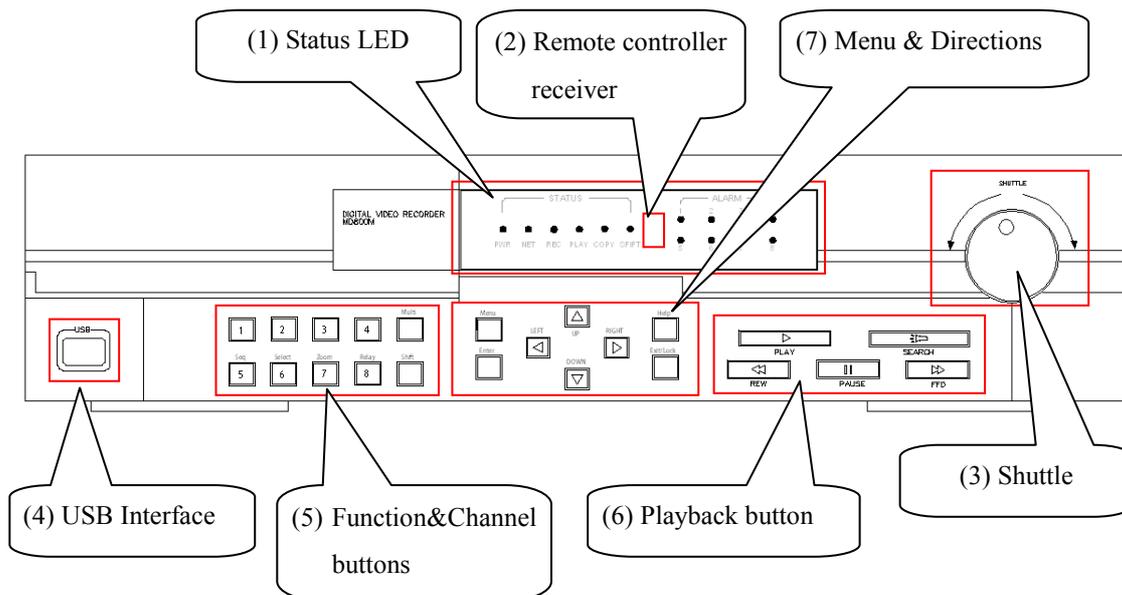

(1) Status LED

- Power** : It indicates Power input, and light on at Power in.
- Net** : Indicates Ethernet & communication status and twinkle as much as image delivery via Ethernet.
- Rec** : Indicates video recording, and twinkle as much as image record
- Play** : Indicates Playback mode and twinkle as many as image played at playback mode. Also, twinkle as many as image delivered per second when it connects to Control Center Lite-D Playback.
- Copy** : Flash while executing Backup/Copy.
- Shift** : When press Shift button, it turns on.
- Alarm** : When Camera alarmed and image damaged, Orange LED turns on/off.

(2) Remote controller receiver

(3) Shuttle

It is the switch to Power On/Off. While the system Off, press longer than 5 sec. to display admin/password input screen. Then input password to turn power off.

(4) USB Interface (Supply 1 USB port)

(5) Function&Channel buttons

Select video channel when monitoring & playback

- Seq** : Function to display all video connected sequentially
Press more than 1 sec. to operate User Sequence mode
- Select** : Function to select video channel to control PTZ in Monitor model.
And function to select video channel to Copy/Backup/Delete in Playback mode.
- ZOOM** : Zoom video image at 1 channel mode
- RELAY** : Relay On/Off in Monitoring mode and return to original status when alarm pop-up
- Shift** : Function to On/Off Shift key
To use 5(Shift), 6(Select), 7(Zoom), 8(Relay) function, press Shift button and 5,6,7,8 to operate Shift, Select, Zoom, Relay function.
- Multi** : Function to monitor multi video images in a screen((4/9 division channel))

(6) Playback button


- PLAY** : Use as ENTER button during Menu operating, and use as PLAY button when playback the recorded video data
- SEARCH** : Search the recorded image data at Playback mode
- REW** : Each press of the button will increase reverse playback speed gradually
(x1, x2, x4, x8, x16, x32, x64)
- FFW** : Each press of the button will increase playback speed gradually
(x1, x2, x4, x8, x16, x32, x64)
- PAUSE** : To pause replaying

(7) Menu & directional button

- Menu** : PTZ Control or Setup Menu function
- Help** : Indicate each video data(Date, Channel name, HDD status etc.)
- Enter** : To enter and confirm the selected menu.
In case of press the ENTER button for long time then it will be use for Manual recording...
Function to start/stop recording by user
Start/Stop user recording according to set in advance
- Exit/Lock** : Move upper menu at Setup
- Directional** : Playback function at Playback mode, or else to move direction indicate
- Key** : At monitoring mode, 'Up' button works as 'Bookmark' function.
'Down' button : From single/split mode, it will switching as desire channel group or split mode.

13.2. Rear Part

13.2.1. HVRM-D800E rear part

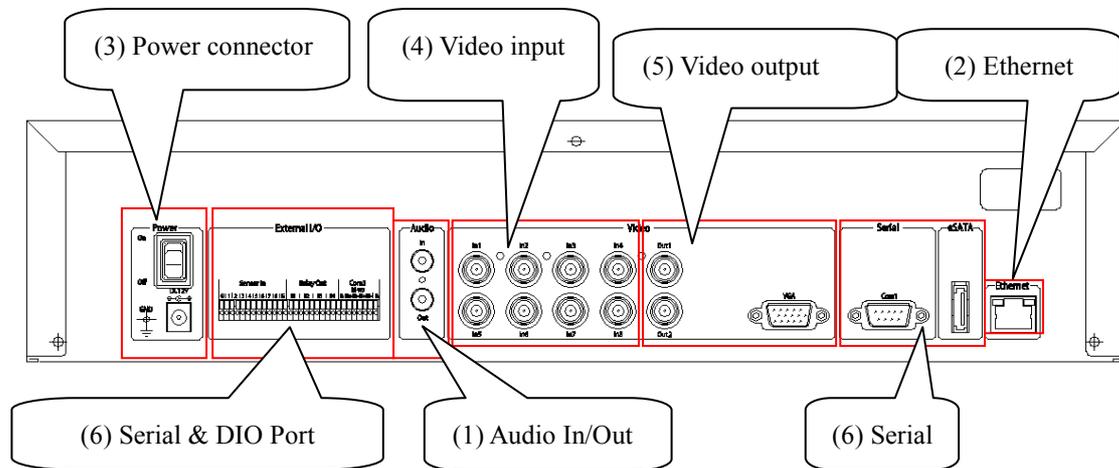

(1) Audio In/Out

1 Audio input & 1 output

(2) Ethernet

(3) Power connector

(4) Video Input

8 video input terminal

(5) Video Output

2 CVBS output

1 VGA output

(6) Serial & DIO port

Sensor In : 8 Sensor input terminal block

Relay Out : 4 Relay output terminal block

COM1 : RS232 9Pin D-Sub connector

COM2/COM3 : RS485 terminal block

eSATA : 1 connection port

13.3. Summary of Installation

- Camera connection
- Monitor connection
- Ethernet connection (for remote connection)
- Audio connection
- Power connection & Operation

Basic Structure

14. Monitoring

All analog video image channels connected to HVRM-D800E is displayed to screen by Power connection. It is to utilize all monitoring mode of HVRM series.

14.1. Basic Screen monitoring

- After Power connection, HVRM-D800E operates on automatically.
- It boots with LED on.
- After booting, 9 division mode.
- ※ If there is user password set, Password input window will be displayed.



14.2. Single full screen mode

- Press the channel number wanted.
- Press [MULTI] button to return divisional screen.



14.3. Multi screen mode

- Press [MULTI] for multi channel display.
- Press [MULTI] button every time, screen mode is changed to 4 / 9 division mode.

14.4. Manual Recording

By the press [Enter] button for user recording, it records as long time as it set the time. It is prior to Normal Rec, Event Rec. And it records by user recording set in disregard for any recording setup when user recording starts.

14.5. Auto Switch mode


There are System Standard modes and User Defined mode in Auto Switch mode. And Users Sequence mode operates by the press [SEQ] button 1 sec longer.

<Attention>

System standard mode is capable to use when channel division is more than the number camera connected. Namely, single at 2 or more cameras, 4 division modes at more than 5 cameras should be connected. 9 division mode does not support auto switch function.

14.5.1. System Standard mode


- By [SEQ] button, it can monitor auto switching of all channels.
- Press [MENU] for the setting switching term.
- Move to “Monitor” from OSD menu.
- Press [▷] to move from “Monitor” to “Monitor”.
- Select “Seq. Switching(sec)” and set value from 1 sec. to 60 sec. At OFF set, auto switch mode does not operate.

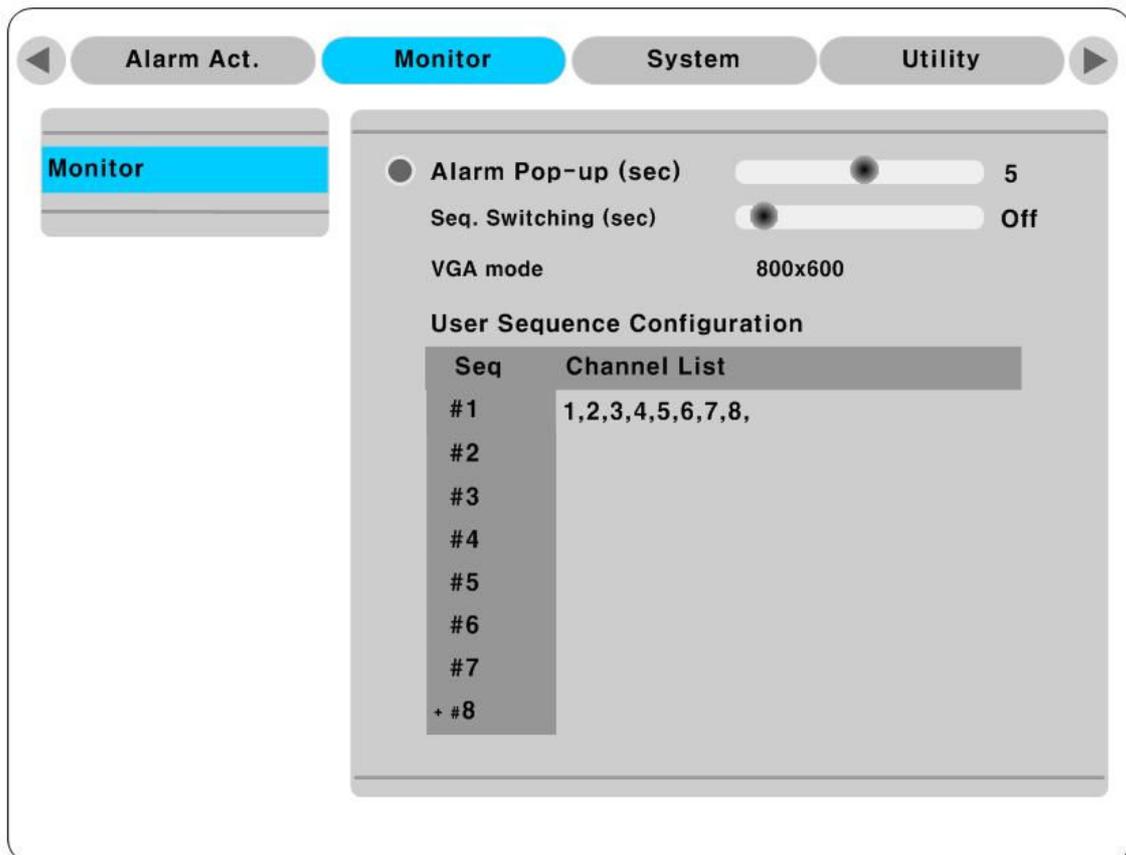

- Auto Switch mode can be set in every division mode by the press [SEQ] button.
- Press [SEQ] button once more to leave from Auto Switch mode.

14.5.2. User Sequence mode

- Press [SEQ] button longer than 1 sec.
- User Sequence is to set User Sequence Configuration from “Monitor” in OSD menu.

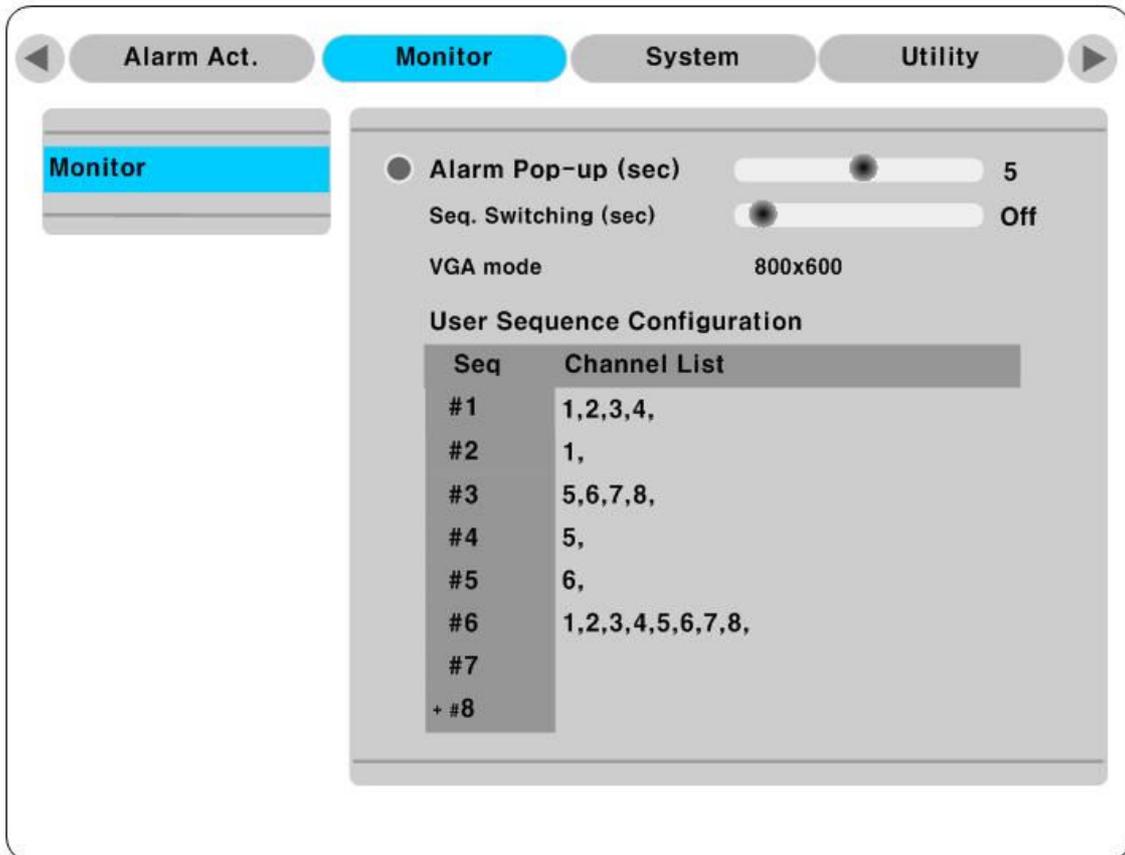

<Attention>

1. User mode can define max. 8 channels.
2. The above picture defines 6 Sequence, and it is displayed in order as 4 division(1,2,3,4) → Full screen(1) → 4 division(5,6,7,8) → Full screen(5) → Full screen(6) → 9 division(1,2,3,4,5,6,7,8).

14.6. Alarm mode

- It can be set to Pop-up automatically relevant screen when alarming.
- Set pop-up period can be set into “Alarm Pop-up (sec)” inferior to “Monitor” menu.
- At the simultaneous alarming in several channels, it displays the division as many channel as alarmed. For example, when 3 channels alarm, 4 divisions is displayed on screen. And press any button to return original channel.

<Attention>

1. If Alarm Pop-up Hold (sec) set to Off, Alarm Pop-up will not operate.
2. If Alarm Pop-up Hold (sec) set to Keep, it does not return to previous screen before press any button.

14.7. Zoom Screen mode


- At single full screen mode, press [ZOOM] to monitor 2x image size.
- Default zoom screen locates to main center when press [ZOOM] button. Zoom image can shift left-right in 18 steps and top-bottom in 12 steps.
- Use directonal key button to screen move
- Press [ZOOM] one more to return to original screen.

14.8. Pause Live screen

- Live screen can pause like PlayBack.
- Press [PAUSE] to pause live screen and press [▷] to return live screen.

14.9. PTZ Control

Connect PTZ controller to HVRM-D800E and set relevant protocol from “Serial Setup” menu, then PTZ can operate while monitoring live images.

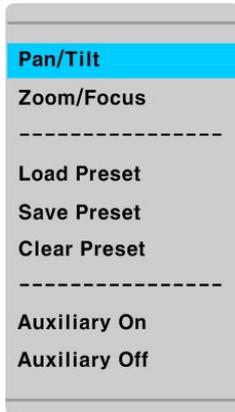

- Press [SELECT] button first.
- Channel select icon is on the screen,
- Shift to channel to control PTZ with directional key. (Press [SELECT] at single screen mode)
- Press [MENU] at channel selection icon displayed to view PTZ (Pan/Tilt, Zoom/Focus, Load Preset, Save Preset).
- Select any wanted menu from them and press [ENTER].

14.9.1. Pan/Tilt Control

This menu is used to control Pan & Tilt function at real-time monitoring mode.

- Press [SELECT] button and select Channel.
- Press [MENU], then select ‘Pan/Tilt’ from OSD.
- Control Pan/Tilt through directional key at front part.

14.9.2. Zoom/Focus Control

This menu is used to control Zoom & Focus function at real-time monitoring mode.

- Press [SELECT] button and select Channel.
- Press [MENU], then select ‘Zoom/ Focus’ from OSD.
- Control Zoom/Focus through directional key at front part.

14.9.3. Utilizing Load Preset

This menu is used to shift to Preset Set at real-time monitoring mode.

- Press [SELECT] button and select Channel.
- Press [MENU], then select ‘Load Preset’ from OSD.
- Press relevant Number button of Preset set.

14.9.4. Utilizing Save Preset

This menu is used to set new Preset at real-time monitoring mode.

- Control camera location using 'Pan/Tilt' and 'Zoom/Focus' menu.
- Press [SELECT] button and select Channel.
- Press [MENU], then select 'Save Preset' from OSD.
- Press relevant Number button to set in Preset.

14.9.5. Utilizing Clear Preset

This menu is used to initialize Preset at real-time monitoring mode.

- Press [SELECT] button and select Channel.
- Press [MENU], then select 'Clear Preset' from OSD
- Press relevant Number button to initialize Preset.

14.9.6. Utilizing Auxiliary On

This menu is used to utilize specific function in PTZ device at real-time monitoring mode.

- Press [SELECT] button and select Channel.
- Press [MENU], then select "Auxiliary On" from OSD
- Press relevant Number button of specific function (Aux function is available to max 16 functions.)

14.9.7. Utilizing Auxiliary Off

This menu is used to stop operation of specific function of PTZ device.

14.10. Relay control


The function to Relay On/Off. (HVRM-D800E supports 4 Relay Output.)

- Press [RELAY] button to display “Relay On” icon on screen.
- Then Relay Out signal is out by pressing the relevant number of Relay among 1~4 number button.
- Press [RELAY] to Relay Off.
- Display “Relay On” icon while Relay On is working.
- Then “Relay Off” icon is displayed on when press [RELAY] button once more.
- Press relevant Relay button to Relay Off.

14.11. Screen Lock control

The function to prevent unauthorized user operating the menu at will.

Set “User Password” first to use this function.

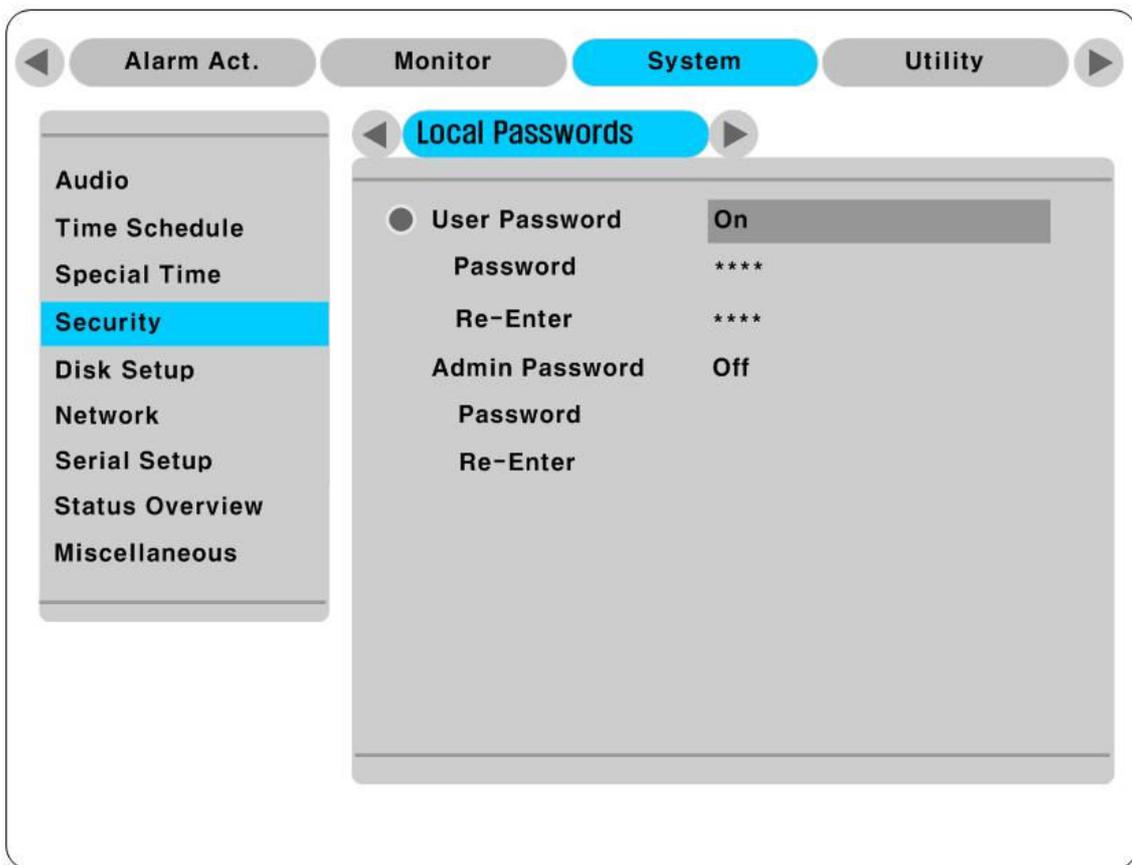

Press [Exit/Lock] button to operate Lock mode with message “Screen Locked” on the bottom of screen.

When “User Password” is Off, the message “Enable user password first” is on the screen.

At the Lock mode, any button does not work. It must release to operate function button. At Lock mode, window for user password input will be displayed at any button press. And Lock mode will be released with correct password input.

14.12. Bookmark Function

It is function to activate Event by force to present monitoring image. It happens when press 'Up' button at Monitor mode, there is no alarm or sign for the function. Bookmark is dealt to Event, and it is searched and playback through Search function.

15. Playback

15.1. Various Playback mode(Playback)

15.1.1. Playback on standard monitor (full screen)

- Press Playback button [▷] at Monitoring mode.
- It playback images with initial 1x speed.

<Attention>

At Monitor mode, Playback button will play the recorded image from Channel 1.

Namely, it will always start playback of channel 1 from 30sec. ago.

At the time, the data of image will be shown at the bottom of screen. And the one on top indicates images for 30 min. and the bottom indicates 12hrs.

It also playback video images of the channel that input the wanted channel number.

15.1.2. Playback to divided Channel(4/9)

- Press [MULTI] button at single playback screen mode. (Pressing [MULTI] button every time, it is changed 4, 9 channel division.)
- Channel 1~4 images is playback in 4 channel division.
- Select channel number to playback single channel playback mode.

15.1.3. Playback channel no. 5~8 at 4/9 channel division

Press [SEQ] button or playback the wanted channel on divisional channel.

- Press [SELECT] button at 4/9 divisional channel.
- Select divisional channel by direction key.
- Playback the images to the location appoint for selected channel number.

15.1.4. Zoon Playback screen

- Press [ZOOM] button at single screen playback mode to displays 2x zoom playback image.
- Pressing [ZOOM] button will locate zoomed images to the center of screen. Zoomed image can shift left-right & top-bottom at 10 and 7 grades.
- Screen shift is carried by direction key button.

- Press [ZOOM] one more to return original screen mode.

15.1.5. Various Playback functions

- ▷ (PLAY)** : Playback 1x speed.
Press [▷] playback button at single monitor mode will playback recorded images of monitoring channel.
Press [▷] playback button at multi monitor mode will always playback recorded images of no. 1 channel.
 When the execute playback by pressing [▷] playback button, it playback from the time when user connects to playback lately.
- STOP** : Stop Playback.
- PAUSE** : Pause Playback.
- FFW** : Change Playback speed at every button pressing.(x1, x2, x4, x8, x16, x32, x64)
- REW** : Reverse playback speed at every button pressing. (x1, x2, x4, x8, x16, x32, x64)
 If press REW button at Monitor mode, it will reverse playback from the last recorded section, and it will forward play from 1 min. previous if press FFW button.
- STEP FORWARD** : Playback by each frame with [▷, PLAY] or [▶▶, FAST FORWARD] button at PAUSE. Press [■, STOP] and then [▷, PLAY] or [▶▶, FAST FORWARD] to return normal playback.
- STEP REWIND** : At PAUSE, press [◀◀, FAST REWIND] to playback one by one fram in reverse. To return to normal playback, press [■, STOP] and then [▷, PLAY] or [▶▶, FAST FORWARD].

15.2. Search mode

This menu is to playback specific time data from the time frame and searching log at Playback mode.

The screenshot shows a menu interface for the Search mode. It includes fields for 'From' (2007/01/01 10:00:00), 'To' (2007/01/05 11:30:55), 'Date' (2007/01/02), and 'Time' (09:00:00), along with a 'Go' button. Below this is a 'Log Browser' section with a '1 of 2' indicator and a table of log entries.

Time	Log Code
2007/01/01 10:15:30	Rec. Stoped
2007/01/01 11:20:10	Rec. Started

From for the time to start recorded data, To indicates the last time. Select From/To and press [ENTER] to move to the relevant time.

<Order of Button Input>

- Press [SEARCH]
- Input Date/Time or select relevant Log from Log Browser.
- Press [▷] button.
- Playback searched image.
- Press [EXIT] to exit from Search mode.

<Note> How to use Log Browser

1. Shift each page with Left/Right key.
2. Shift to previous Log block by Up key at first page and first log.
3. Shift next Log block with Down key at last page and last Log.

15.3. Copy / Backup / Delete


This menu describes how to copy/backup/delete recorded images.



- Press [SELECT] and [MENU] in order and Playback mode.

15.3.1. Copy Image

Use USB Memory Stick etc to copy selected channel images in some part.

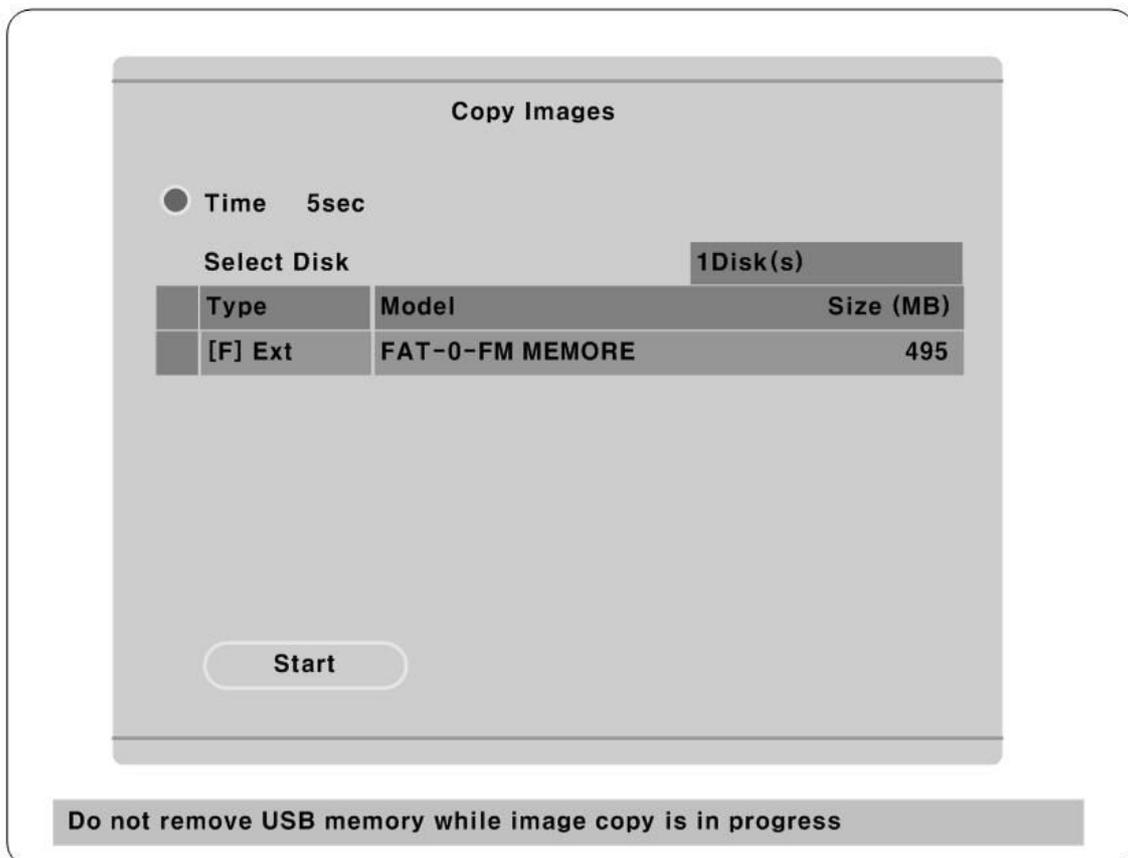


Time

Select the range of Copy. Range of image can set 1sec~1hours from present playback location.

Select Disk

Select the target of copy.

15.3.2. Backup Data

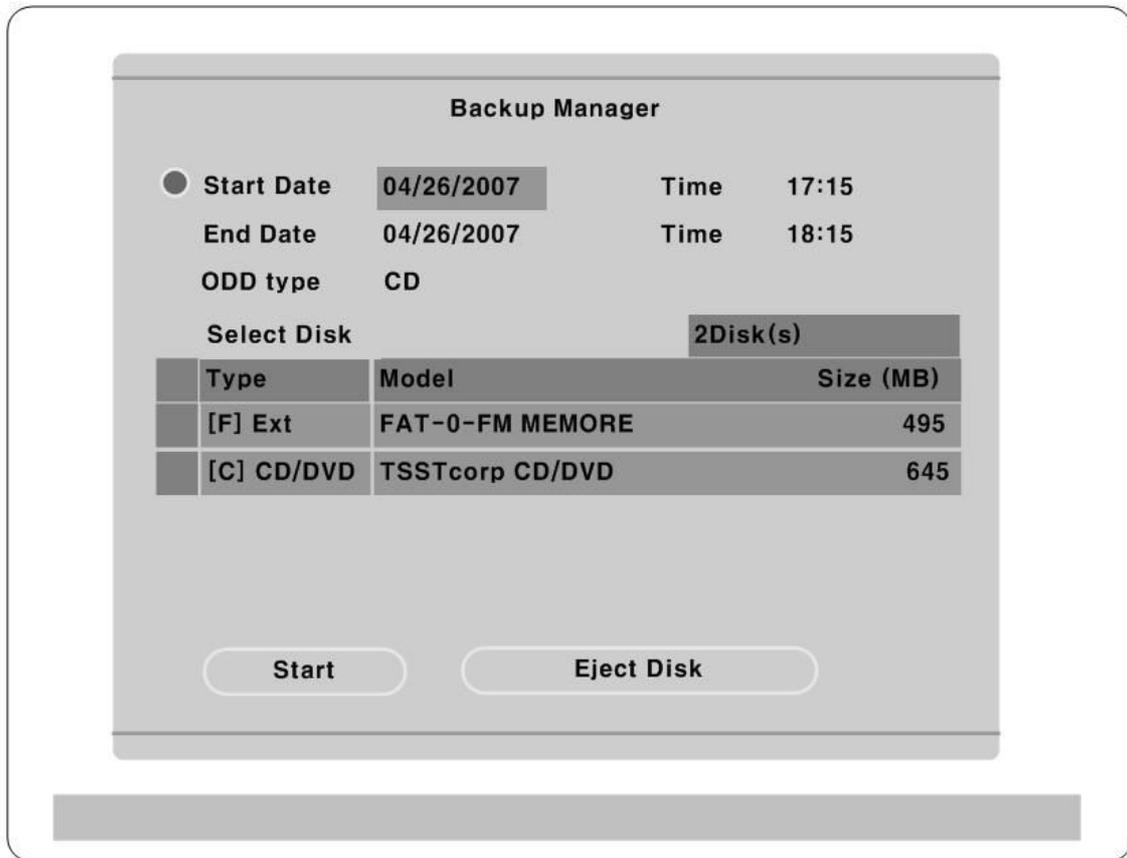

Start Date & Time / End Date & Time

Select the range of backup.

ODD type

Select media type to backup. It can select CD or DVD.

It indicates the size according to media type selects.

Select Disk

Select the disk to use backup device.

<Note>

Uncompleted backup file 100% can not be played normally in PC


<Note>

It does not support USB device as backup.

It supports CD-R/DVD-R, and over (CD-R Media 700MB / DVD-R Media 4G) in CD-R Media.

It creates re4 in HDD re4, in CD-R vfs4.

15.3.3. Delete Data

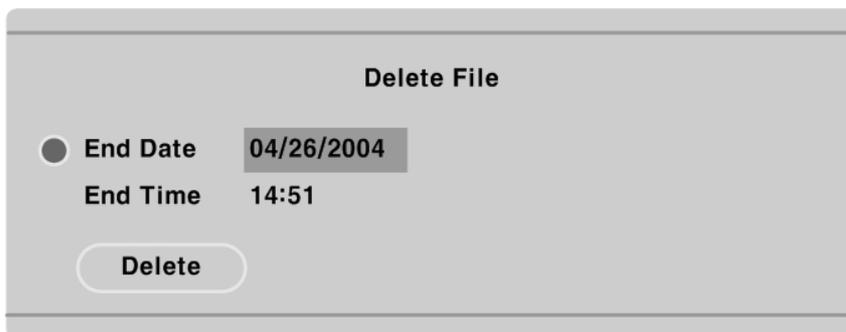

The menu to delete specific range of data in present HDD recorded. Deleted data is limited to present HDD used, and it does not affect to backup disk.

The range of delete data is from oldest data to the data that the time selected.

<Note>

The size of block in HVRM-D800E file system is 64MB and delete data is carried in block. So Delete data does not define the accurate time data.

16. Configuration

16.1. Quick Setup

There are 3 methods in Video recording setup - Quick Setup, Recording, Alarm Recording menu. Quick Setup is the menu to set recording easily in same condition of all analog channels. Recording is to set recording in more various conditions by time period or channel. Alarm Recording is to set the recording with alarm. Also, Quick Setup includes Time Set menu.

16.1.1. Tim Set(Date/Time)

Factory set of HVRM-D800E comes to "UTC 00:00 Dublin" as Time set.


First set in HVRM-D800E setup is to set time of relevant area. Time Set is very important to protect recorded data.

Change of the time of HVRM-D800E[Date/Time] can influence to images recording. And it could make the HDD format.

<Button Input order>

- Press [MENU] at the front of HVRM-D800E
- Shift to "Quick Setup" menu
- Shift to "Date/Time" of "Quick Setup" using direction key at Front panel, and press [ENTER] button.

- Normal operation of button in order will make the display following screen.
- Press [ENTER] to shift to each inferior menu after select menu with direction key.

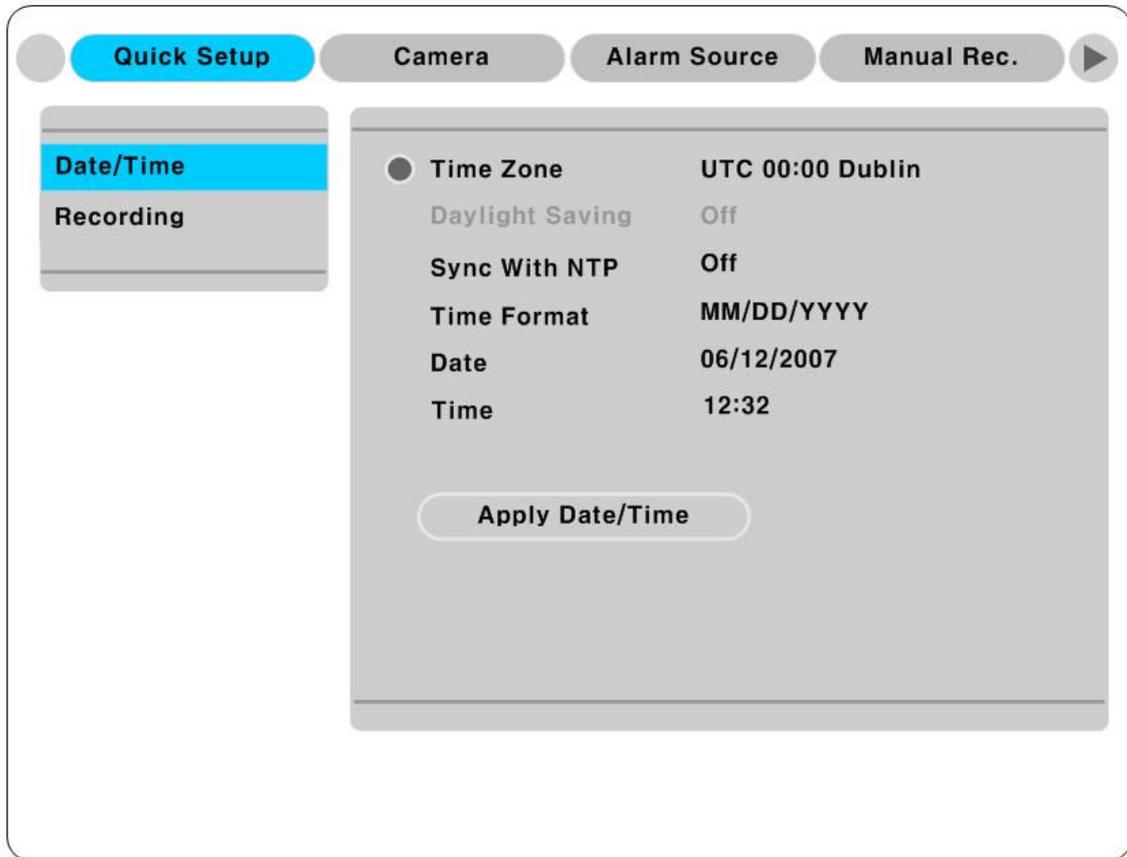

Time Zone

Select the times using left-right directional key from HVRM-D800E front. Every time pressing direction changes the time zone. (Press [EXIT] to return to previous menu. It is as same as OSD menu.)

Daylight Saving (Summer Time applied)

This menu is linked to Time zone set menu. Namely, it is activated when selected summer time zone is set from Tim Zone set menu. Summer Time Zone is programmed to apply the time zone from existing MS Windows. At these stages, when HVRM-D800E is installed to DST area apply, set Left & Right key whether it applies relevant Summer Time.

Sync with NTP

Select whether synchronize NTP (Network Time Protocol) and Time.

<Note>

Refer to **“NTP Settings”** from **Network Setup** in detail relate to NTP.

Time Format

Select the method of Time Format. Using Legt-Right key set Time Formate “MM/DD/YYYY” or “YYYY/MM/DD”.

Date/Time

Using Left, Right key will shift Year, Month, Date menu, and select each menu with Upper & Lower button.

Apply Date/Time

To apply Date/Time value, press “Apply Date/Time” button to display the following window.




<Note>

Other setup can be saved automatically by closing setup menu completely, but “Date” & “Time” does not because it can affect HDD recording File System critically. To save and apply changed data, it must press **[Apply Date/Time]** button manually..

16.1.2. Recording Setup

Quick Setup is to set same conditions to all analog channels in every hour.

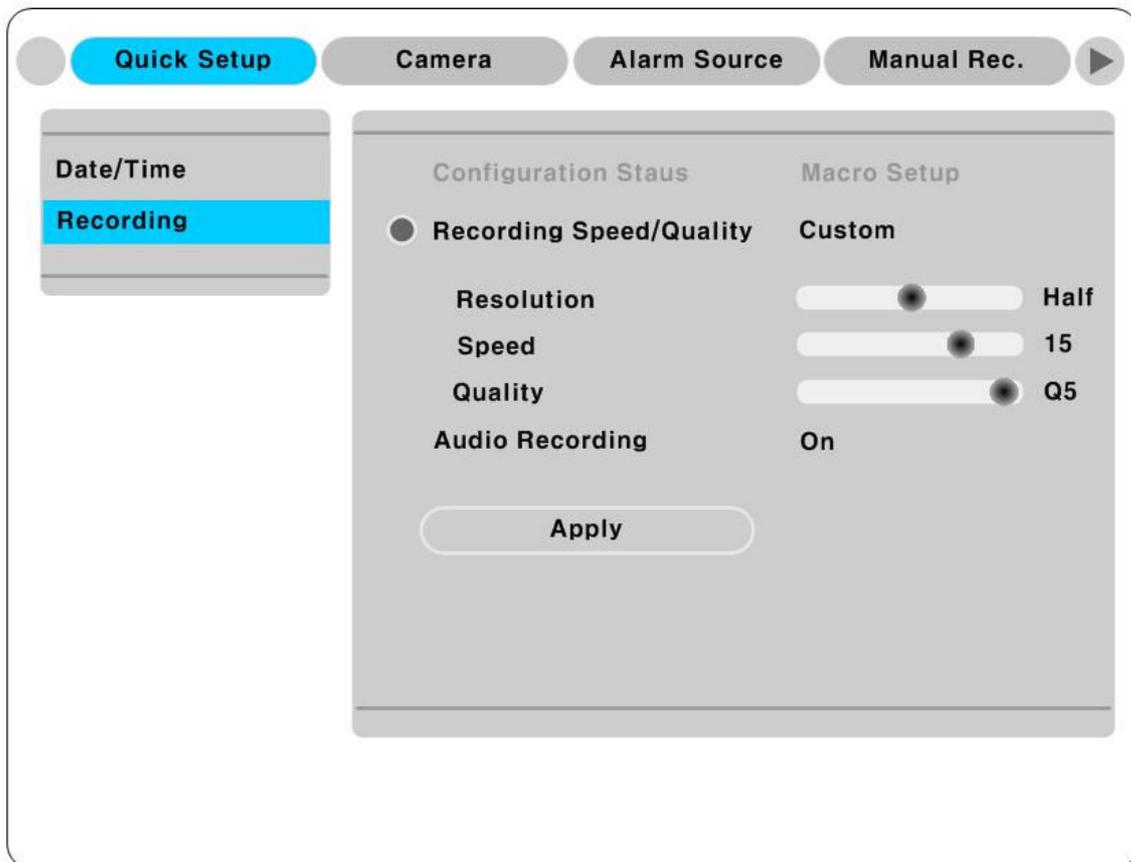

<Button Input>

- Select "Recording" menu inferior to "Quick Setup".

Configuration Status

It just indicates the setup status of recording only. If user sets recording condition to Quick Setup, it is indicated to "Macro Setup" and "Custom Setup" when any set has changed from recording menu.

<Note>

"Macro Setup" indicates the same of schedule recording of all channels.

Channel Status

Set whether it activates all analog channels. Default value is “On”.

Recording Speed/Quality

There are all 5 setup conditions. (No Rec./Low/Standard/High/Custom).

The conditional Setup except “Custom” comes to auto synchronize with “Speed(ips)”and “Quality” Quality can set the each separately. At the setup condition of “Alarm Recording”, “Standard”와 “Pre/Post Alarm” is set to each 1 second.

Resolution

recording resolution of all cameras [CIF /Half D1/ Full D1].

Audio Recording

It sets Audio recording. In case of Audion recording set to “On”, “Audio Synch with” is set to “All” and it synchronizes all channels when playback.


Apply

To apply Setup, press “Apply” button, and move to previous menu pressing [EXIT] to start HVRM-D800E recording based on the setup condition of recording.

16.2. Camera Setup

This is to setup the condition of every camera. At Quick Setup menu, it sets every camera to the same condition.

Set values are applied in same at monitoring & recording mode.

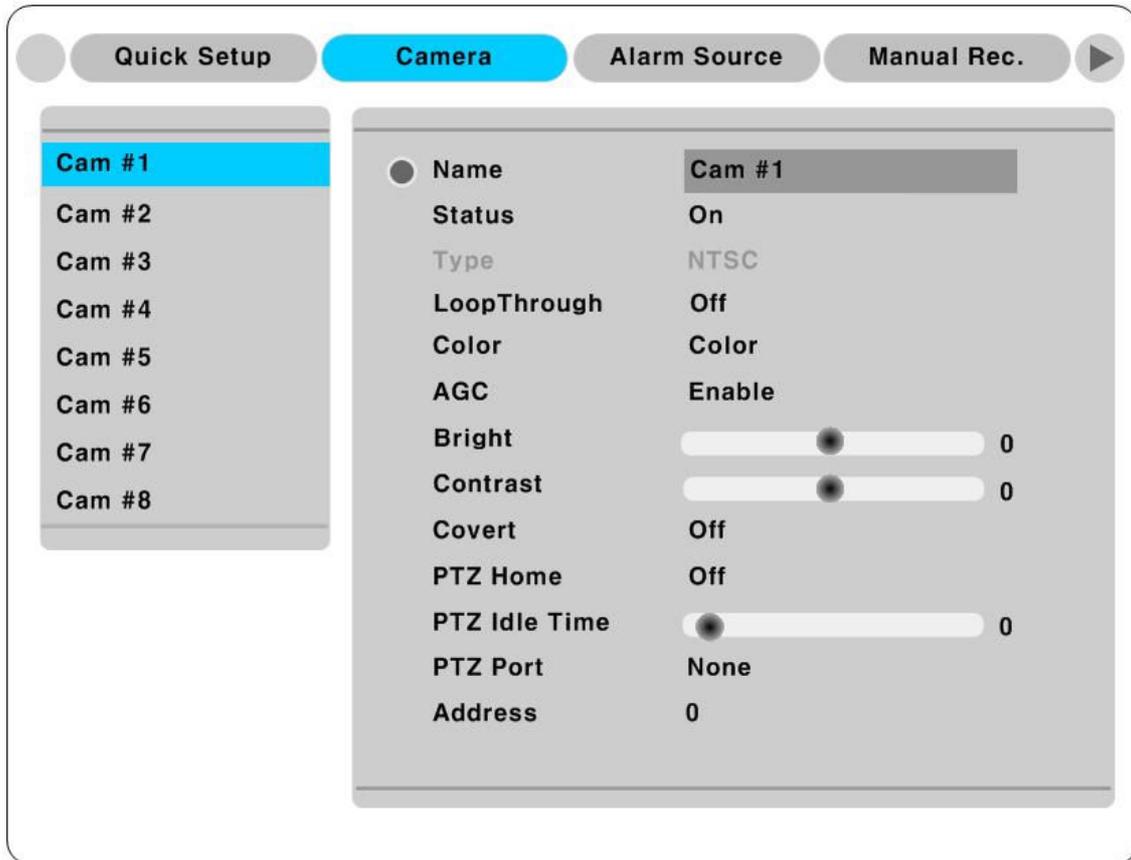

<Button Input order>

- After pressing [MENU], shift to “Cam # 1~Cam #8” inferior menu of “Camera”.

Name


Set Camera name.

Press [ENTER] to display the letter set menu.

<TIP>

Display Letter input window to input characters.

According to menu, letter input window can be different, but Set is the same.

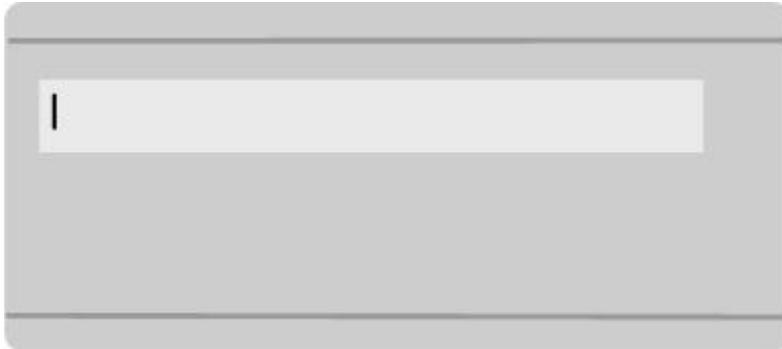

- Use direction key for letter input.
- Select letter using [▲/▼] button.
- Press [▶] to input after select the input letter.
- Press [◀] to Shift back and delete.
- Available letters
 - Digit : 1 2 3 4 5 6 7 8 9 0
 - Capital letter : A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
 - Small letter : a b c d e f g h i j k l m n o p q r s t u v w x y z
 - Special letter : () - . \$ # @

Status

Press “On/Off” using [◀] or [▶] button after pressing [ENTER] button. To raise frame rate while recording or network monitoring, turn off the unusing channels, Refer to Recording section.

Type

This is shown the video signal(NTSC/PAL) input only, and its setup is carried through Jumper in HVRM-D800E. When booting HVRM-D800E, it will automatically recognize video signal from first recognized video signal set by examing from ch 1 to 8. If there is no video input connection, it will follow Jumper set.

LoopThrough

The menu is to On/Off Loop output of video input.

After press [Enter] button, it sets “On/Off” using [◀] or [▶] button.

Color

Set “Color / B/W” using [◀] or [▶] button after pressing [ENTER] button.

AGC (Auto Gain Control)

Set "Enable/Disable" using [◀] or [▶] button after pressing [ENTER].

Brightness/Contrast

Select the value from "-9" and "+9" using [◀] or [▶] button after pressing [ENTER].

Covert

Covert On will hide the channel at Monitoring mode.

Select "A / B / Both / Off" using [◀] or [▶] button after pressing [ENTER].

PTZ Home/PTZ Idle Time

Shift to Preset assigned if it has no movement in certain time while PTZ control

Set Preset number and Time using [◀] or [▶] button after pressing [ENTER].

PTZ Port


Set PTZ port connected to relevant channel by using [◀] or [▶] button after pressing [ENTER].

Address

When press [ENTER], Letter Input window will be displayed to set base address of PTZ device.

16.3. Manual Recording setup

This menu is to set video recording condition by user when pressing [Enter/Rec] button. If manual recording starts, Normal Rec & Event Rec is ignored and it records based on user recording setup.

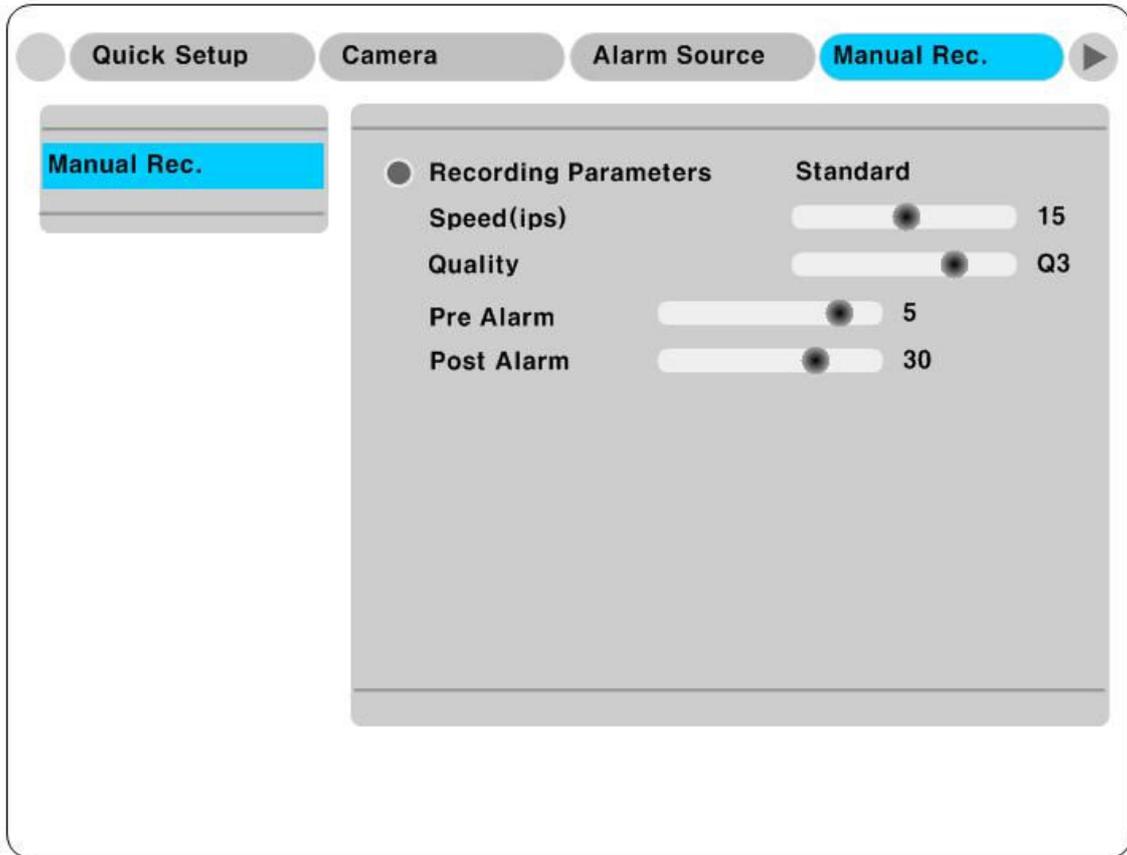

Recording Speed/Quality

There are all 4 setup conditions. (No Rec/Low/Standard/High/Custom). Setup condition except “Custom” will synchronize “Speed(ips)” and “Quality” automatically.

Pre Alarm (sec)

It can set max. 5 seconds.

Post Alarm (sec)

It can set Continuous or maximum 60 seconds.

<Note>

1. In case of set ‘No Rec.’ in Schedule Rec., it records as a set of Pre Alarm. While Schedule Recording, it records Pre Alarm section in speed (ips) of a set Schedule Rec.
2. When Post Alarm is set to Latched, it maintains user recording continuously till the stop pressing [REC] button by user.

16.4. Schedule Recording Setup

This recording is to set the recording conditions by Channel and Time schedule. After “Quick Setup” set, it is changed to new set value from previous value set if the set is changed at this manu.


<Note>

D800E has the function to give recording capacity in a lot to the specific channel.

- For example, when select Resolution D1 at the time of using al lchannels of D800E, maximum capable setup Frame Rate is NTSC(15)/PAL(12.5). But if set Off some camera menu and/or setup lower Frame Rate, it can set to maximum resolution D1, Frame Rate NTSC(30)/PAL(25) for specific channels.
- Among 4 Schedule zone & Alarm Rec, Manual Rec by each channel, it calculates maximum Frame Rate by the biggest value of resolution. If the set value exceeds maximum frame rate, it informs through message box.

16.4.1. Global Setup


It is similar to Quick Setup recording, and it set to same conditions of all analog channels at every hours.

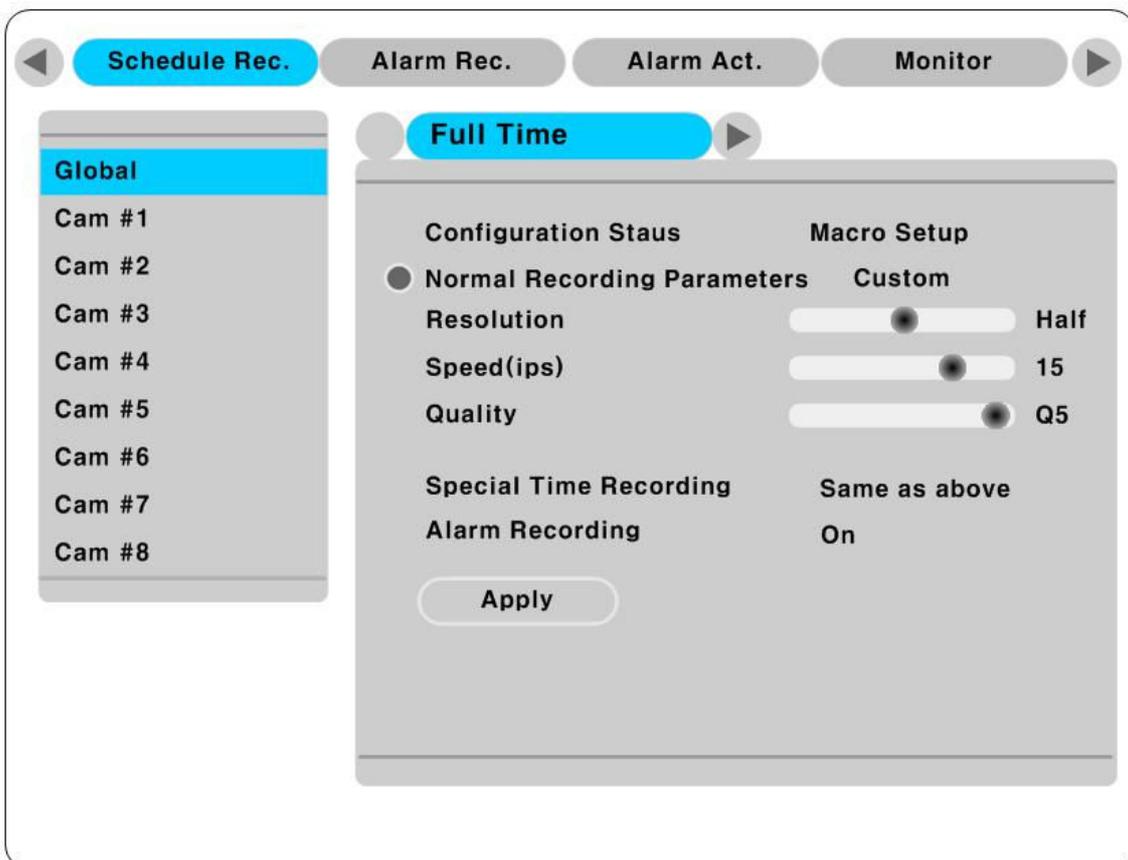

<Note>

1. The difference of recording setup in Quick Setup is that there is no audio recording setup, and sets whether Special Time Recording & Event Recording sets or not.
2. What Alarm Recording Off is set, Alarm Rec. menu is not available. To set Alarm Rec. menu, Alarm Recording of Recording menu should be set to “On” and press “Apply” to complete setup.
4. Refer to the following **Setup by Channel** how to set in detail.

16.4.2. Setup by Channel

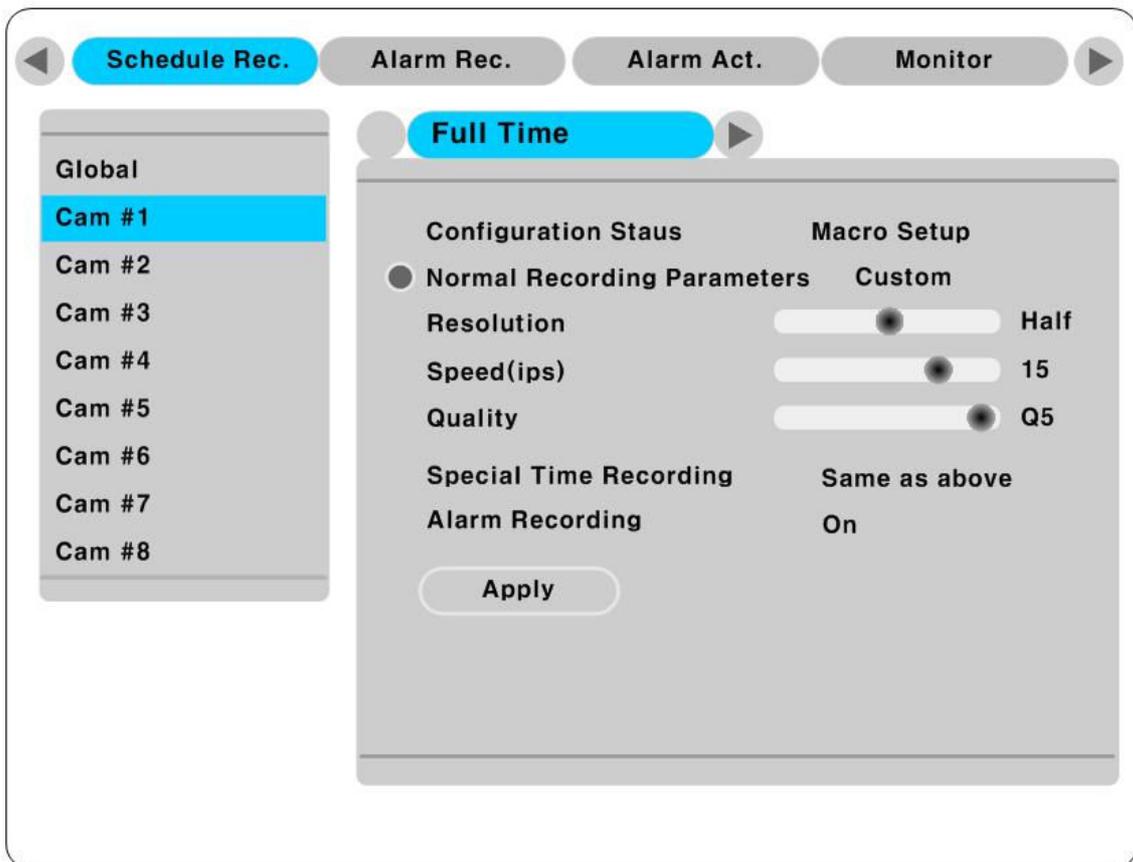


Time Schedule

It sets recording condition based on every time schedule. Time period can be set 4 districted areas, Full Time, Weekday (Day)/Weekday (Night)/Weekend (Day)/Weekend (Night). Day & Night, Weekday & Weekend can be set from “System” menu.

<Time Schedule Setup>

Shift to "System" menu to set Time Schedule.

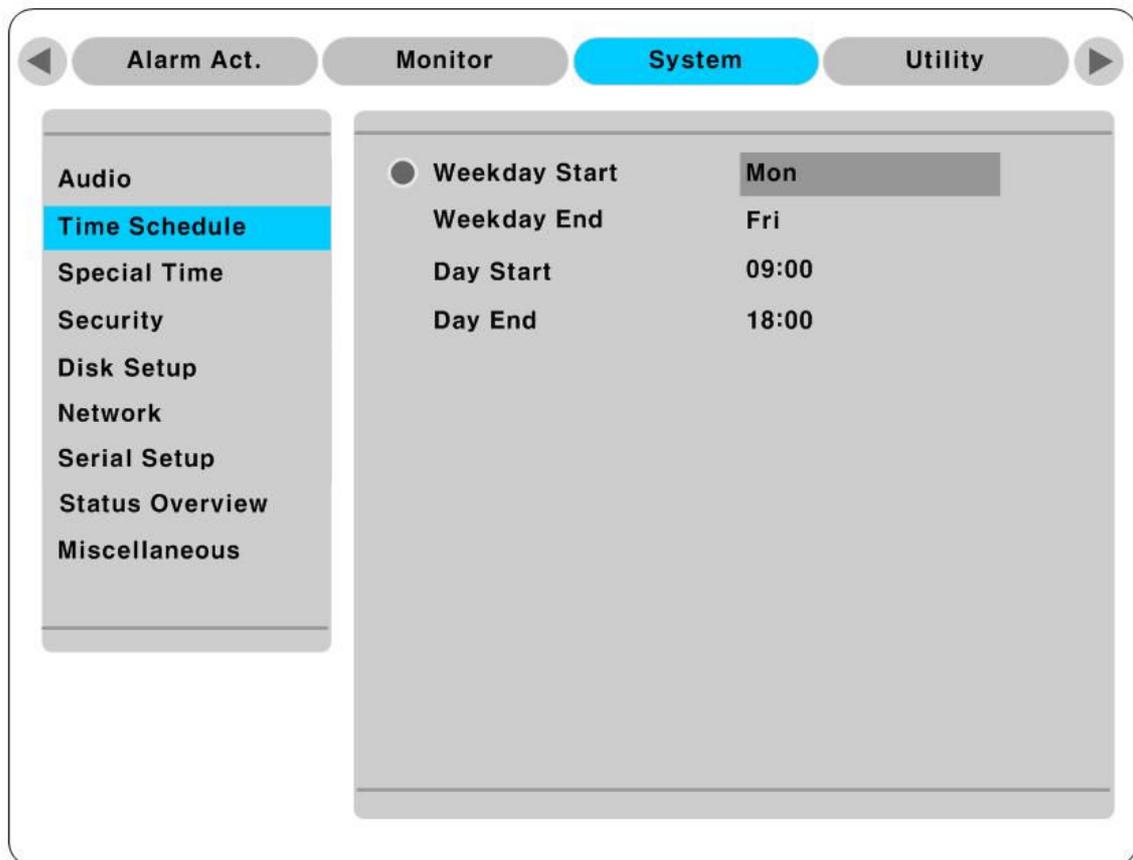

Weekday Start/End

Set Time zone from Monday to Sunday using Left, Right key button. The unset zoon can be set to Weekend time zone.

Day Start/End

Set Day time zone using Up, Down button. The unset zoon can be set to Night time zone.

Recording Speed/Quality

There are all 5 setup conditions. (No Rec./Low/Standard/High/Custom).

Setup condition except "Custom" will synchronize "Speed(ips)" and "Quality" automatically.

Resolution

There are all 3 conditions. (CIF/HALF/D1).

At this menu, resolution set is applied to every User recording, Event recording.

- CIF : 360x240 @ NTSC, 360x288 @ PAL
- HALF : 720x240 @ NTSC, 720x288 @ PAL (HALF D1)
- D1 : 720x480 @ NTSC, 720x576 @ PAL (FULL D1)


Special Time Recording

This menu is to differentiate recording conditions by setup of specific time zone. Namely, if it sets to day time in workday, it can record according to 2 type setup condition. Specific time sets from 'System' menu.

There are 5 setup conditions; No Rec./Low/Standard/High/Same as above (Apply same value with "Recording Speed/Quality" value.).

< Specific Time Zone Setup >

Shift to "System" menu to set Specific Time zone.

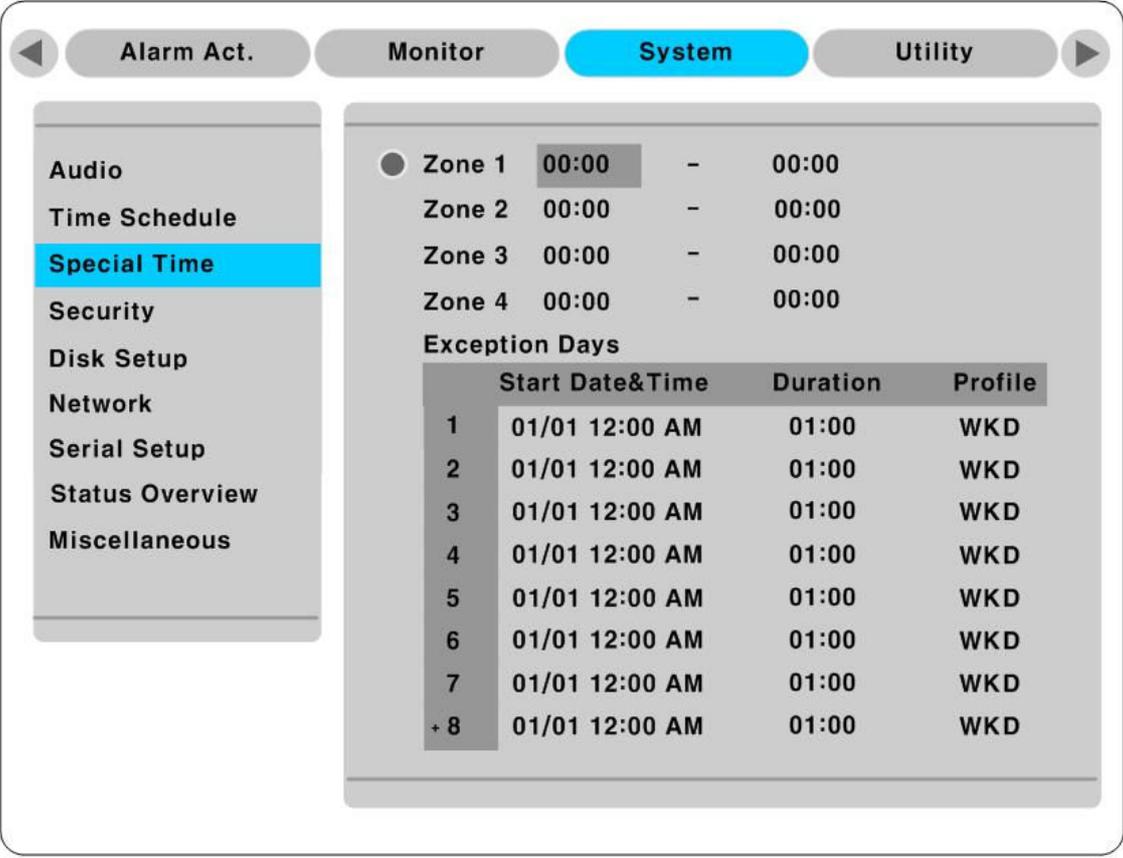

The screenshot shows a menu with four tabs: Alarm Act., Monitor, System (selected), and Utility. The left sidebar lists various settings: Audio, Time Schedule, Special Time (selected), Security, Disk Setup, Network, Serial Setup, Status Overview, and Miscellaneous. The main area displays the 'Special Time' configuration. It shows four zones, each with a radio button and a time field. Below this is an 'Exception Days' table.

	Start Date&Time	Duration	Profile
1	01/01 12:00 AM	01:00	WKD
2	01/01 12:00 AM	01:00	WKD
3	01/01 12:00 AM	01:00	WKD
4	01/01 12:00 AM	01:00	WKD
5	01/01 12:00 AM	01:00	WKD
6	01/01 12:00 AM	01:00	WKD
7	01/01 12:00 AM	01:00	WKD
+ 8	01/01 12:00 AM	01:00	WKD

Max. 4 specific time zones can be set.

Event Recording

After pressing [ENTER] button, set “On/Off” using [◀] or [▶] button. Detailed Alarm recording conditions sets from “Alarm Recording” menu. Here only can set recording according to alarm recording setup.

16.5. Alarm Recording Setup

This menu is to set Alarm Recording condition. After setup Recording condition, “Event recording” menu from “Recording” must be “On” to setup Alarm recording in HVRM-D800E. Also, before setup Alarm recording, “Alarm Source” must be set.

16.5.1. Sensor Setup

This menu is to set existence of sensor and type of sensor. It support 2 type sensors, Normal Open(N.O.) and Normal Close(N.C.)



Global


It set all sensors same together. After select among Off/N.O./N.C., and press “Apply” to activate.

Configuration

It can set 8 sensors (S1~S8) separately.

16.5.2. Motion Detection Setup

This menu is to set MD of each channel. Global sets all channels (Cam #1~Cam#8) in the same together, and setup can differ separately.

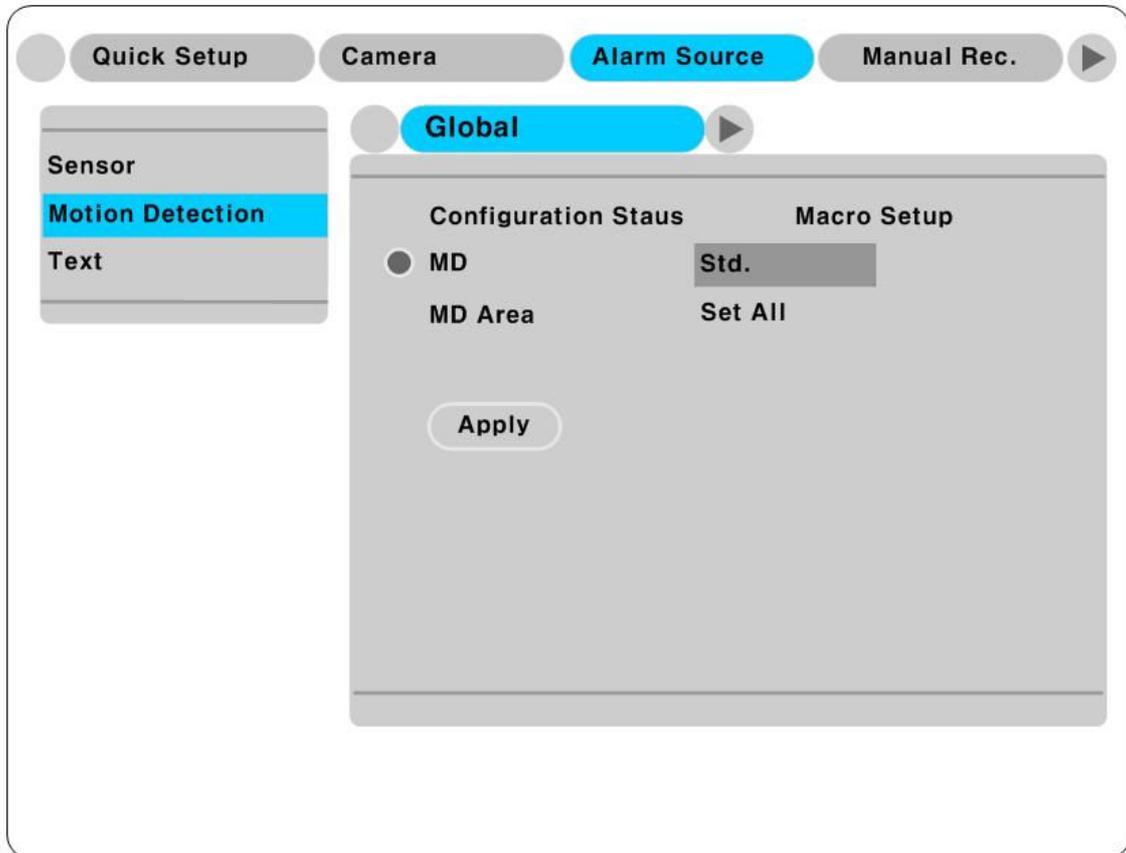

Motion Detection

It sets 4 different sensitivity of MD; Off, Lowest, Low, Std, High, Highest.

MD Area

It sets MD zone. 330(width 22 x height 15) zone is selected by "Set All" and release it with "Clear All".

<Note>

To set Global, press "Apply". Other will be not applied.

16.5.2.1. Motion Detection Setup by Channel

MD setup by channel is same as Global setup. And it can set MD zone additionally when MD sets by channel.




Custom Area

It sets MD zone by user **NTSC 22x15, PAL 22x18**

First default value is set to "Select All". If "Custom Area" pressed, Window for MD zone setup is opened.

< MD Zone Setup >


It can set MD zone by user directly.

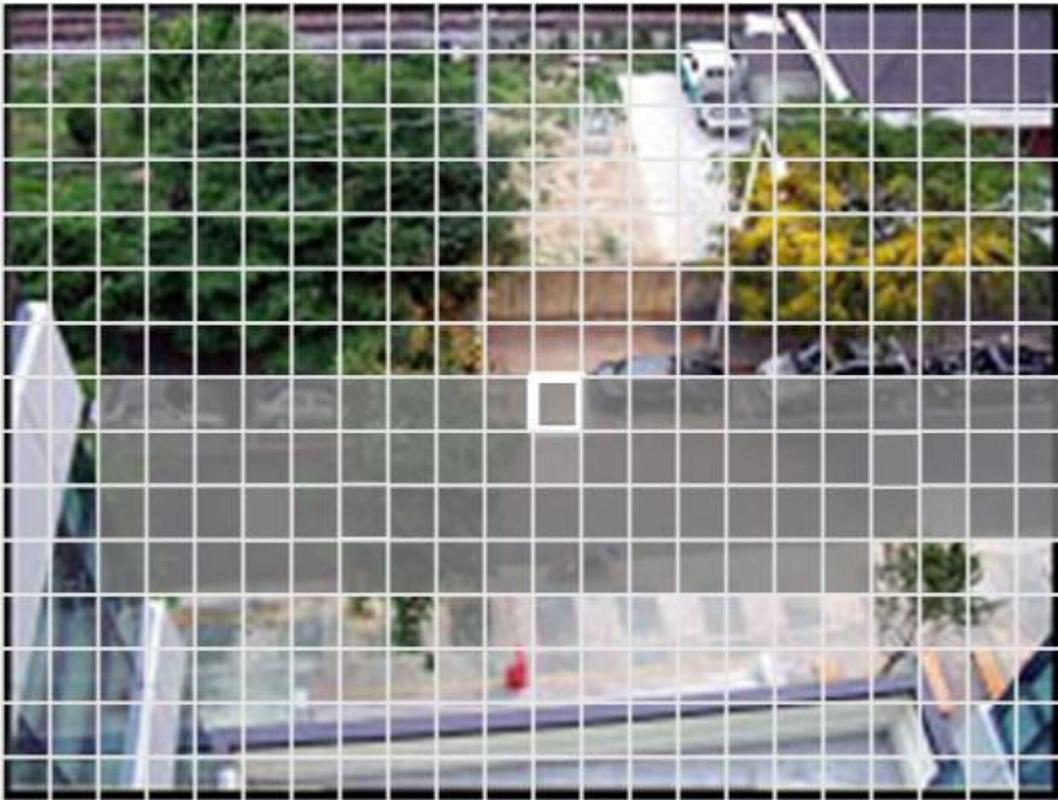

If "Custom Area" is pressed, sell **NTSC 22x15, PAL 22x18** for setup is displayed. Selected MD zone is in grey color. To select MD zone, use direction key for the wanted zone and press "ENTER" to apply. After selection, press "EXIT" to return previous menu.

16.5.3. Text Setup

This menu is to set text data input. It has to be set COM1 part from “System -> Serial Setup” menu on OSD.

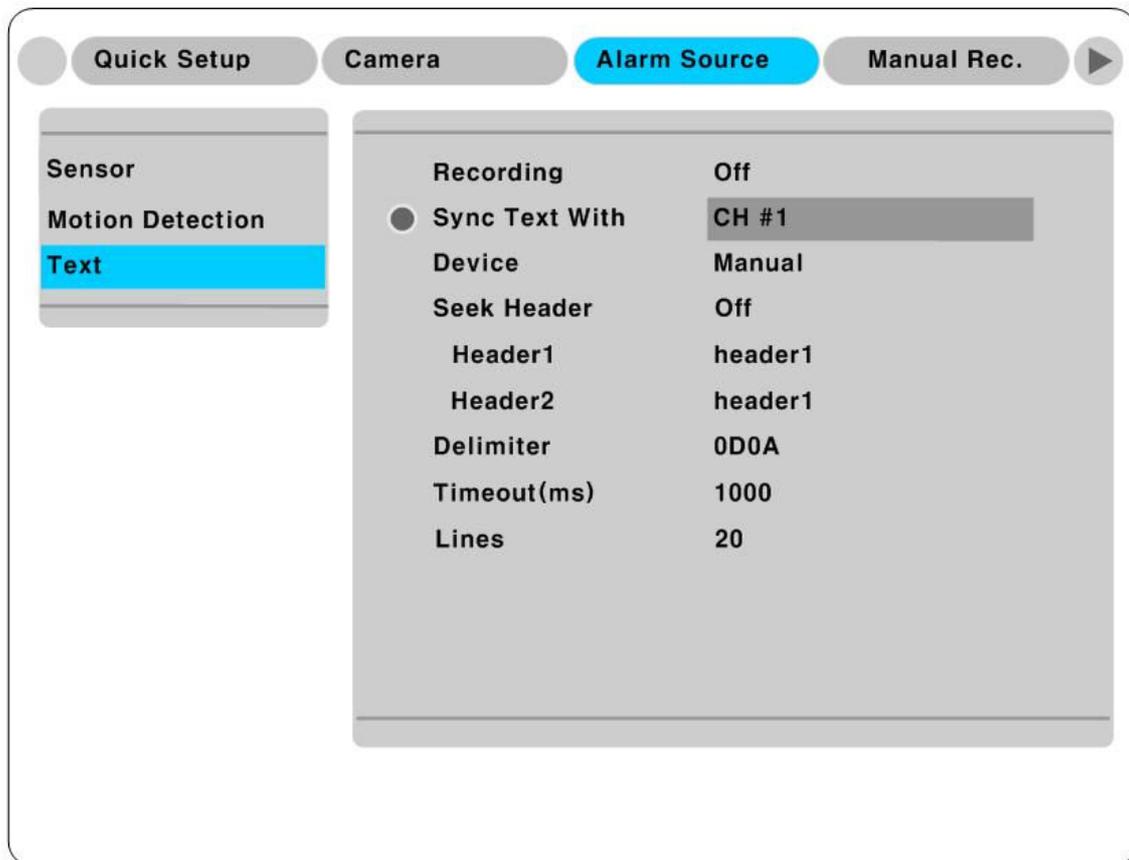

Recording

It is On or Off to save the Text input.

Sync Text With

Select the channel synchronize with Text data.

Seek Header

It has the various type of data input from the external device (Access Control, POS, ATM etc). Like Star Finger 007, it is not needed when the protocol of these device have implemented on the device. If not, this is the parameter to analyze how the one of data is constructed from the text data that is input continuously. Namely, all data has the first and the end. Header indicates the information that already inserts to inform its starting. Therefore, Header information is defined here to acknowledge its starting of a data. The reason of 2 Header is to detect maximum 2 data out because each device can output various datas.

Delimiter

Value of Delimiter can be different according to every device. Refer to their manual or inquire it to purchasing stores of its model.

Timeout(ms)


Following lines defined here means maximum number of text line from one data. Even if there is standized data, there can be a short and long data. For example, there are 3 lines to write names on ATM. But some may need only First name & Last name to register. Which it means requires only 1 shorter than other ATM users. It is to decide the last line of the one data register as final complete data to save after an hour's consideration of register later because HVRM-D800E can not recognize it automatically.

Lines

It defines how maximum many lines is structed by a data.

16.5.4. Global Alarm Recording

Set all analogue channels in same condition.

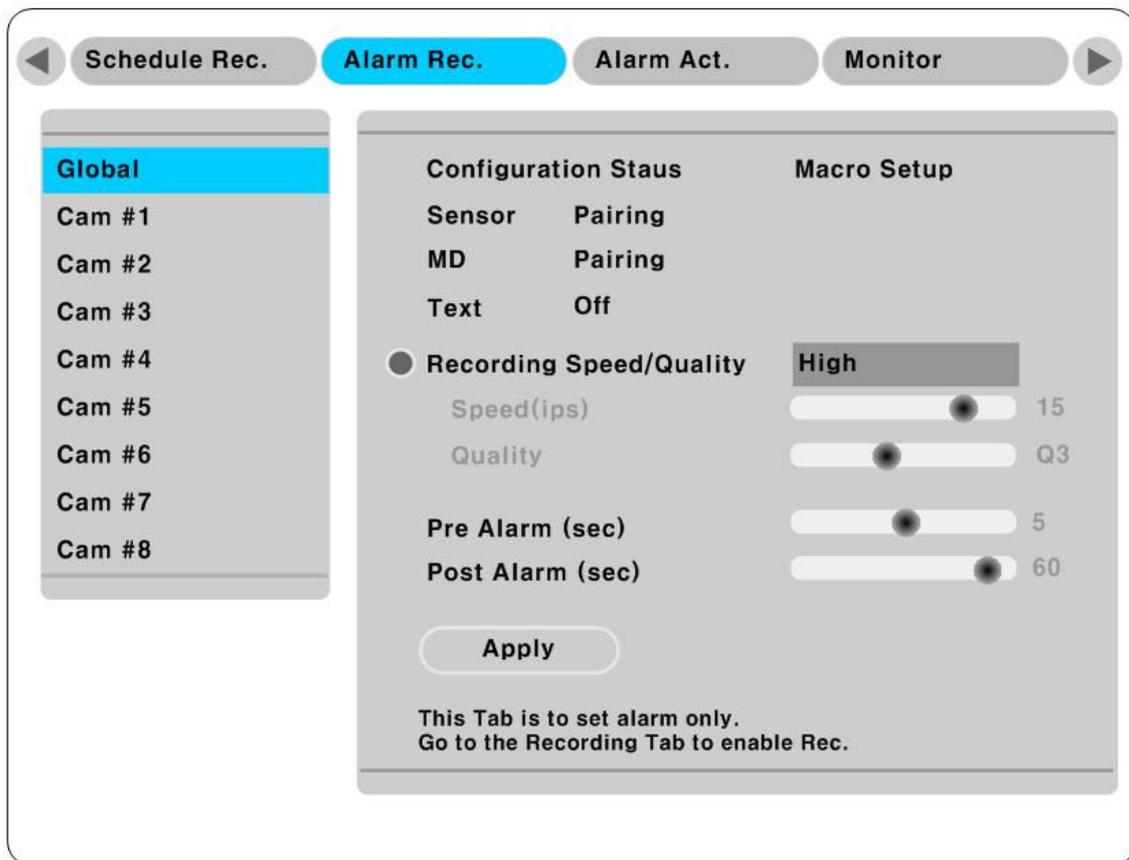

Sensor/MD

Set synchronizing with Sensor/MD.

Pairing means 1:1 synchronization between the channel and Sensor/MD.


Text

When set "On", it deals text input of relevant channe as Alarm Event and is saved.

<Note>

1. To apply Global setup, press "Apply" button.
2. Refer to following Setup by channel for the details.

16.5.5. Setup by Channel

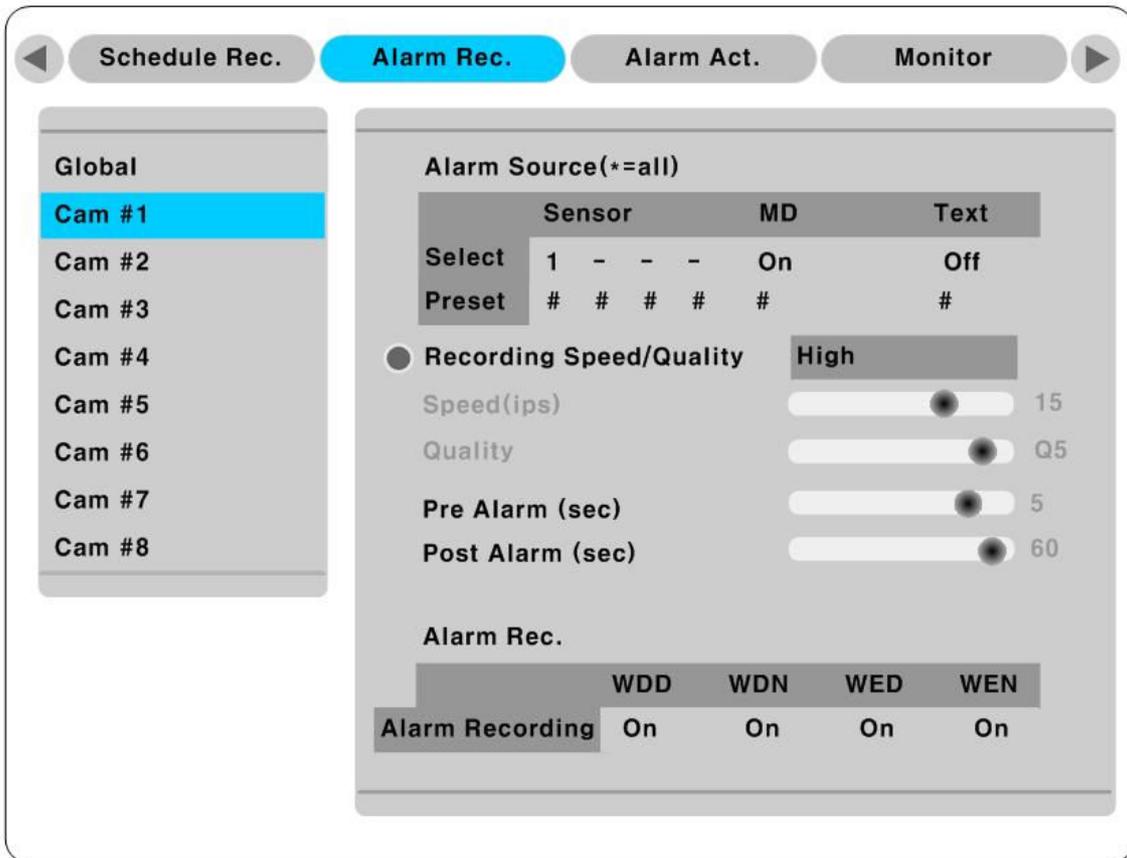

Alarm Source (*=All)

- Through Alarm Source, 4 Sensors and 1 MD, Text input is selectable.
- Selection of Sensor is set by pressing relevant number button.
- Selection of MD, Text can be On/Off by directional key.
- Select Preset of PTZ by relevant Alarm input.

<Note>

1. * : Press ▷ button.
2. - or # : Press number 0 button.

Recording Speed/Quality

There are all 4 conditional setup (No Rec/Low/Standard/High/Custom).

Except “Custom”, Setup condition will synchronize “Speed(ips)” and “Quality” automatically.

Pre Alarm (sec)

It can set max. 5 second.

Post Alarm (sec)

It can set max. 60 seconds.

<Note>

1. In case of set 'No Rec.' in Schedule Rec., it records as a set of Pre Alarm. While Schedule Recording, it records Pre Alarm section in speed(ips) of a set Schedule Rec.
2. When Post Alarm is set to Latched, it maintains user recording continuously till the stop pressing [REC] button by user.

Alarm Recording Status

It can check ON/OFF of Alarm Recording menu in Schedule Recording setup.

16.6. Alarm Action Setup

According each Time schedule, it sets Relay action. It sets to 5 different time period, Full Time, Weekday(Day), Weekday(Night), Weekend(Day), Weekend(Night). After Schedule setup, it sets Relay, Buzzer, Email etc to operate Alarm action.

16.6.1. Schedule

	Sensor	MD	Text
R1	ANY	1,2,3,4,	Off
R2	3,4,5,6	3,4,5,6,	Off
R3	2,4,6,8,	2,4,6,8,	Off
R4	5,6,7,	5,6,7,	Off
Buzzer	ANY	ANY	Off
E-Mail	ANY	ANY	Off

Select Action Source

Sensor and MD can be set max 4 or ANY for Relay1~Relay4, Buzzer, E-mail. Text can be set On/Off. Selection of Sensor/MD is done by pressing relevant number button.

<Note>

1. ANY : Press ▷ button.

Special Time

It selects whether it apply specific time period that is set.

<Note>

1. Global Setup is to apply Time Schedule to all at same.
2. Press “Apply” to apply Global setup.

16.6.2. Setup

The screenshot shows a web interface for configuring alarm settings. At the top, there are four tabs: "Schedule Rec.", "Alarm Rec.", "Alarm Act." (which is selected and highlighted in blue), and "Monitor". On the left side, there is a sidebar menu with three items: "Schedule", "Setup" (which is highlighted in blue), and "System Alarm". The main content area is titled "Relay Configuration (Sec)" and contains the following settings:

<input checked="" type="radio"/> R1	Off	R2	10
R3	10	R4	10
Buzzer	10		
E-Mail Addr.	sales@webgateinc.com		
Sender Addr.	sales@webgateinc.com		
Sending Interval(min)	Off		

Relay Configuration

Set the use or not for R1~R4.

Buzzer

Set the use of Buzzer or not.

E-mail Addr.

Input E-mail address to inform Alarm.

Sender Addr.

Input "Sender" address in the typr of who@where.

Mail Duration (min)

E-mail notification is to send message in terms of Mail Duration set, but not every time that Alarm is occurred. It can be set from 1 to 30 minutes.


<Note>

Network setup is set to DNS for E-mail notification.

16.6.3. System Alarm

16.6.3.1. System Alarm Setup

It is to set ON/OFF of Alarm for the notification of system faulty.

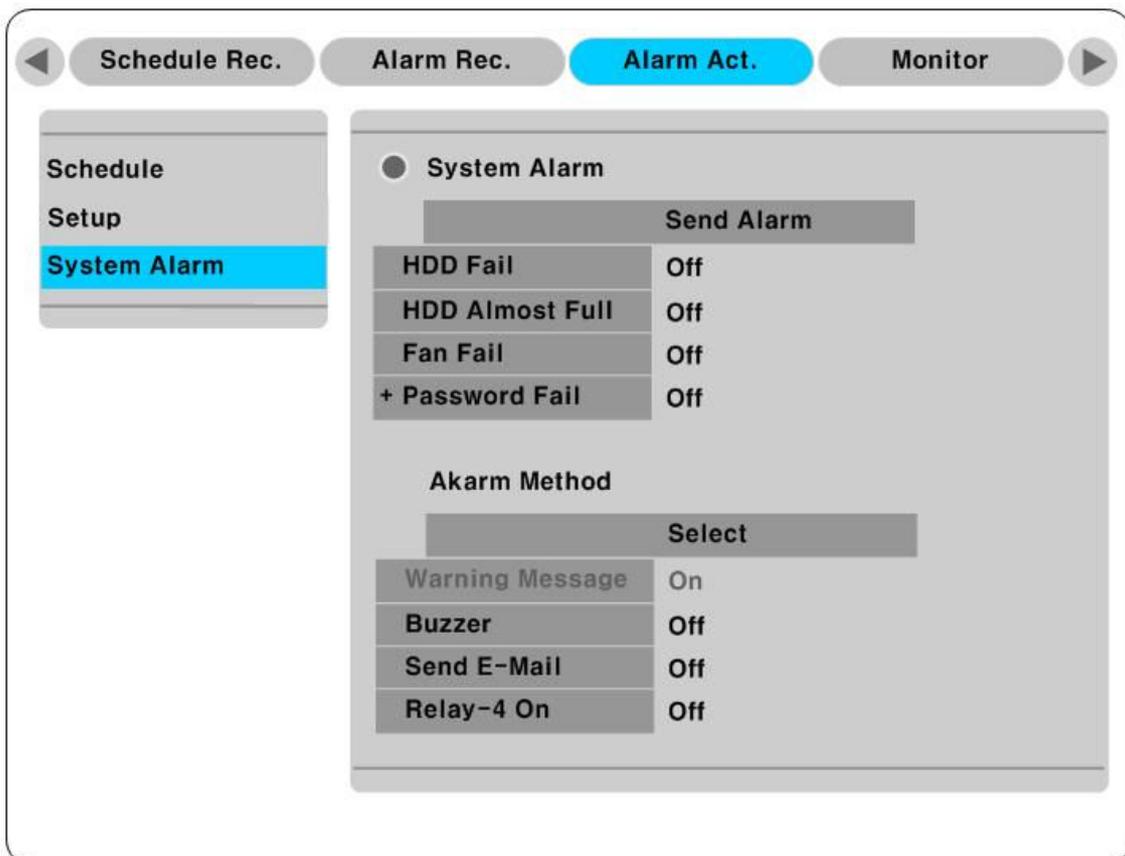

HDD Fail

Alarm action is operated when HDD disconnected or abnormal action.

HDD Almost Full

It operates alarm action when connected HDD is almost full.

Fan Fail

It operates Alarm action when malfunction of FAN connected to HVRM-D800E.

Fan Fail remains Off always..

Password Fail

It operates Alarm when wrong User or Admin password input.

WRS Reg. Fail

It operates Alarm when disconnection of WRS.

16.6.3.2. Alarm Method Setup

It is to set ON/OFF of Alarm when system alarm is occurred.

Warning Message

When setup this menu, it display warning message through pop-up.

Warning Message remains On always..

Beep

When set this menu, it sounds Beep.

Send E-Mail


When this menu is set, it sends email to the address input.

Select Relay

It operates Relay selected from 1~4 relay.

16.7. Monitor Setup

It sets the monitor for the display of video from monitor.

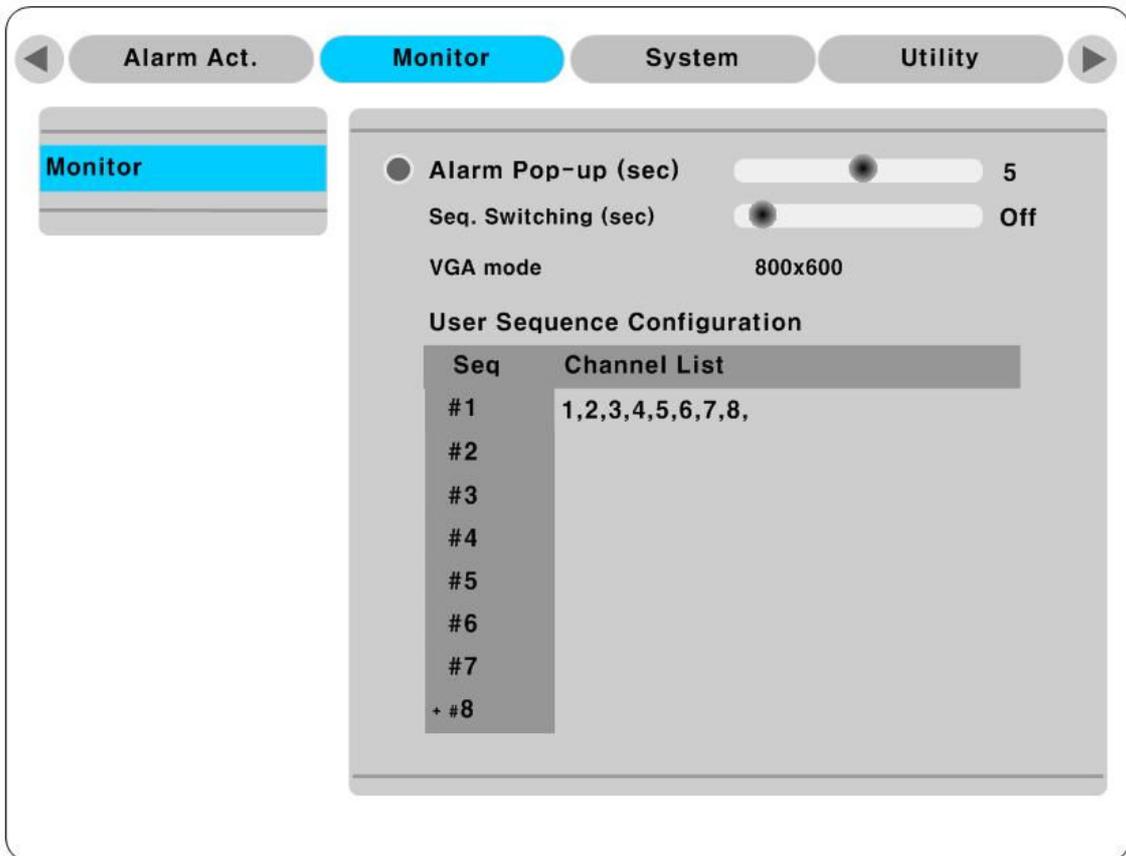

Alarm Pop-up (sec)

It sets auto Pop-up display for the alarm. Pop-up display time can be set from 5~10 second. If it sets to “Keep”, it keeps to display Pop-up image and press any button to release Keep mode.

Seq. Switching(sec)

It sets auto switching from 1 to 60 seconds.

<Note>

If no. 2 channel pop-up again within a few time passed after no. 1 channel pop-up, it is changed to 4 division and shows 1, 2 channels. And the holding time from the last pop-up time is extended automatically.

VGA mode

VGA mode can be changed to 3 different modes.

800 x 600 / 1024 x 768 / 1280 x 1024

User Sequence Configuration

It can edit Auto transmit function for user mode.


<Attention>

1. It can define all 16 user mode.
2. The picture for example defines 6 Sequences in order as shown 4 division(1,2,3,4) → Full mode(1) → 4 divisions(5,6,7,8) → Full mode(5) → Full mode(8) → 9 divisions(1,2,3,4,5,6,7,8)

16.8. System Setup

16.8.1. Audio Setup

HVRM-D800E supports 1channel Audio recording. But it operates with any channel when video playback.

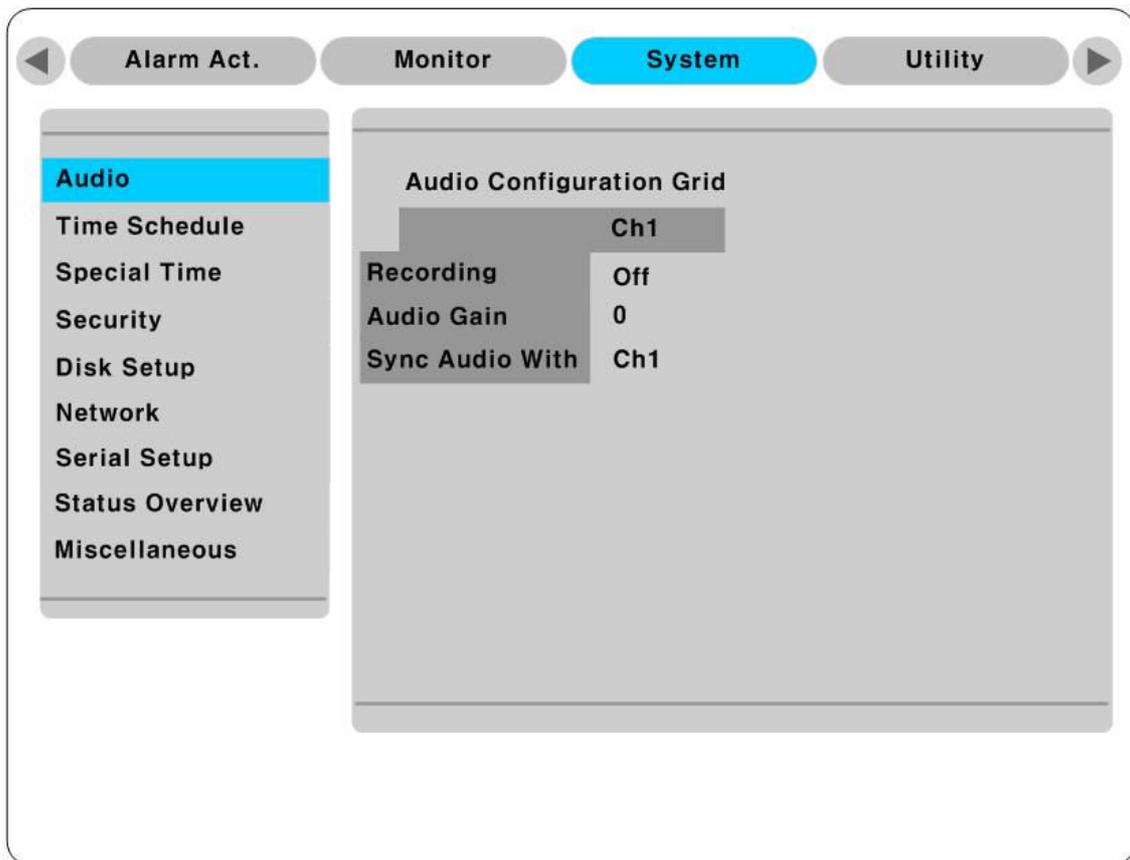

Recording

It sets whether Audio records or not.

Audio Gain


It is possible to set from -7 to +8.

Sync Audio with

When playback recorded image, it sets which it works together.

16.8.2. Time Schedule Setup

It sets the time period from Week & Weekend, Day and Night.

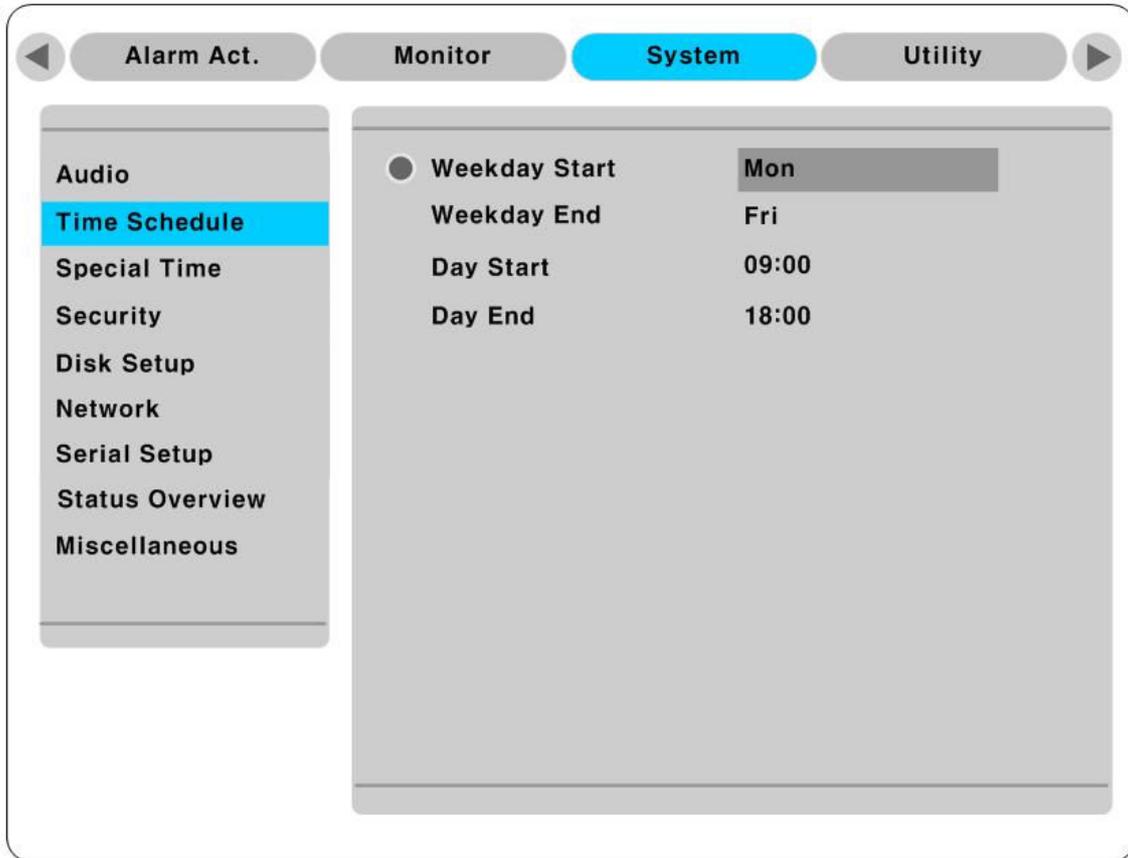

Weekday Start/End


Using Left, Right key sets the time period from Weekday. Other unassigned time is for the Weekend.

Day Start/End

Using Up, Down button sets Day time period. Other time is applicable to the Night time.

16.8.3. Special Time

It can set another specific time zone in each time zone(Week day, Week night, Weekend day and night), For example, various conditions setting separately such as mealtime or meeting time is applicable.

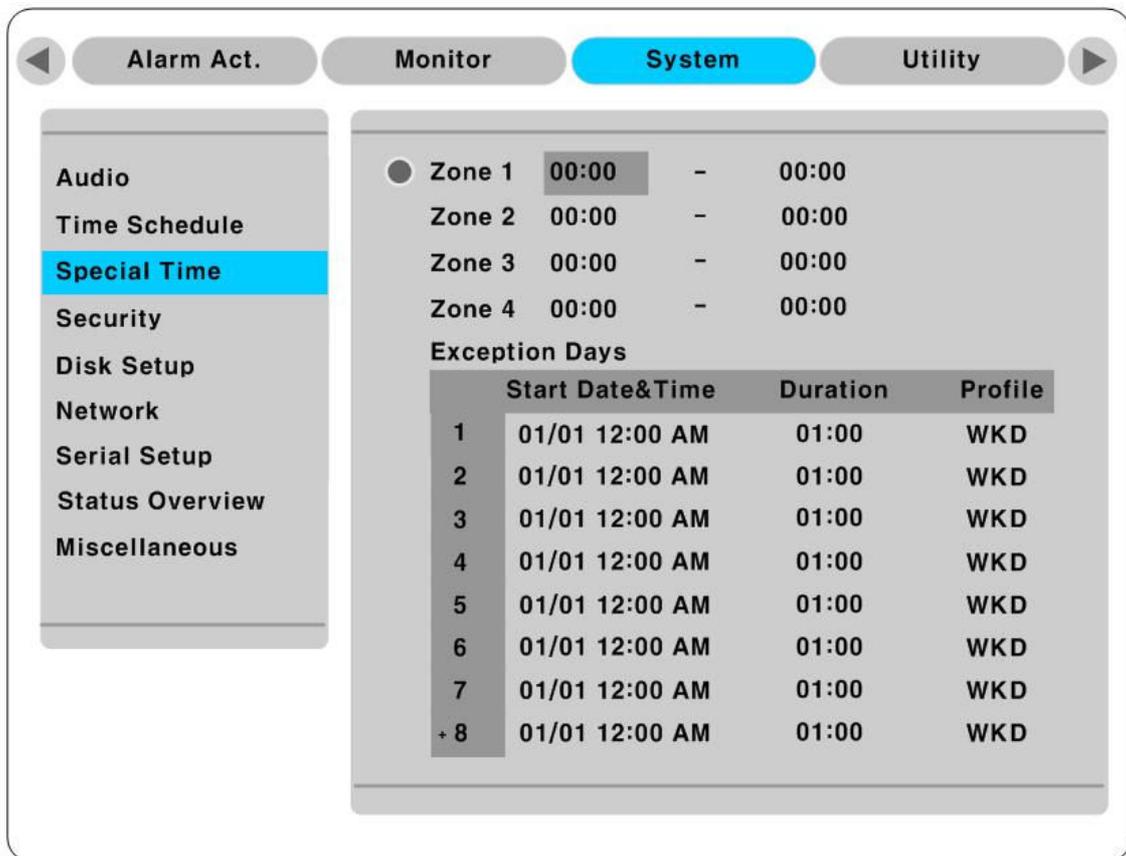

It used for the set of regular exceptional time. Max. 4 different specific time can set.


Exception Days

It used for the setup of irregular exceptional time, max. 30 time zones.

- Start Date&Time : Set Starting time.
- Duration : Set an interval of Exceptional time.
- Profile : Set the value of exceptional time zone.
(No Rec, Week day & night, Weekend day & night)

16.8.4. Security Setup

16.8.4.1. Local Password

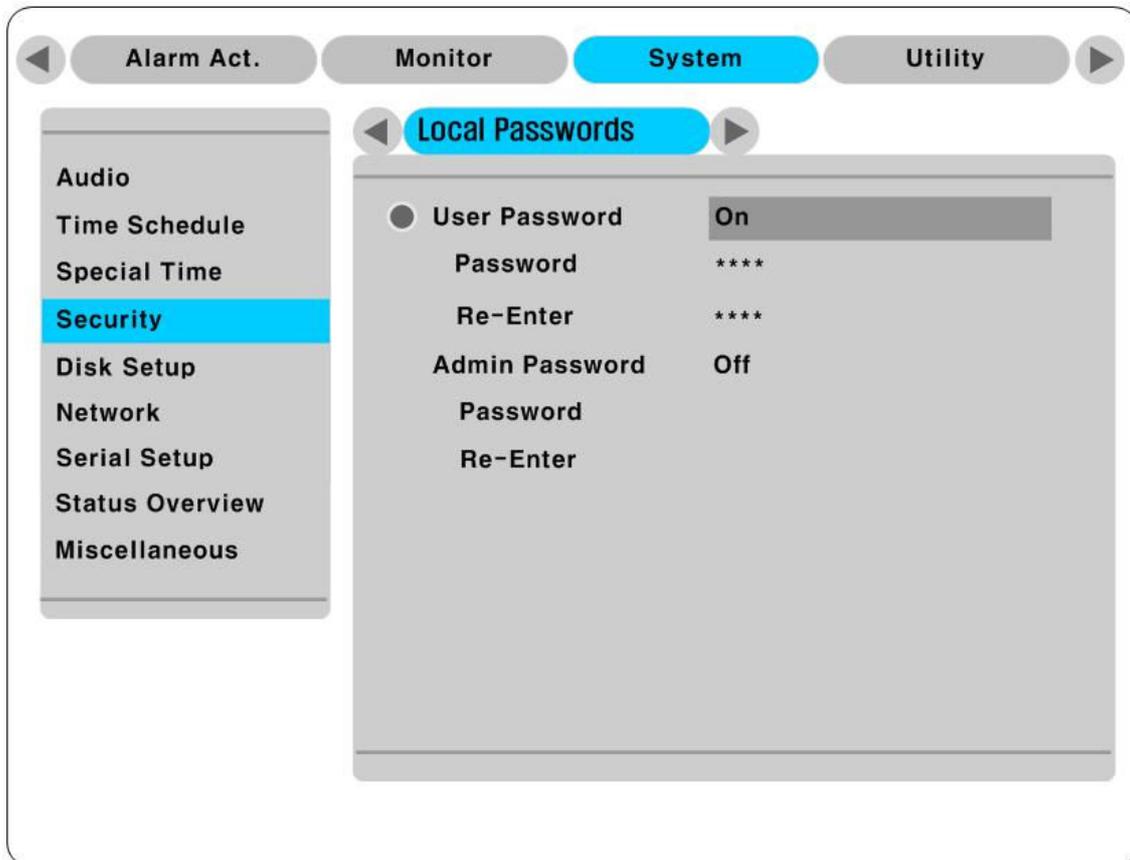

User Password

It is only capable of monitoring and playback only with user registry. Default set is "1111".

Admin Password

Authorized administrator can control every function. Default set is "8888".

16.8.4.2. Remote Users

The screenshot shows a web-based configuration interface for 'Remote Users'. At the top, there are four tabs: 'Alarm Act.', 'Monitor', 'System' (selected), and 'Utility'. Below the 'System' tab, there is a sub-tab 'Remote Users'. On the left side, there is a vertical menu with the following items: 'Audio', 'Time Schedule', 'Special Time', 'Security' (highlighted in blue), 'Disk Setup', 'Network', 'Serial Setup', 'Status Overview', and 'Miscellaneous'. The main content area is titled 'User Settings' and contains a table with the following data:

	Use	Name	PW	RL	PB
Admin	Y	admin	admin	Y	Y
User1	Y	user1		Y	Y
User2	Y	user2		Y	Y
User3	Y	user3		Y	Y
User4	Y	user4		Y	Y
User5	Y	user5		Y	Y
User6	Y	user6		Y	Y
User7	Y	user7		Y	Y
User8	Y	user8		Y	Y
User9	Y	user9		Y	Y
User10	Y	user10		Y	Y

Admin ID setup

Admin ID “admin” cannot be changed.

Password of admin is set and has all rights and unchangeable.


User ID setup

Max. 10 user’s ID can be set.

To register the user, change Use’s value to “Y” and input ID & password.

Basic value is available for all monitoring/playback/Relay.

16.8.5. Disk Setup

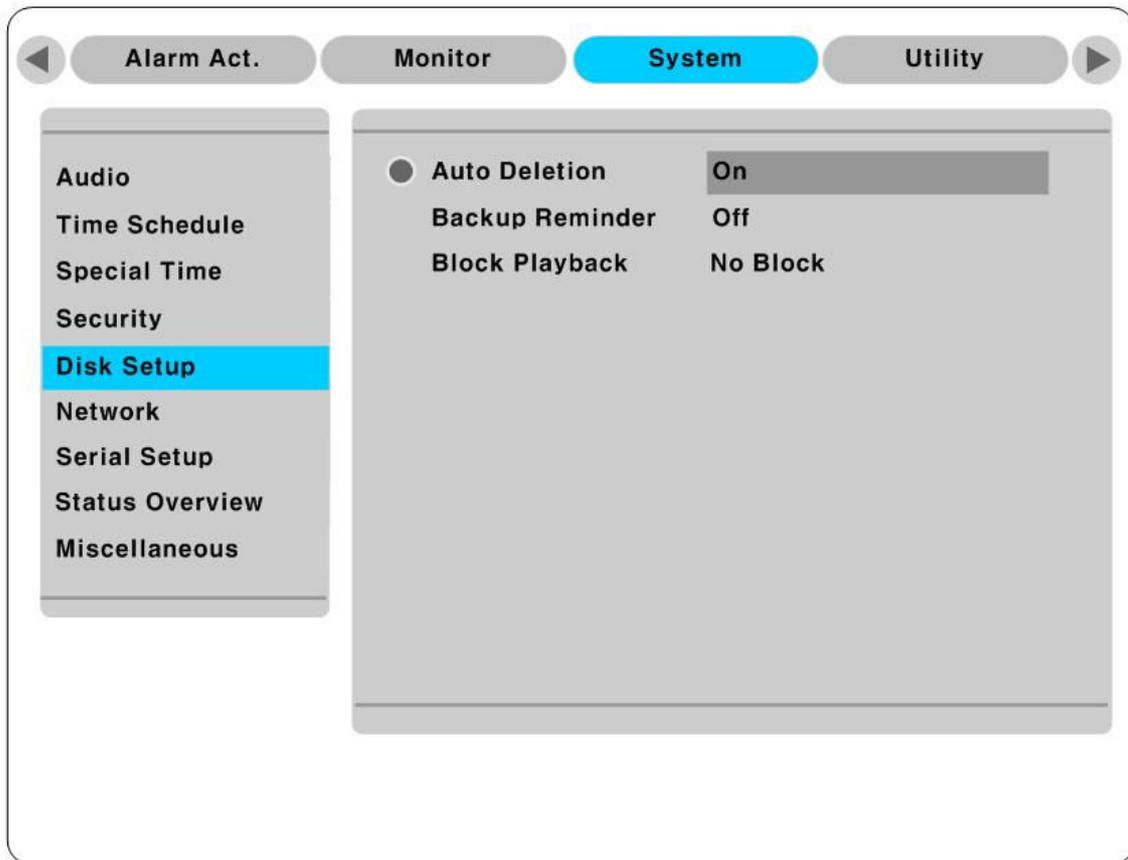

Auto Deletion

When no HDD space left for recording, it deletes the recorded data automatically.

Backup Reminder

This menu is to inform backup time by everyday, every week, every month.

Block PlayBack


This menu is to playback the recorded images from HDD in limited time. It can set from Day 1 to 31.

16.8.6. Network Setup

There are 5 Sub menus. ; Network, xDSL, WRS, Port Setting, NTP Setting

16.8.6.1. Network

When HVRM-D800E connects to network, it is to set relevant network information.

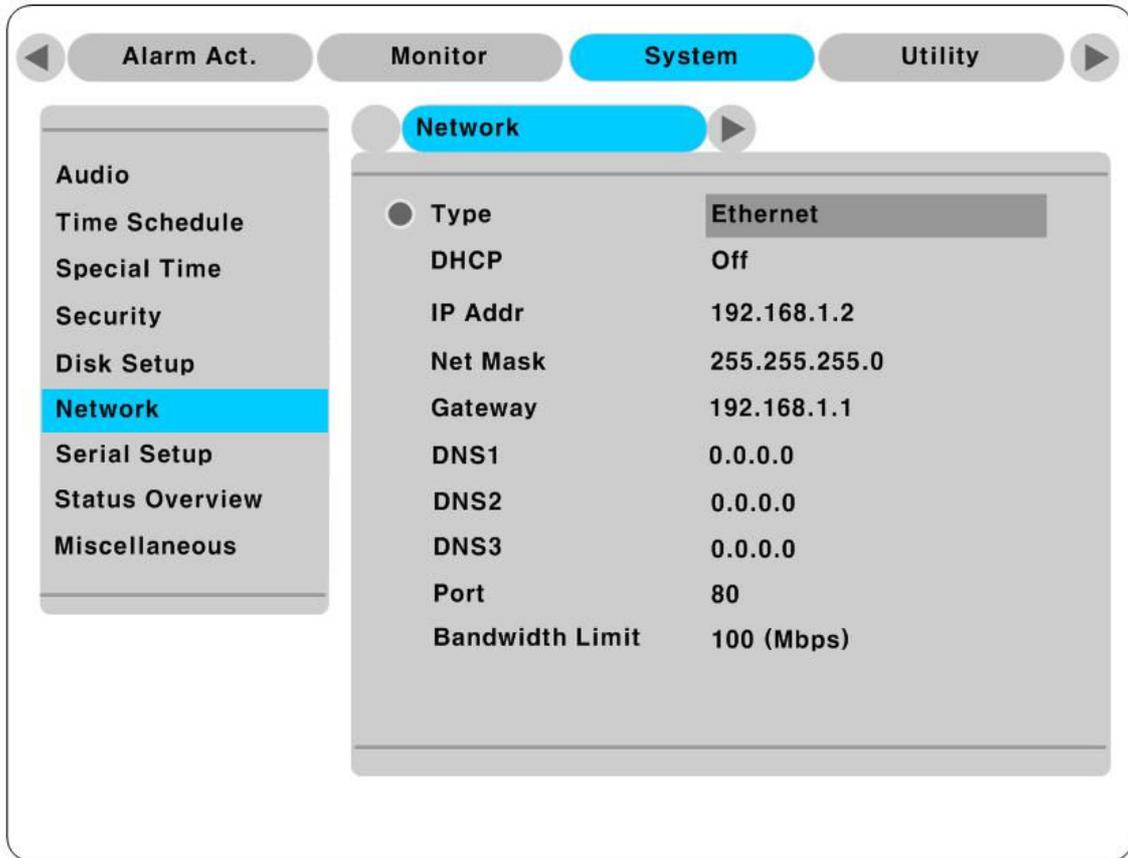

Type

It sets the type(Ethernet/xDSL) of network line connected to HVRM-D800E. It sets 'Ethernet' at the connection of network through leased line, Cable model or LAN based connection.

It sets to 'xDSL' when HVRM-D800E is connected to xDSL line of PPPoE method. But it sets to 'Ethernet' if it is not PPPoE method even if it is xDSL line.

DHCP

DHCP (Dynamic Host Configuration Protocol) is to manage HOST address in network. All Host connect to LAN using such network protocol can jointly own public IP address that is limited. Another means that all Host allocates public IP address temporary from DHCP server. If LAN has DHCP server and activates DHCP menu, DHCP server allocates public IP address to HVRM-D800E.


'DHCP' is used in LAN that DHCP server works. Normally, in mid or large scale, it operates DHCP server via LAN but generally use NAT (Network Address Translation) function via HUB in small.

IP Address, NetMask, and Gateway Address, DNS, Port, Bandwidth limit

It sets IP address, Network Mask, Broadcast address, Gateway , DNS address, and Port, Bandwidth limit.

16.8.6.2. xDSL

When HVRM-D800E is with xDSL line and PPPoE method, ID & Password should be setup.

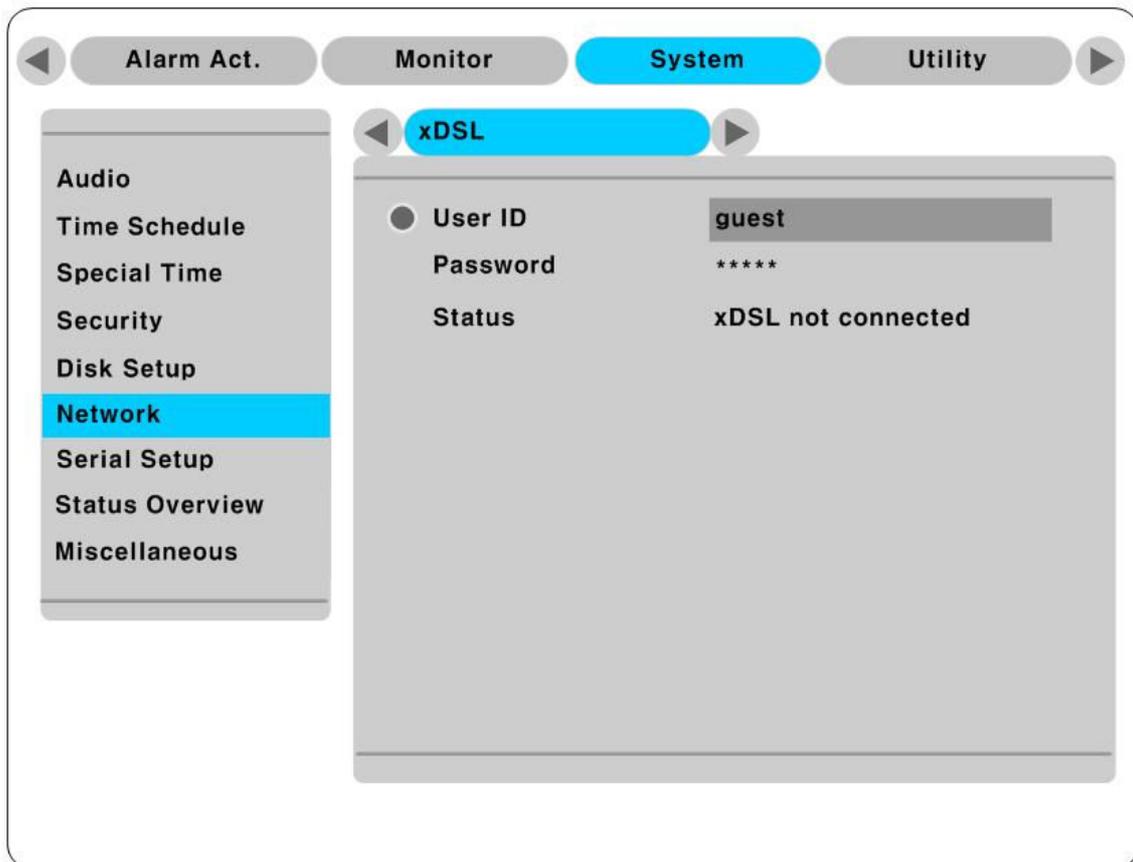

User ID/Password

Set ID & Password for HVRM-D800E in xDSL connection.


Status

It indicates the connection of HVRM-D800E.

16.8.6.3. WRS

If HVRM-D800E is connected to Cable modem or xDSL modem, IP address is changed at every connection to ISP. In this case, changed IP address can not be known. If HVRM-D800E using static IP register into WRS server, changed IP address can be known easily when it connects to HVRM-D800E.

To register Static IP to WRS, please refer the following to set.

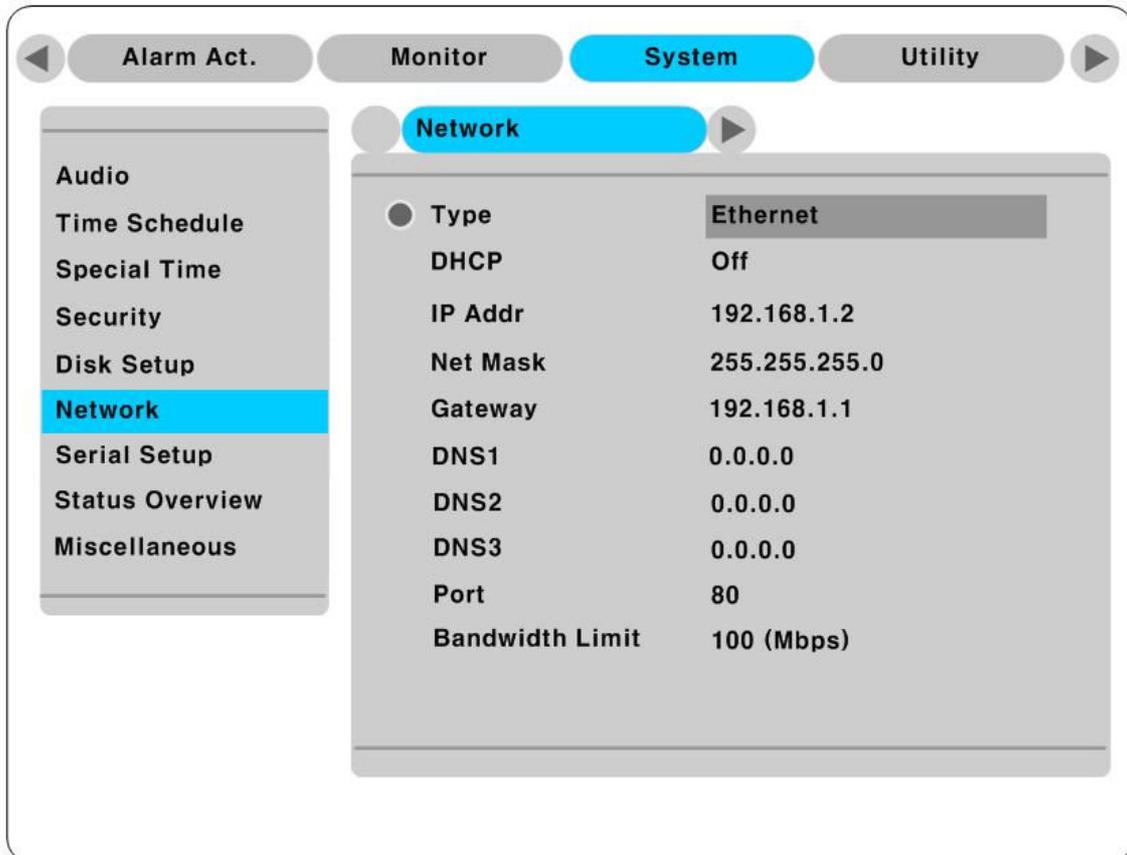

WRS Interval

For continuous registry, register interval should be set to 'WRS Interval'. According to set value of static IP address, it renews the information in WRS server regularly. If user registers the interval '0' or HVRM-D800E does not transmit any data for 2 days, the data is removed from WRS.

WRS URL


This menu is to set server address to register. WRS addresses that HUNT ELECTRONIC USA INC. operates now are mycam.to.

<Attention>

1. If domain address such as mycam.to is input in WRS URL, DNS server IP should be noted on “System → Network → DNS1”.
2. DHCP line such as Cable/DSL receives DNS address automatically and does not require an entry.

Group ID

Group ID is to set group name that HVRM-D800E registered. It recommends uneasy Group name to avoid same Group name registered.

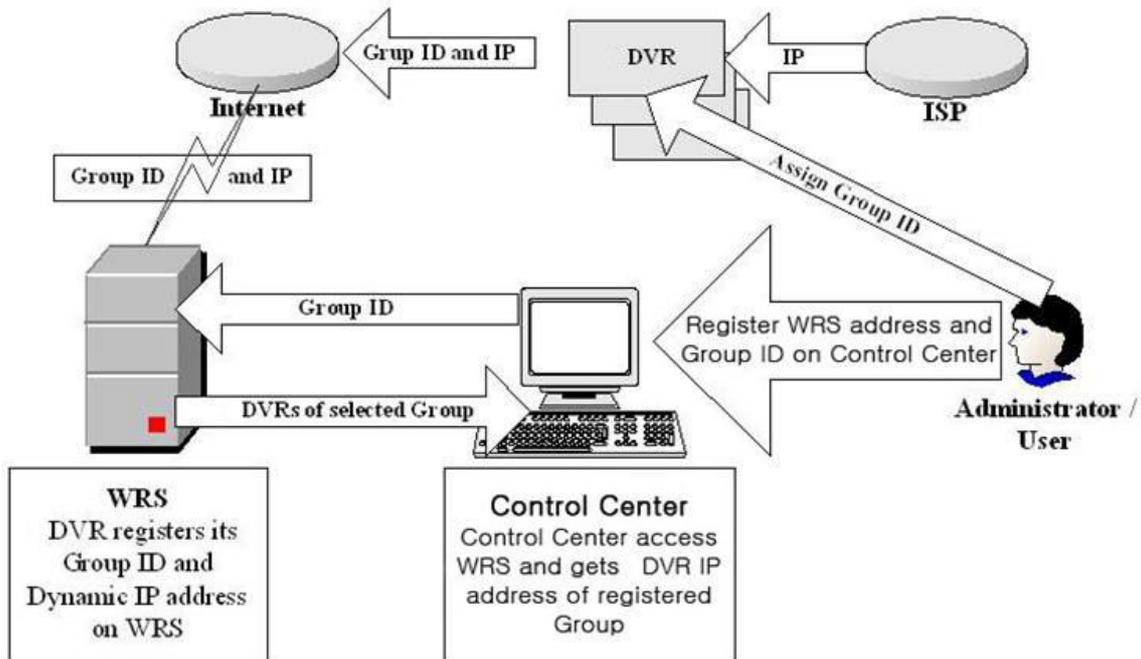


Status

It indicates the status of HVRM-D800E registry.

16.8.6.4. NTP Setting

NTP(Network Time Protocol) synchronizes the time of every devices connected to network. It consists of Server that offers standard time on network, and Client for synchronization that receives the time from server connected.

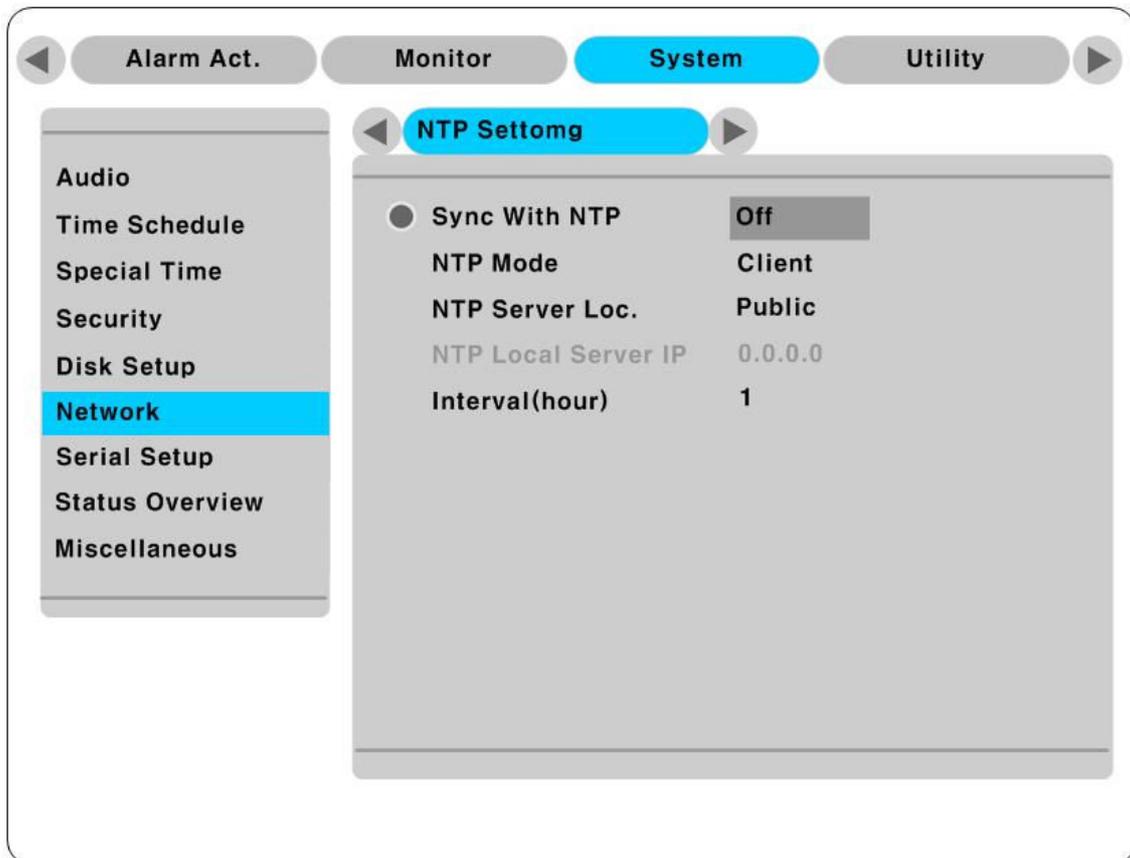

Sync With NTP

It can On/Off NTP function.

NTP Mode

It sets NTP mode of HVRM-D800E operating in Client or both.

NTP Server Loc.

It enables when NTP Mode is set to Client. It sets whether NTP server is in Local Network or Internet(Public).

NTP Local Server IP

It enables when NTP Server Loc. is set to Local, and set Server IP.

Input IP of NTP server in local network or HVRM-D800E IP that NTP mode is set to Server.

Interval (min)


It sets interval (min.) of Time synchronization.

<Note>

When NTP Mode is Client, Sync with NTP must be set to On.

16.8.7. Serial Setup

HVRM-D800E can set all 3 COM port.

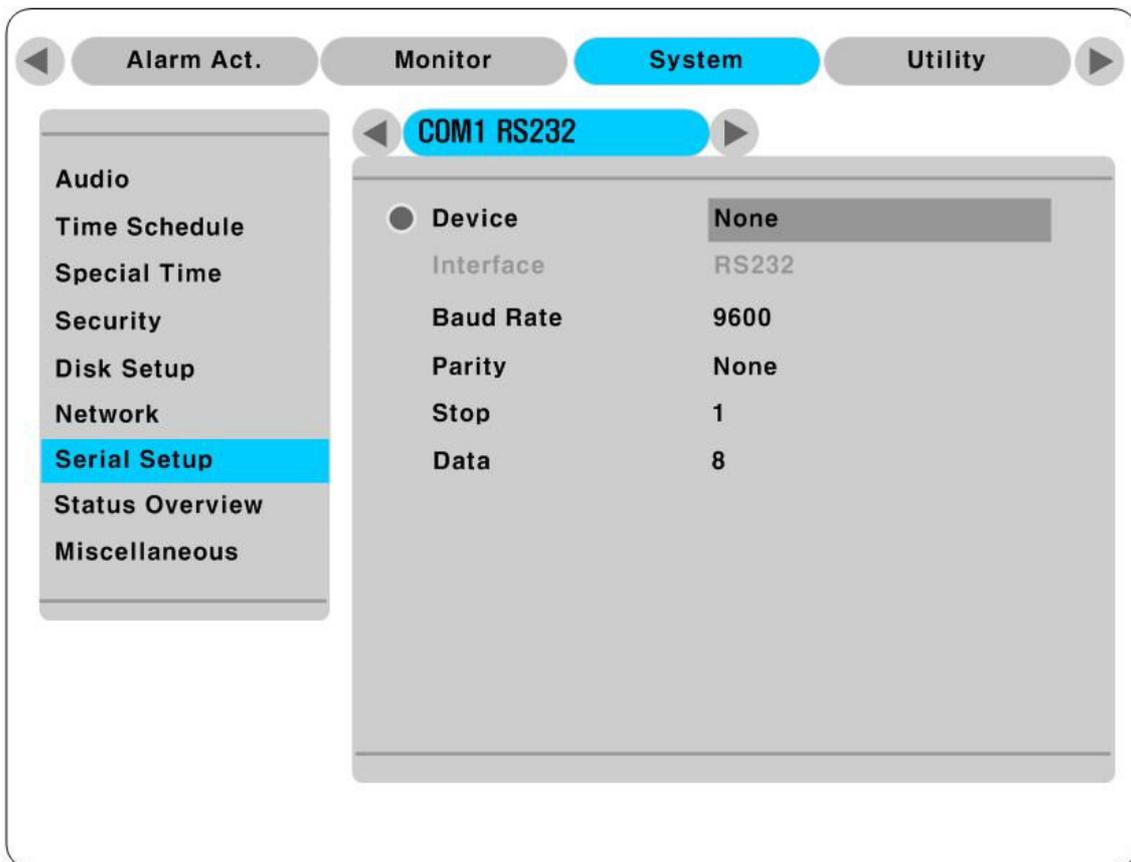

Device

Set external device connected.

Interface

This menu is to set which interface can use among RS485 from “RS485” menu.


COM1 is fixed to RS232 and COM2 / COM3 is fixed to RS485.

Baud rate/Parity/Stop (bit)/Data (bit)

In put suitable value according to external device.

16.8.8. Status Overview

It shows status & temperature of HDD relevant to video recording and Fan speed.

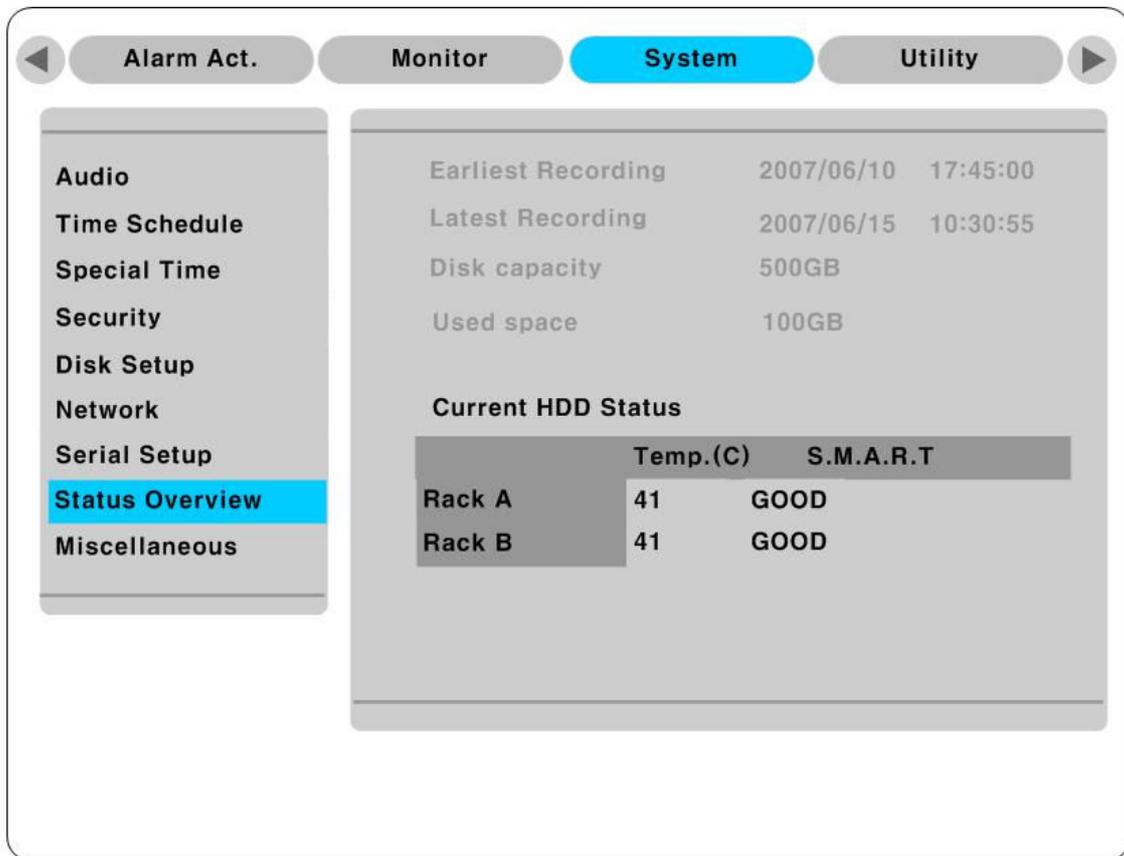

Earliest / Latest Recording

It shows initial starting time and last time of the recorded file.

Disk Capacity

It shows total HDD capacity installed.

Used Space

It shows HDD capacity recordable.


Temp.(C)

It shows HDD temperature installed.

S.M.A.R.T

It indicated HDD status installed in GOOD & BAD.

16.8.9. Miscellaneous

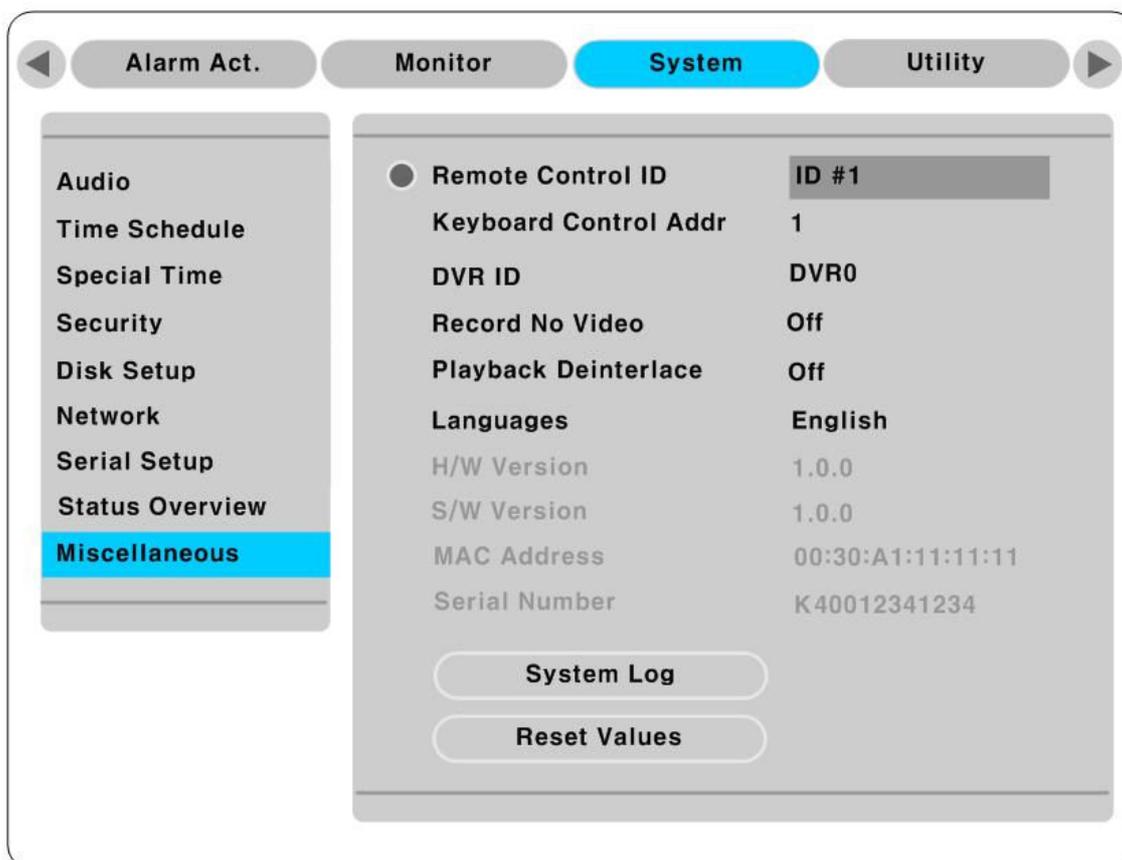

<Order of Button input>

- After press [MENU] button, move to “Miscellaneous” inferior to “System”.

Remote Control ID

Max 16 controller ID can set up and contril via 1 remote controller. Set to Off if it is not used.

<How to register Remote Controller>

- Face Remote controller toward HVRM-D800E.
- Press “ID” button on controller when HVRM-D800E is responding.
- If ID of Controller does match with ID of HVRM-D800E, all Alarm LED of HVRM-D800E is ON and sounds.
- It is capable to use after ID match.
- Refer to **“Installation Guide”** for the details.

Keyboard Control Addr

This menu is to set Keyboard address when all functions of HVRM-D800E is controlled by Keyboard button. Default value is set to “1”. If several HVRM-D800Es connect to a keyboard, 16 channel can clash. Then set to the other address of keyboard.

DVR ID

This menu is set the name of DVR0.

Record No Video

If this is “On”, it records video image which is not input.

Playback Deinterlace

Playback deinterlace On/Off

The “Deinterlace mode” only runs when the recording resolution is in Full D1.

In case of enable it, the Full D1 image with Pause condition the picture will have less tremor.

Language

OSD menu is supported in multi languages. Select the wanted language.

H/W Version

It indicates H/W version of the system.

S/W Version

It indicates F/W version of the system.

MAC Address

It indicates Mac address of the system.

Serial Number

It indicates Serial number of the system.

System Logs


It is used to view System Log. Press “System Logs” button to view System Logs.

Reset Values

It is used to set system to initial factory setup. Press “Reset Values” button to set factory setup mode.

16.9. Disk Manager (Utility)

It explains adding or formatting internal, external Hard disk. HVRM-D800E supports various external storage.

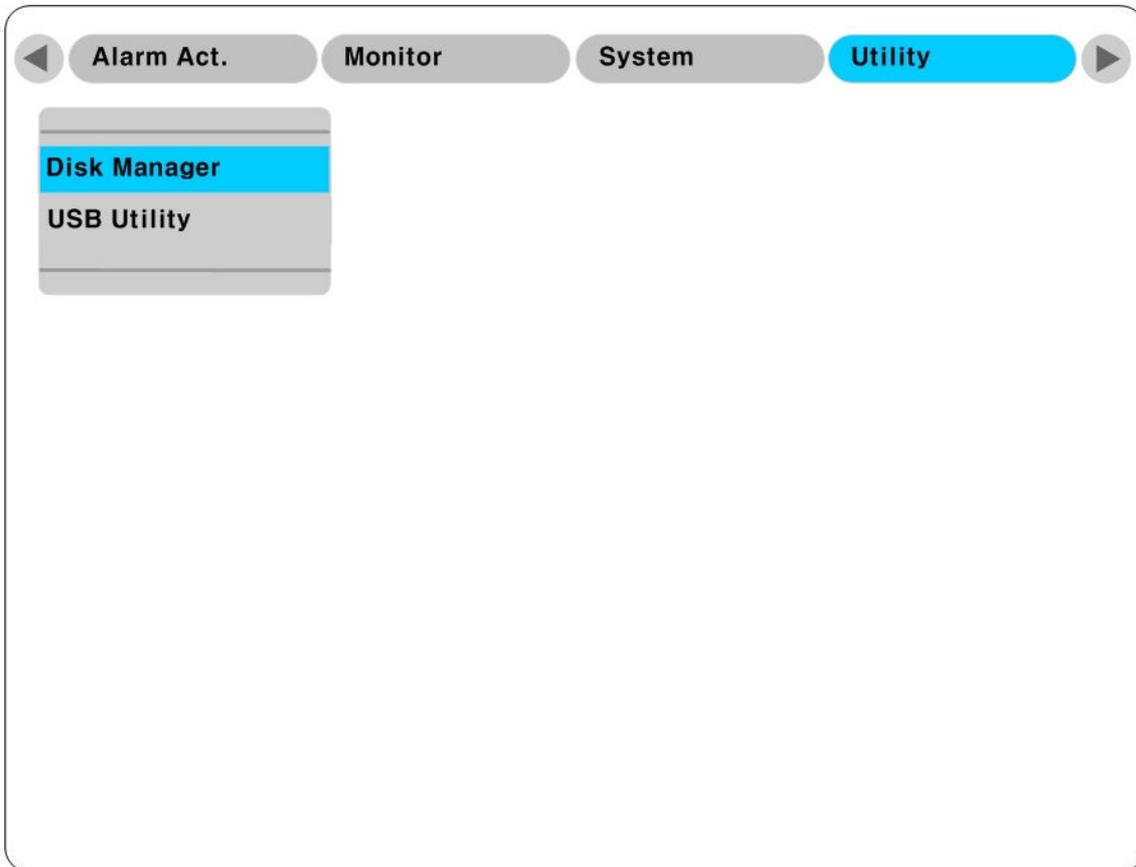


< Order of Button input >

- After press [MENU] button, move to “Utility” inferior to “System”.

16.9.1. Disk Manager

Installed Hard disk is automatically recognized.

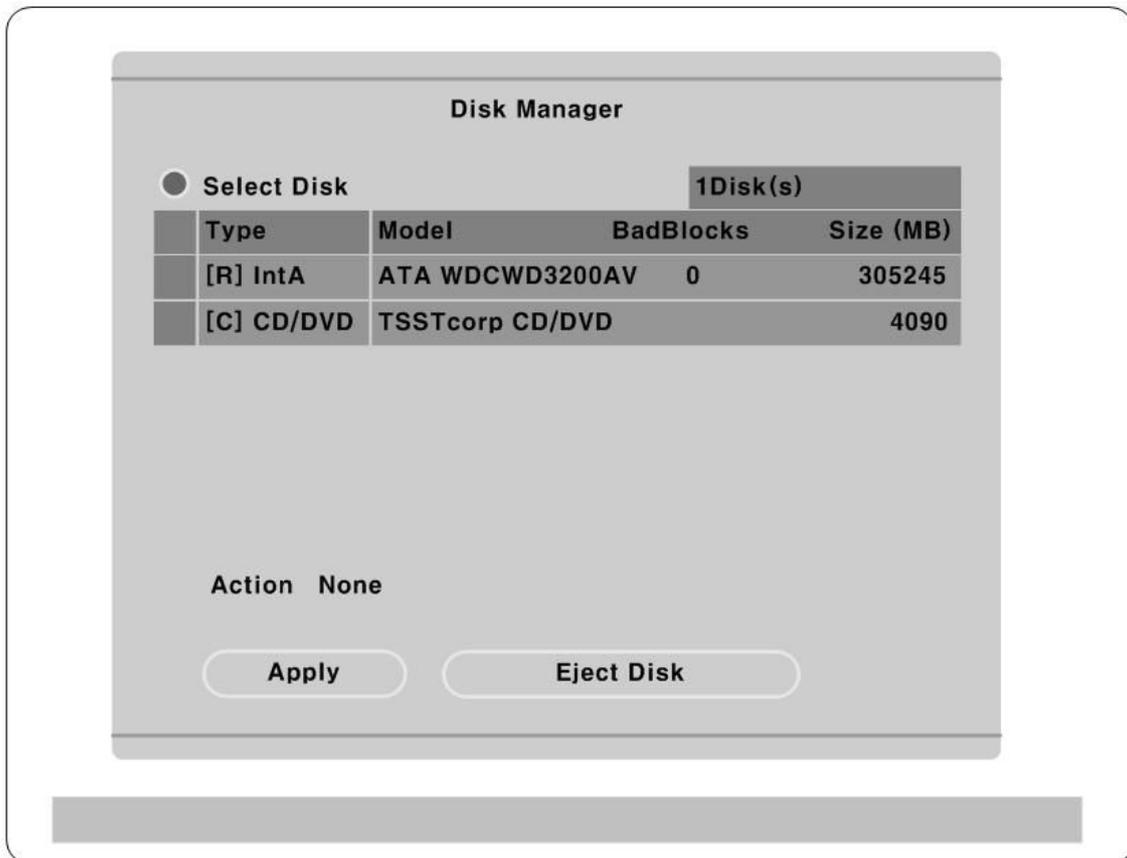

Select Disk

Select disk to set.

Action

Select wanted work among the menus, "Add/Remove/ Confirm Removed/Add used".

[Add] : Add Disk. Use disk that there is no partition table. Partition table can be removed from PC. When adding HDD, "Alarm Partition" menu is activated to set up. "Alarm Partition" indicates dividing 1 HDD to Recording part and Alarm Recording part.

[Remove] : Remove present HDD used logically. Later it is possible to use it through 'Add used' without formatting.

[Confirm Removed] : Complete removal from the lists when it remains in the list after HDD removal from HVRM-D800E.

[Add used] : Adding HDD again without formatting that is used
< **Compatible File System**> Disk that is used in HVRM-D800E reusable

again without deleting data through Add Used.

FAT32 Format

FAT32 Format when connecting external Hard disk.

Execute FAT32 Format for Backup/Copy in partition of under 250GB. For execution of FAT32 format, creat partition through disk manager of PC first. If HDD size is over 250GB, create several partitions smaller than 250GB and execute FAT32 formate in each partition.


Type

Followings indicate the type of HDD.

- [R] : It is recordable by completion of HDD format.
- [V] : It is being connected and formatted to HVRM-D800E file system. It is changed to [R] through 'Add used'. It does not 'Format'.
- [F] : It is connected, but it is required to change to [R] using 'Add' due to the difference of File System in HVRM-D800E (FAT/FAT32 File System).
- [X] : HDD connection cable is not connected or problem in HDD. Check the cable and reboot the system or remove it from the list executing 'Confirm Removed'.
- [C] : Usable when backup to external CD/DVD-Writer

16.9.2. USB Utility

It supports firmware upgrading and setup saving & sending, Text file saving for printing set value through USB.

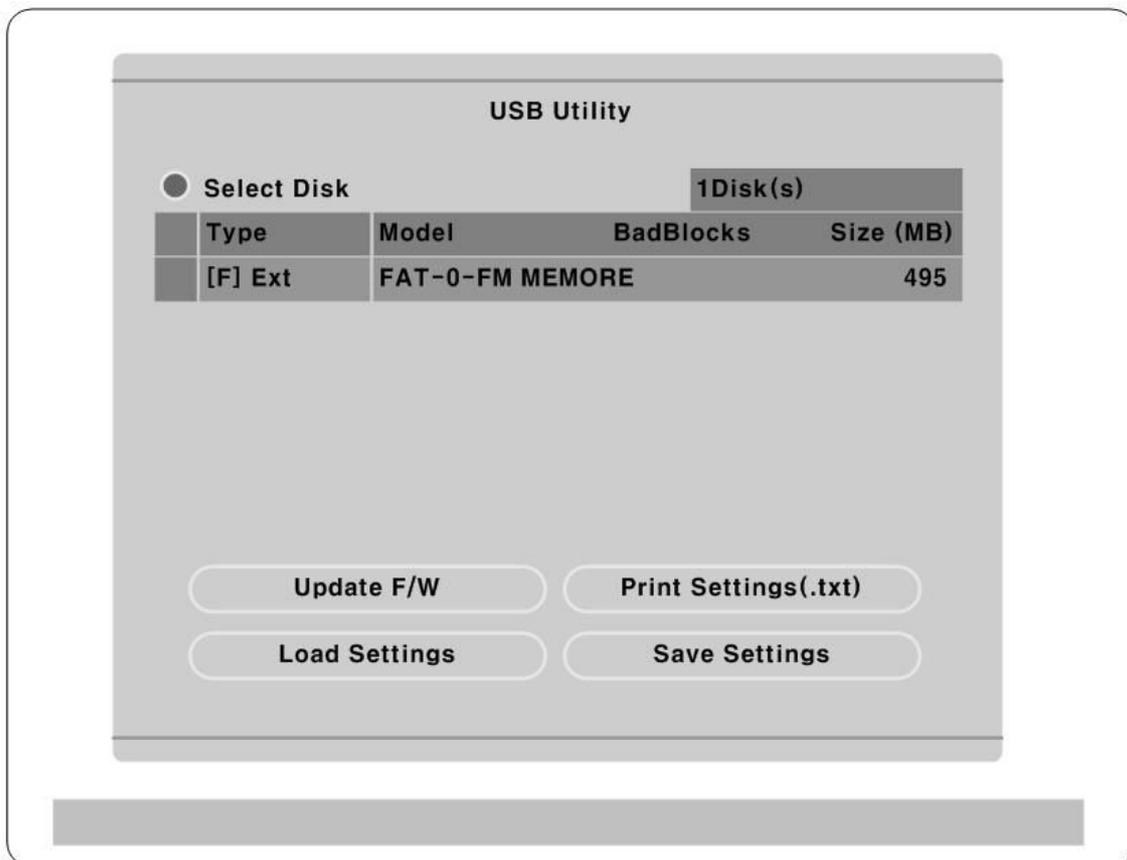

Update F/W

After saving upgrade firmware for USB use to USB device, connect HVRM-D800E and press 'Update F/W' for firmware upgrading. Upgrade firmware for USB use is supplied in "~.date" file.

Print Settings(.txt)

Function to save Set value for printing into USB device in Text file. Saved data file can be opened through Text editor like Notepad to print and check set value saved.

<List of setup data files saved in TEXT >

- Camera setup data
- Recording setup data
- Alarm Recording setup data
- Network setup data
- Audio setup data

Load Settings

Set the system as set value saved in USB device.

Save Settings


Save present set value to USB device.

17. Web Viewer

WebViewer is Web application program loaded to monitor real-time image or to monitor the images recorded through Web browser to PC located remotely.

WebViewer is divided into Login page and Monitor to do monitoring real-time images, Playback to replay recorded images.

17.1. Login

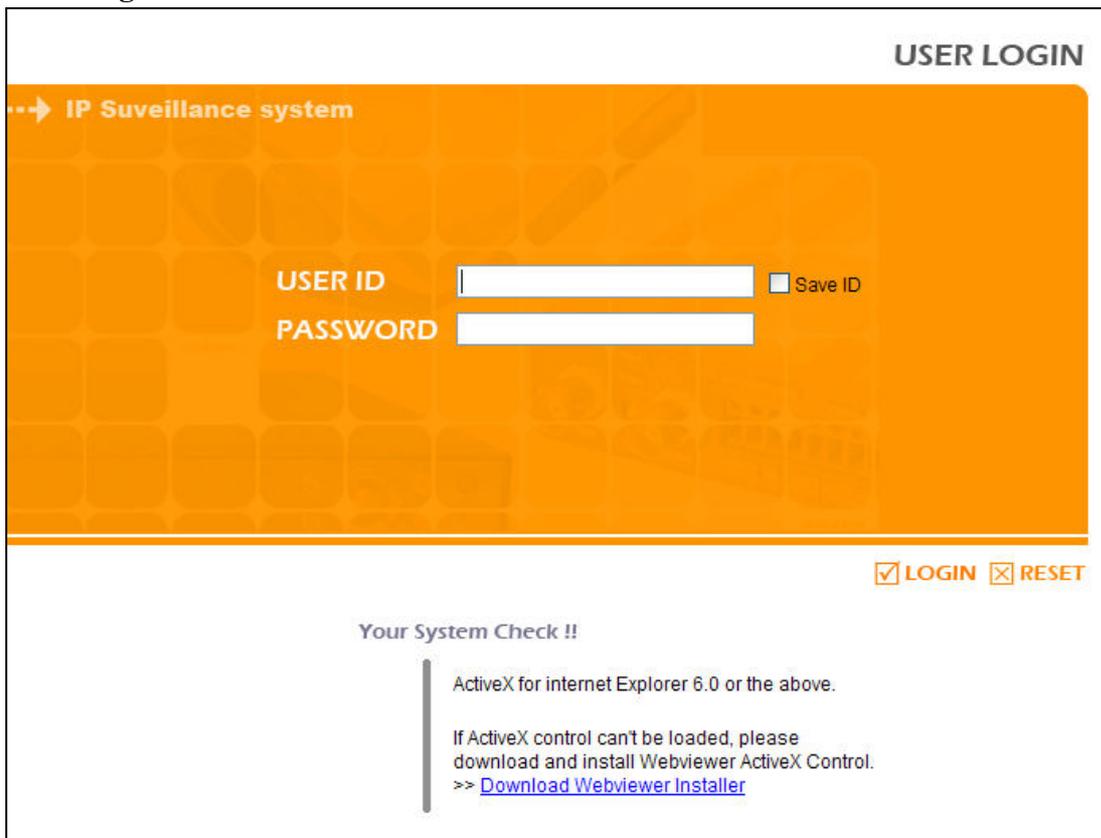

USER LOGIN

IP Surveillance system

USER ID Save ID

PASSWORD

LOGIN RESET

Your System Check !!

ActiveX for internet Explorer 6.0 or the above.


If ActiveX control can't be loaded, please download and install Webviewer ActiveX Control.
>> [Download Webviewer Installer](#)

After input IP address that set to system, then WebViewer Login page will be connected.

Input the set of User ID & Password, click 'LOGIN' to access.


17.1. User Connection setup

To login WebViewer, input ID & Password of user that set to Configuration Tool program of Control Center.

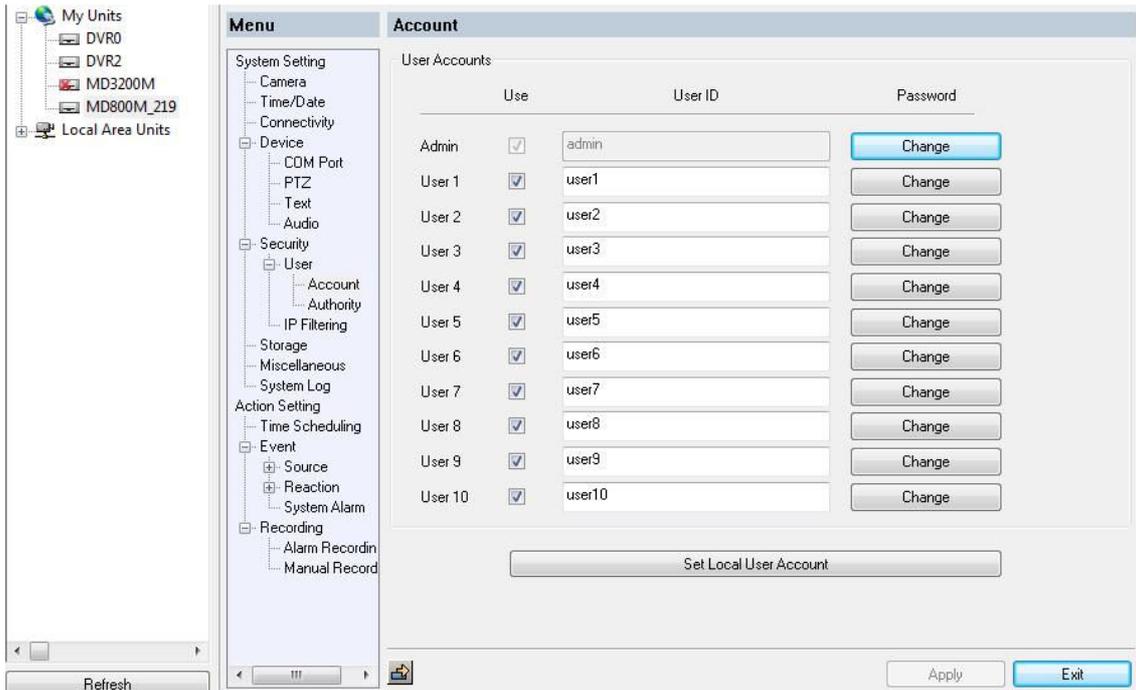


It can use total 11 ID including administrator & general user.

For the security, change ID & Password of administrator. For the unused user's account, it cancels the check of 'Use' part.

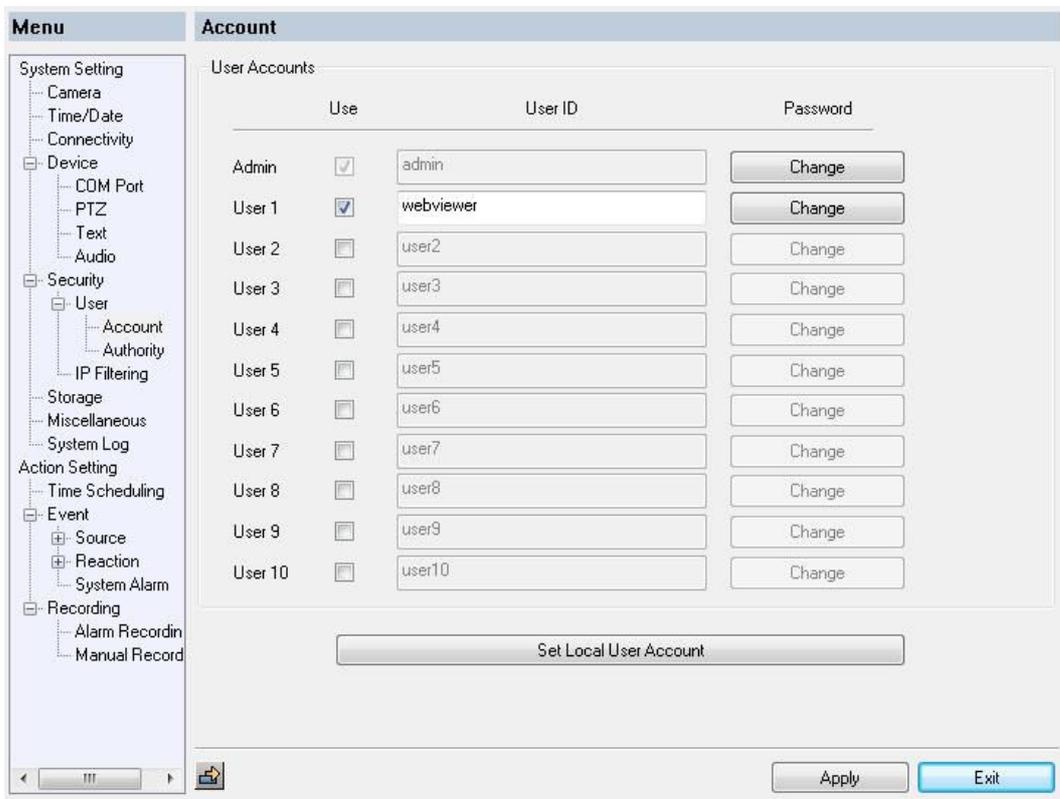

This is the changed ID & Password at Control Center Configuration Tool.

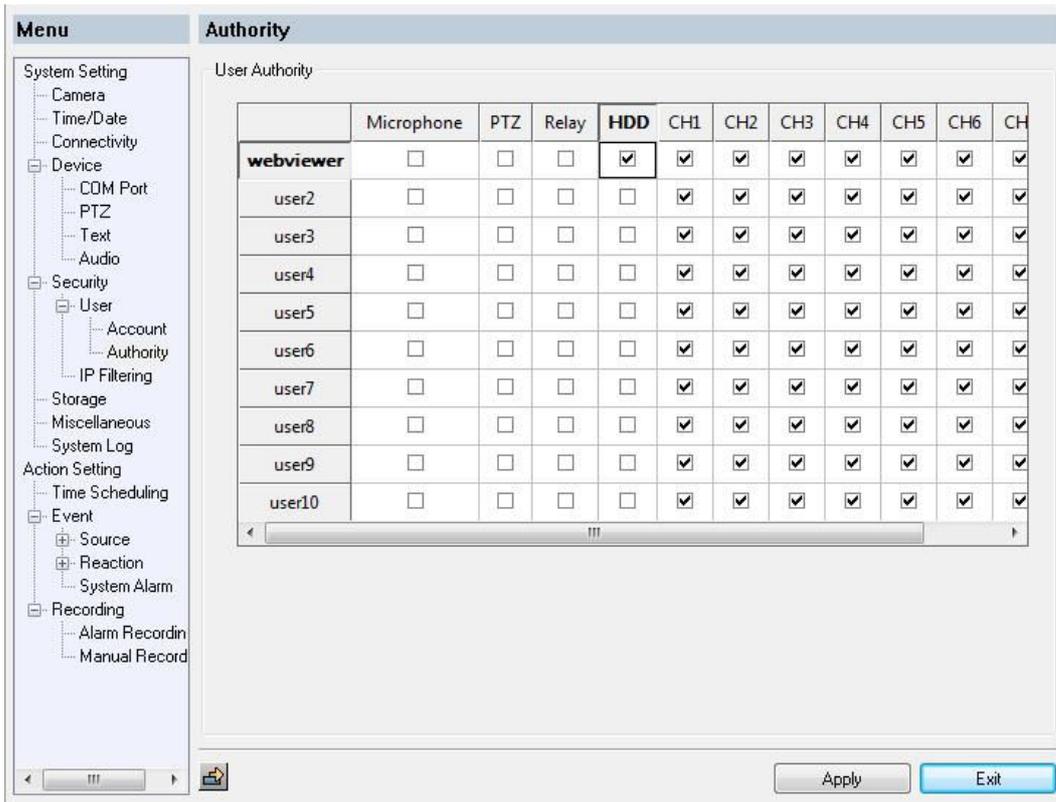

After complete of account setup, setup authorities of user's ID.

To use Playback page, check 'HDD' in User's account at Authority of Configuration Tool.

Also, click to Check box and Apply to use 'Microphone', 'PTZ', 'Relay' by user wanted.

If it shows 1CH image only, check CH 1 and uncheck the rest channel and function.



17.2. Usable Browser

WebViewer is optimized to Windows Internet Explorer 6.0 or higher in PC for smooth use.


Webviewer Installer

Login page provides manual installation program to use WebViewer function.

PC that access to WebViewer first installs ActiveX to use WebViewer's function. At this time when installation is not smooth, installation program needs to download from Login Page and install manually.

<Note>

When install WebViewer Installer, it must close all program related to Control Center. It might not be efficient to install.

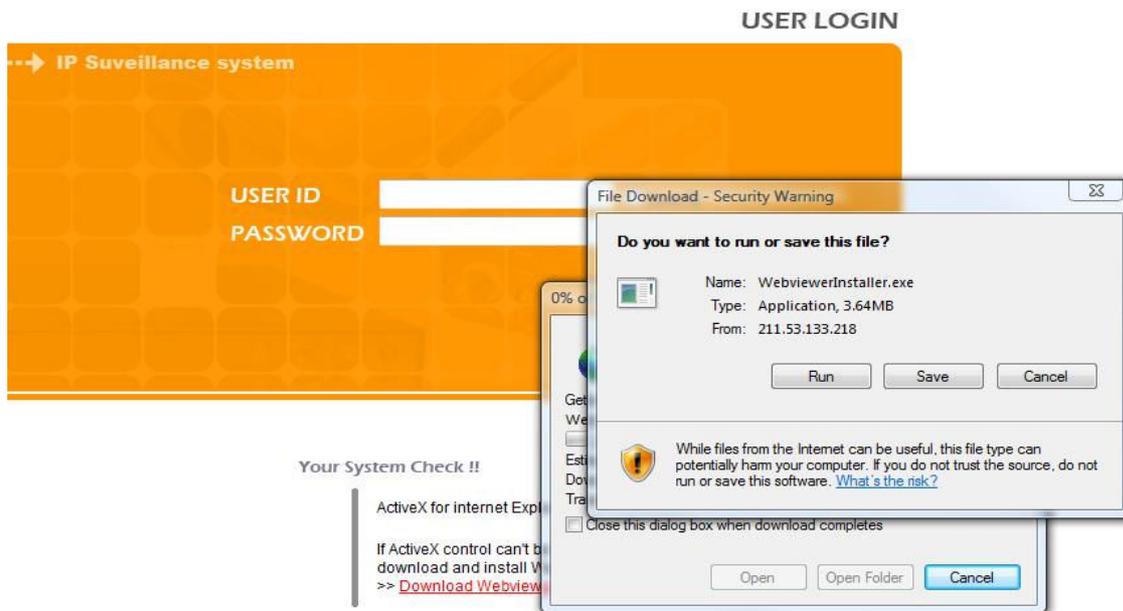

If execute Webviewerinstaller.exe file downloaded, it can use WebViewer function normally.

Save ID

Select Save ID at check box, it is to connect same User ID at next connection automatically. It is applied to a PC that Save ID is activated.


<Note>

In case of Port changed, when access to Web Viewer, IP address and Port should be input.

Ex.) In case of Port changed to 6000

<http://192.168.0.1:6000>

17.3. Monitor

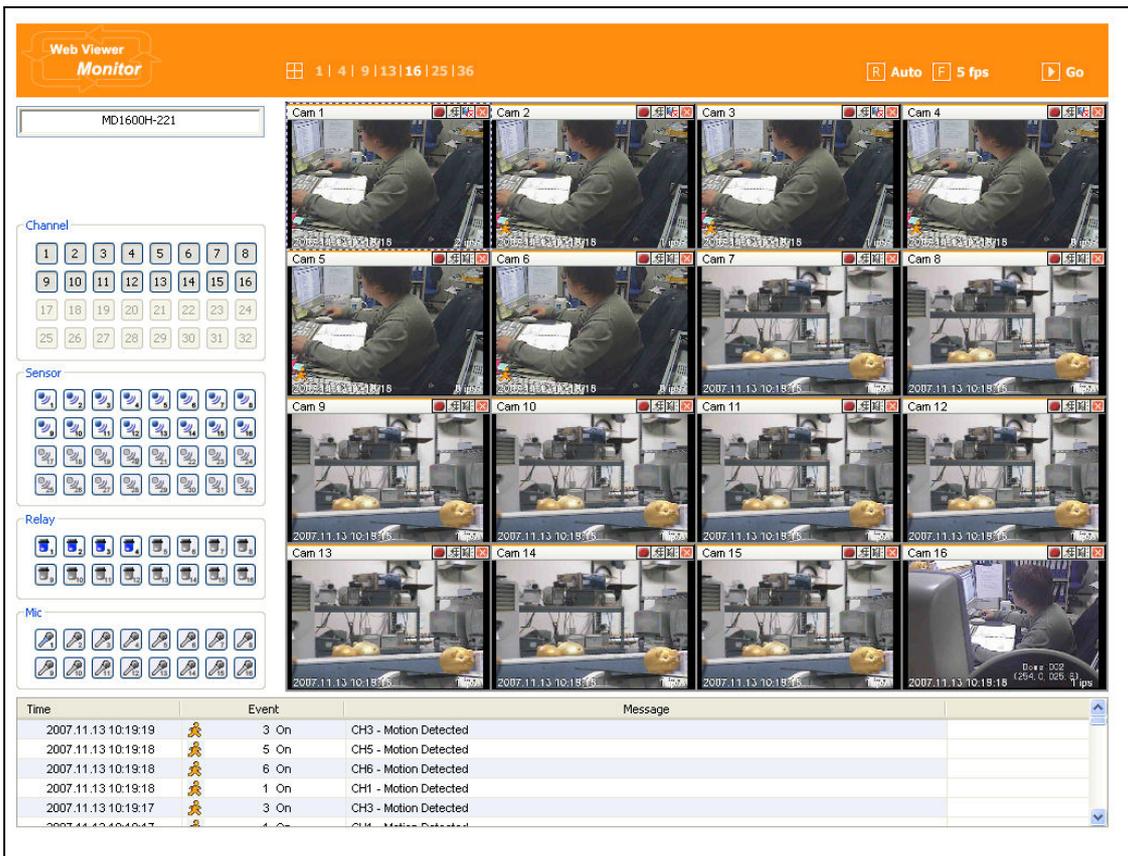

When it is authorized with User ID & Password input at Login page, it moves to Monitor page. At Monitor page, monitor real time image of cameras connected to DVR, or it can control PTZ camera, Relay, and use Microphone function according to user's authorization.

Study introduction of each Monitor part and functions of the page.


17.3.1. Screen division & Change of video location

When access to first Monitor page, it is displayed into 9 divisions, 16 divisions or 32 divisions according to number of channel.




It can be changed to 1, 4, 9, 13, 16, 25, 36 divisions by clicking the number on top of the page.

Also, it can be changed to 1 channel mode by clicking any one of the channel images.

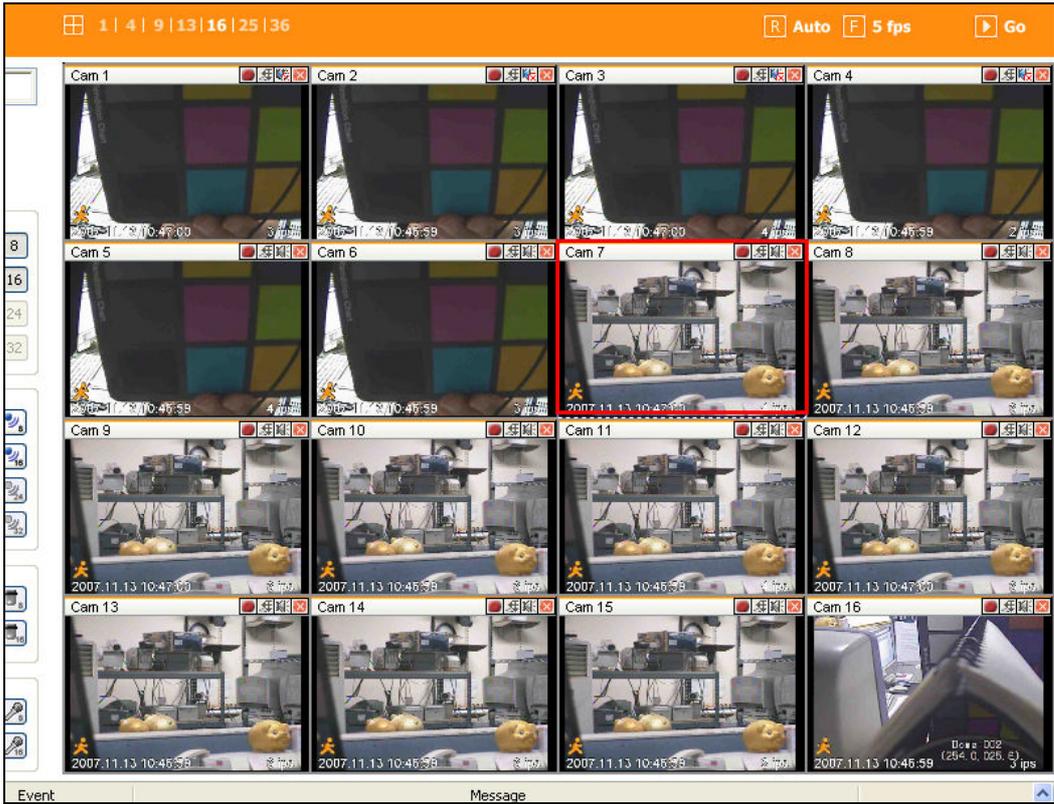

Double click on one of the playback screen to convert in 1 channel mode.

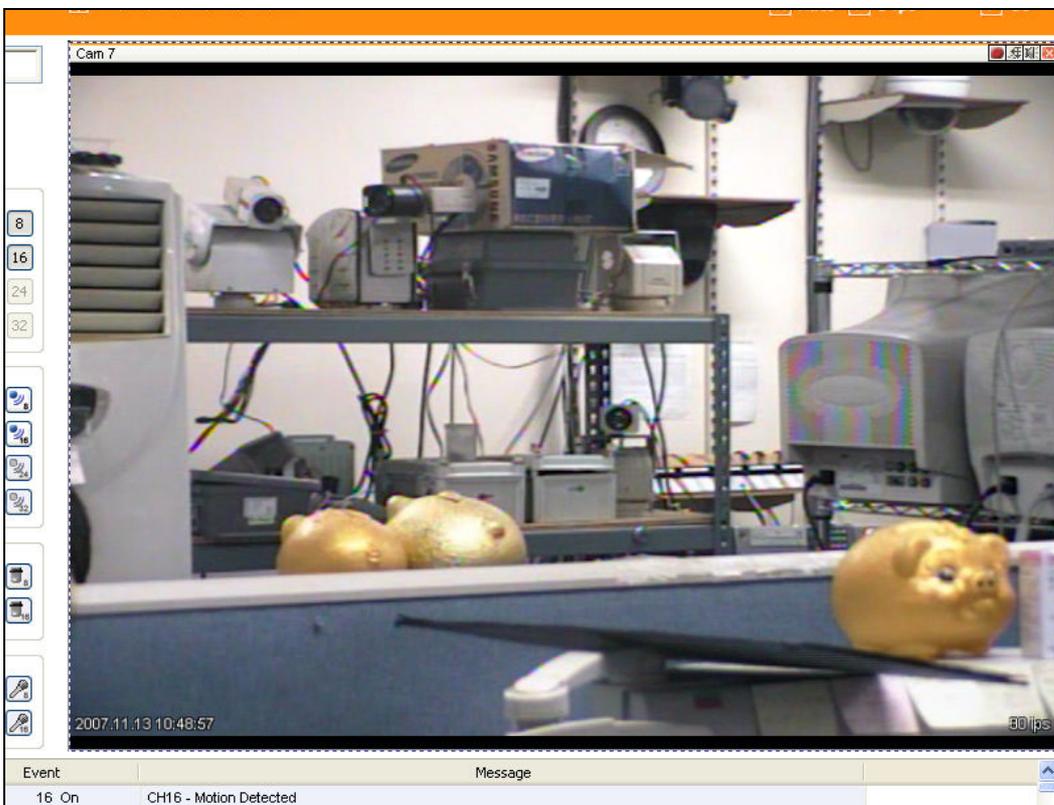


After conversion to 1channel mode, double click on screen to return to previous division channels.

At division screen, it can change screen location.

If 3channel image moves to 6ch, drag 3ch image and drop on 6ch location so as to exchange between 3ch and 6ch image.

17.3.2. Change to Resolution

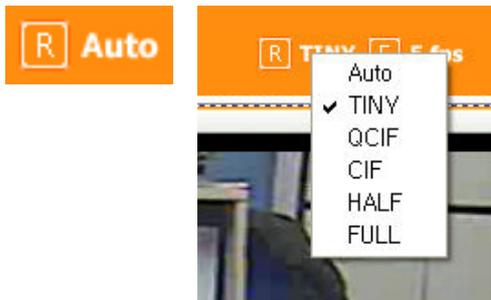

As above picture, click the menu for the menu of resolution. And select out of Auto, TINIY, QCIF, CIF, HALF, FULL, and then relevant resolution is applied to all channels.

<Note>

In case of MPEG product, frame rate change and resolution change menu is not shown characterically.

<Note>

When resolution changes, video size is not changed. The change of video size means the change from small size to big size based on selection of division screen.

17.3.3. Change of Frame Rate



As above picture, click the menu on top of page for the menu of Transmission speed.

30fps, 15fps, 10fps, 8fps, 5fps, 4fps, 3fps, 2fps, 1fps can be selected. When it selects, it is applied to all channels. Default is 5fps.

<Note>


It may not speed as fast as it selects according to network speed that connected to a system and line speed connects remotely and performance of PC.

17.3.4. Moving Playback




Move to Playback page by click the menu as above picture on top of page.

17.3.5. Channel On/Off

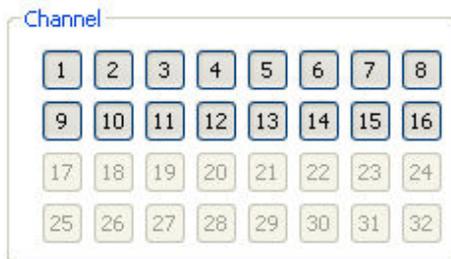

It is On/Off button for the Channel located to left in page. Click the channel wanted to On or Off. And Default is On.

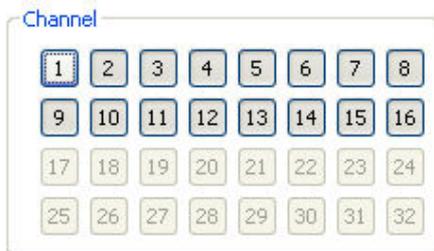

Above picture refer to Off channel 1. In case of Channel Off, relevant button is projected. And video does not come and changed to black screen.

<Note>


Disabled channel button refers to do not support and relate to this unit.

17.3.6. Sensor Indication

The icon indicates when sensor occurs in system.



When it sensed, relevant sensor icon comes to Red, and indicates sensor number of video.

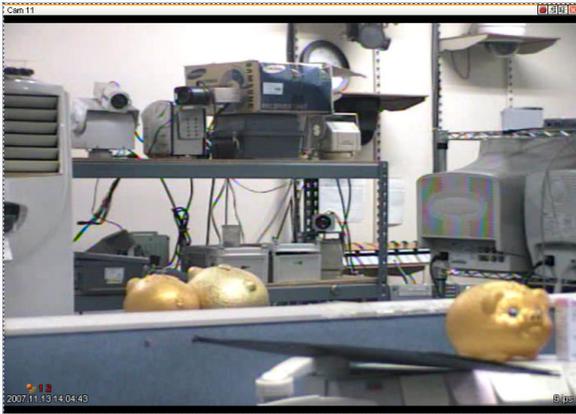

<Note>

Disabled sensor button refers to do not support and relate to this unit.

17.3.7. Relay Operation

Relay



It can On or Off Relay of the unit. Click the number button to activate Relay On, then the icon changes from Blue to Orange color.

Relay



<Note>

Disabled Relay button refers to do not support and relate to this unit.

Relay is need user's authority. Refer to user manual in the unit for the setup of User's authority of Relay..

17.3.8. Using Microphone

Mic



It can On or Off the use microphone. Default is Off and it is changed from the Blue to Red when click the button for the use Mic.



<Note>

Unactivated Relay button refers to do not support and relate to this unit.

17.3.9. Event data

Time	Event	Message
2007.11.13 14:44:35	1 Off	1 - Relay Output Off
2007.11.13 14:44:34	User Login	User Login (211.53.133.67:Alarm Log:admin)
2007.11.13 14:44:29	1 On	CH1 - Motion Detected
2007.11.13 14:44:25	1 On	1 - Relay Output On
2007.11.13 14:44:23	6 On	CH6 - Motion Detected
2007.11.13 14:44:22	2 On	CH2 - Motion Detected

It shows real time event data occurred at the bottom of monitoring page.

Indicated Event data list are as follow.


(Table. Event Icon)

Button	Function
	Motion Detect On
	Sensor Input
	Relay Output On
	No Video, Video Detected
	Text Input
	User Login
	Configuration Changed

17.3.10. Video Recording & recording Pause Video

17.3.10.1. Video Recording

During monitoring, it can record max. 10 minutes of video by click Quick Recording button “”. During Quick Recording, recording time is indicated on video.

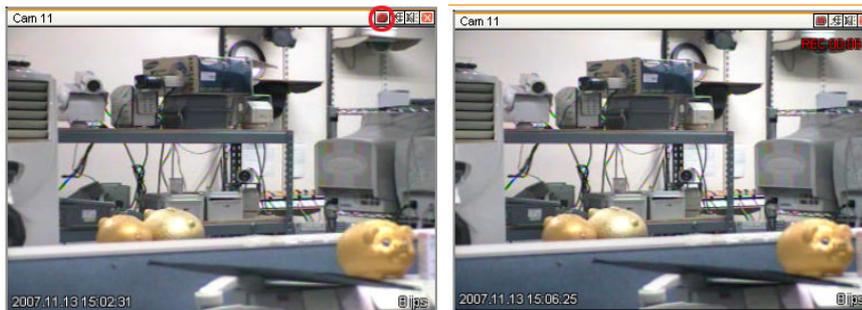


During video recording, if click Quick Recording button “

Saved recording file is saved into “*.re4” file format. re4 file can playback through Control Center Playback program or Mini Player program.

17.3.11. Using PTZ



Among the icon on top of video on monitoring, click ‘PTZ’ to activate interfacing to control Pan, Tilt, Zoom, and Focus. But, when PTZ camera is connected and ready to set PTZ, the button is activated to use the functions.

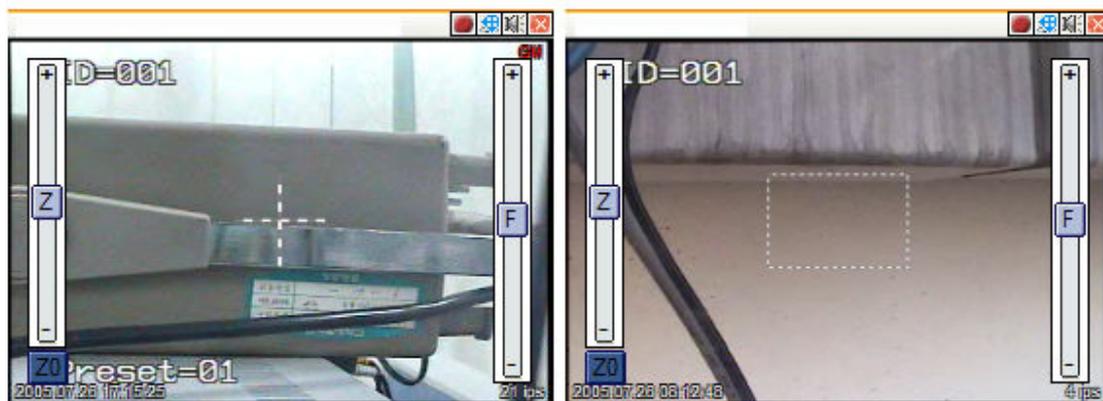

Pan, Tilt Control

Mouse is on the image and click right button to pop-up menu for the selection or “PTZ” or  button. Then it show Cross line on the middle of screen and click image to operate Pan, Tilt. At the middle click Left/Right direction to control Pan, and Click Up/Down direction to control Tilt. Click as far from the middle to activate Pan/Tilt faster.

Zoom, Focus Control

Move mouse to the edge of left & right to see slide bar for Zoom, Focus.

The unit Area Zoom In available has Zoom Zero operating button. It can Zoom In/Out using slide bar at left of image, left slide bar can control Focus.

Moving Preset

In case of Preset set, Mouse on image press right button for pop-up menu and “Goto Preset” is indicated additionally. When select Preset list, it moves to Preset position selected. Preset should be set up by user in advance.

Activating Auxiliary

In case of Preset set, “Auxiliary” is indicated additionally, and it operates action when select registered menu.

Group mode

In case Group mode set to use, if PTZ enable, it signs 『GM』 at top right of screen which means the status of operating of Group mode.

Area Zoom In Control

In case of Connect and set PTZ cameras that supports Area Zoom In, it is usable relevant functions. A dotted quadrangle is shown. And it is the mode to selects the specific area with dragging mouse for operation of Pan, Tilt, and Zoom automatically, based on the location of relevant area. To change normal PTZ mode, press right mouse button on the image for menu pop-up, then select “Normal PTZ Mode” to convert normal PTZ mode.

<Note>

Refer to ‘PTZ Setup’ list for PTZ camera list and PTZ setup.

Contact to local supplier for the cameras that support Area Zoom In.

17.3.12. Using Audio



In case of Channel setup sync with Audio, press right mouse button on the image to activate pop-up menu to “Listen” or activate Audio listen button. First default is Mute. In case of listening Audio, select pop-up menu or button. After cancelling mute, control audio volume. It can mix several channels of audio.

17.3.13. Closing Video Channel



Cancel for disconnection of image monitoring by click ‘Close’ at top right on screen, then it comes to black screen.

To reconnect the channel disconnected, it can reconnect relevant channel using ‘Channel On/Off’ menu.

17.4. Playback

This page is to playback recorded images, and user who has authority of 'HDD' among user ID or administrator can use this function.

Playback that is made up 16 divisions can play the images by searching through calendar by recording period and moving the period. It can backup recorded image and also print Pause image or save to Bmp file.

17.4.1. Video Division & Changing Channel




Playback supports 1, 4, 9, and 16 divisional screens. It can select division using menu on top of page as above picture. 32ch DVR can call the channel using Group moving button as follow.




If screen shows 4 divisions CH1~CH4 and look for next CH5~CH8, it can change the channel with click 'Next' button. Press 'Prev' button to call for previous channel group CH1~CH4.

17.4.2. Image recording

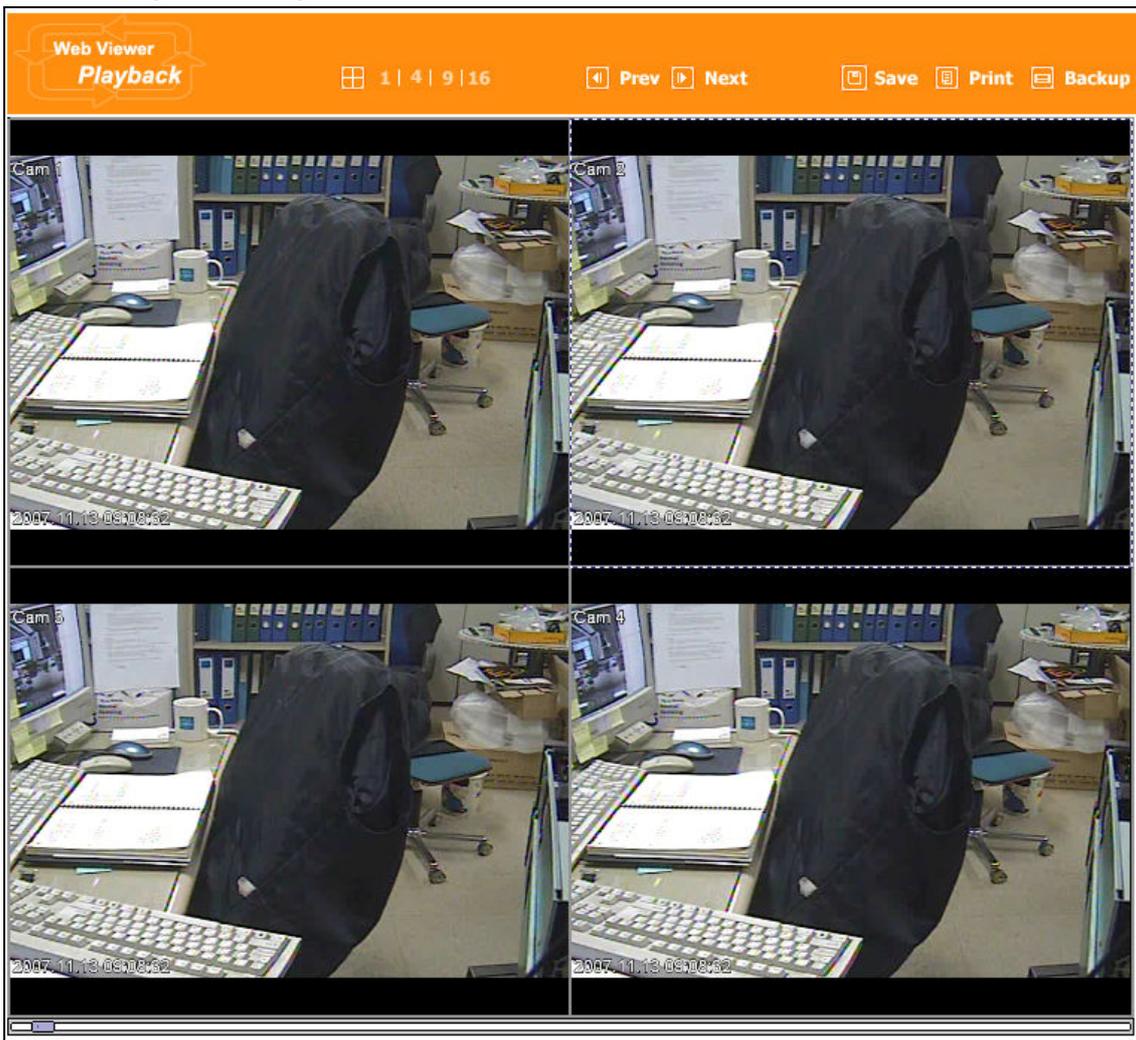

It can save playback image to BMP file.

Click mouse to channel to save. Dotted line will be surrounding to the selected channel, and click 'Save' button.

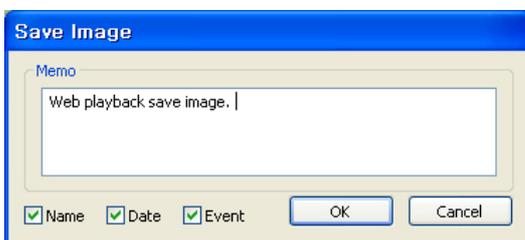


Save Image dialog box appears, then it can input message or select channel name, date, event data.

Press 'OK' to open dialog box for the saving location, then save bmp file.

17.4.3. Printing


Select image with mouse for the channel to print image saved, and then click 'Print' button.

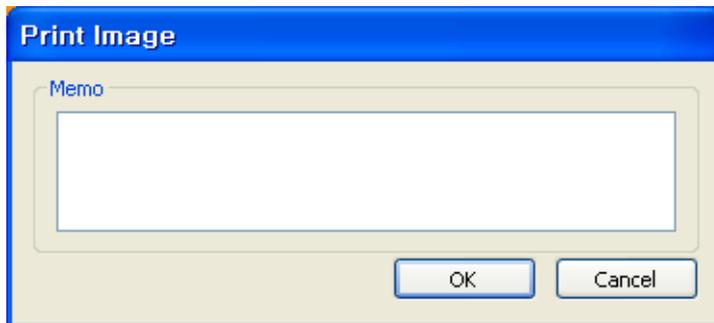

Window comes to input Memo, and click 'OK' button to print the image through the printer connected. Print material includes 'Printing Date', 'Channel name', 'Recording Date' 'Event', 'Memo'.

17.4.4. Backup


It can save recorded image to PC in avi or rec format by channel.

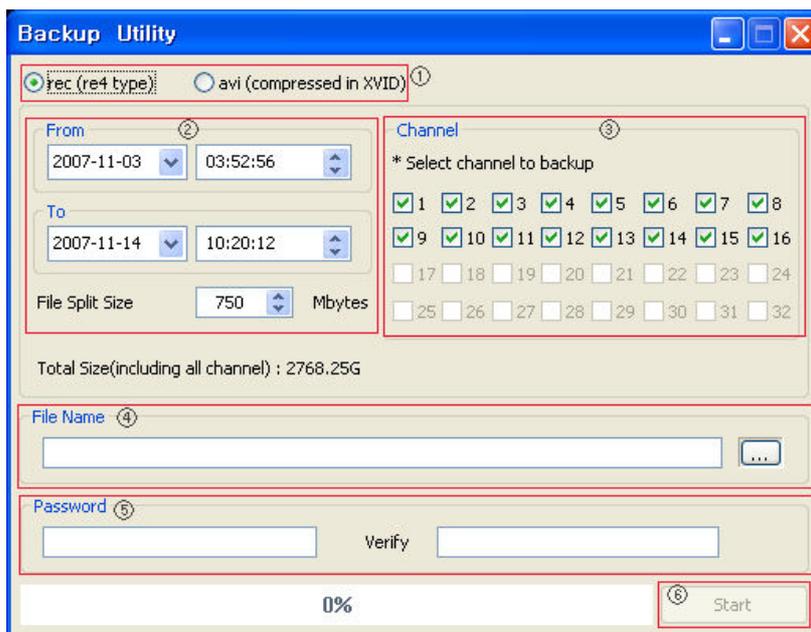

- ① Indicate file format to backup. In case of backup in .rec file, it can play through Control Center Playback program or Miniplayer. And XVID codec is needed in PC playing in case of .avi file back up.
Re4 backup can backup all channels simultaneously, and avi backup can do one channel only at once.
- ② It can select recording time to backup. File Split Size divides the file to the set value in case of over limits of the capacity set. Input range of File Split Size is from 10 to 2,048.
After completion of recording time selection, total size comes. This is total size for recording,

and shows approximate size on the basis of all channels' backup. Even if it makes for 1 channel only, it shows the total channel base.

- ③ It can select backup channel. When avi backup, it can select 1 channel only.
- ④ Input the location & file name to save or select folder through button, and input name.
- ⑤ It can input password backup file, max. 14 digits.
- ⑥ After select backup file format and channel, recording time, press 'Start' button for the window that shows the backup processing status and processing backup.

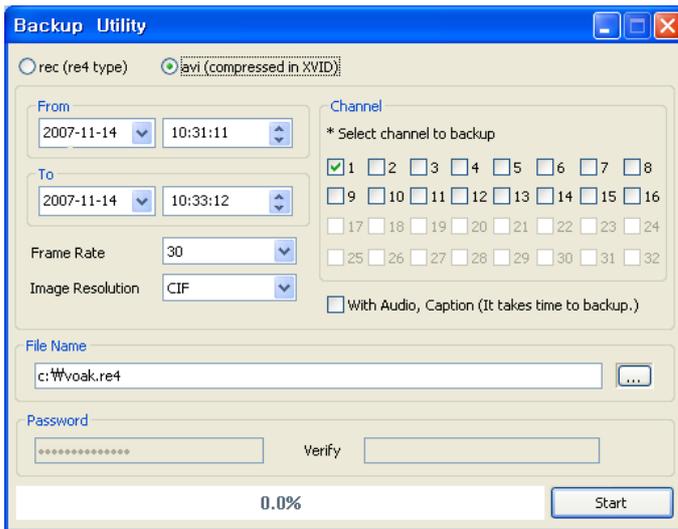

When select avi file format, File Split Size item disappears and replaced to Frame Rate setup and Image Resolution setup item. Also it shows window the select that can includes Audio & Caption.

17.4.5. Web Monitor



Click 'Go' button at top of page, and it can move Web monitor page.

17.4.6. Channel On/Off


It is the same function like Channel On/Off function at Web Monitor.

It is Channel On/Off button located on right of Page, and click On or Off page for wanted channel. Default is On.

<Note>


Disabled Channel button refers to do not support and relate to this unit.

17.4.7. Saving time & Checking Rec. Capacity

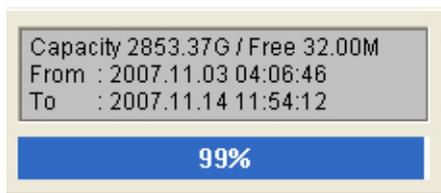

It indicates total capacity of HDD & remains and shows Starting date & Last date of recording. Also it shows percentage (%) for HDD capacity.

17.4.8. Searching Calander

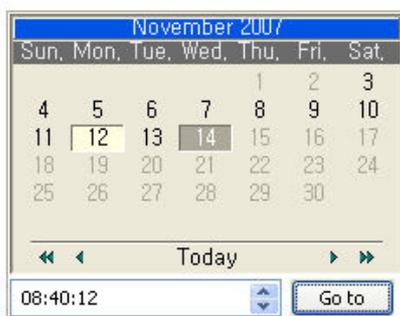

Recorded date is abled in black color, and others unrecorded date disabled in grey. Select button after select date & time so as to playback images on the date & time selected.



When click 'Go To' button, it indicates for 24hours from the time selected at left bottom. As above picture, it is possible to change the time zone with '24h' button.

17.4.9. Functional function at the bottom of monitor



- ① Indicates playback range of recorded image.
- ② Press button as the time set at (5) so as to change the time zone to playback in forwarding and backwarding.
- ③ From left button, it can 'Move a frame back', 'Play backward', 'Stop', 'Play', 'Move a frame forward'.
- ④ It is the function to set play speed. After click the button, it can set the play speed '0.5x, 1x, 2x, 4x, 16x, 32x, 64x, and All'.

- ⑤ It is the function to set play area. After click the button, it can select play area '10min, 30min, 1hour, 3hour, 6hour, 12hour, 24hour'.
- ⑥ It can select DirectX use or not. If check DirectX mode, it can play image into Direct Draw based on graphic card and performance of PC.
- ⑦ It is the function to set audio play or not, and volume.

Extension


18. External device connection

External device connection is based on the standard of HVRM-D800E

18.1. Using Text device


There are 4 essential setups to use Text devices; Text menu, RS232 menu of Serial Setup, Alarm Rec. menu, Recording menu.

18.1.1. Setup in Text

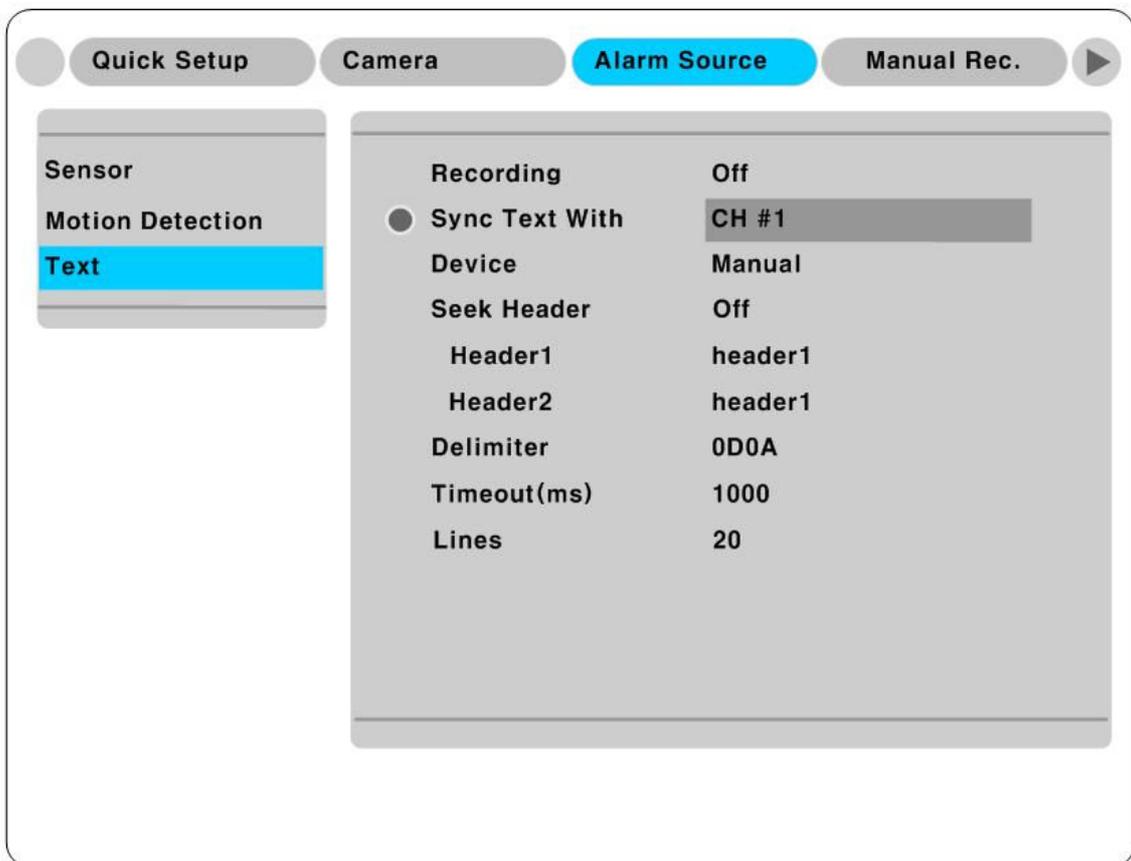

Set Recording & Monitoring menu to all 'On' and set Sync channel to the wanted value. If connectable device is Star Finger 007, set the relevant device only. And set other products to Manual and set all inferior menus.

18.1.2. Setup in RS232 menu of Serial Setup

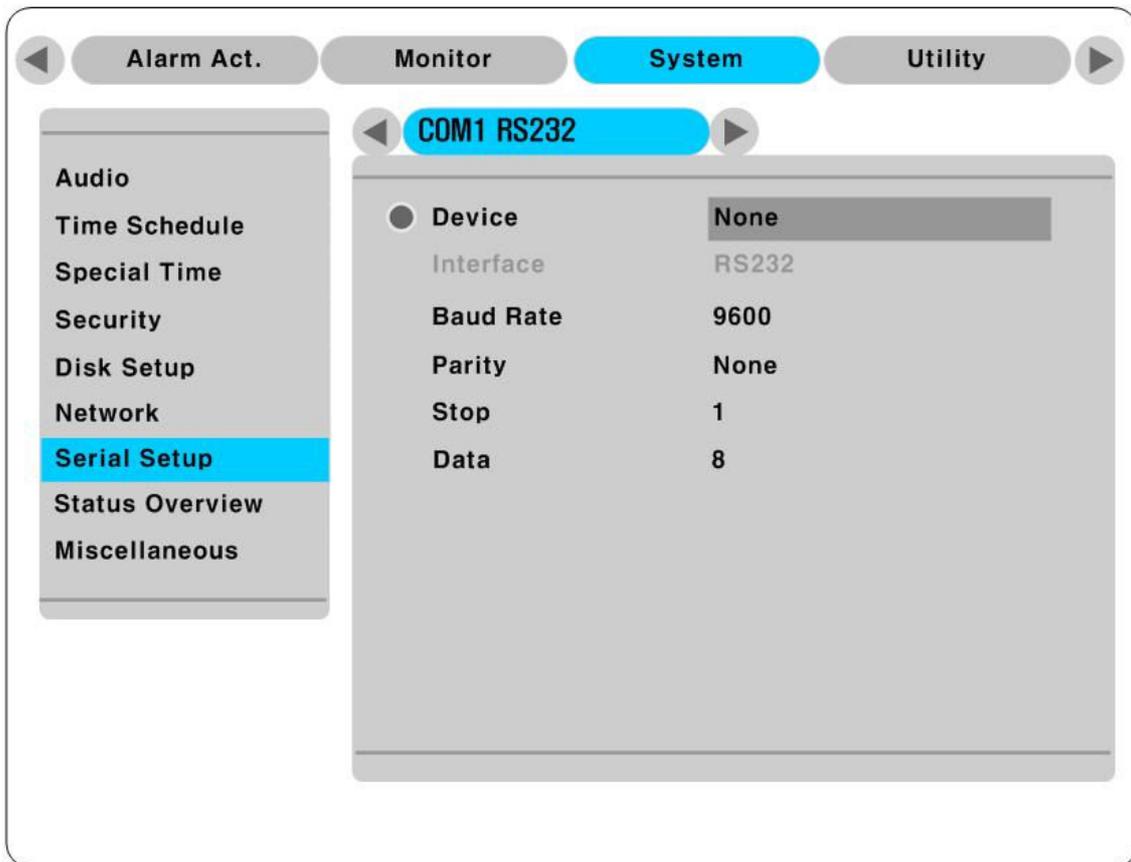

Set connectable device in COM1 of Serial Setup menu, and also set Baud Rate, Parity, Stop, Data with relevant value.

18.1.3. Setup in Alarm Rec

Alarm Source(+=all)

	Sensor	MD	Text
Select	1 - - -	On	Off
Preset	# # # #	#	#

Recording Speed/Quality **High**

Speed(ips) 15

Quality Q5

Pre Alarm (sec) 5


Post Alarm (sec) 60

Alarm Rec.

	WDD	WDN	WED	WEN
Alarm Recording	On	On	On	On

If there is video channel want to record with Text sync., set Text Event from Off to On.

18.1.4. Setup in Recording

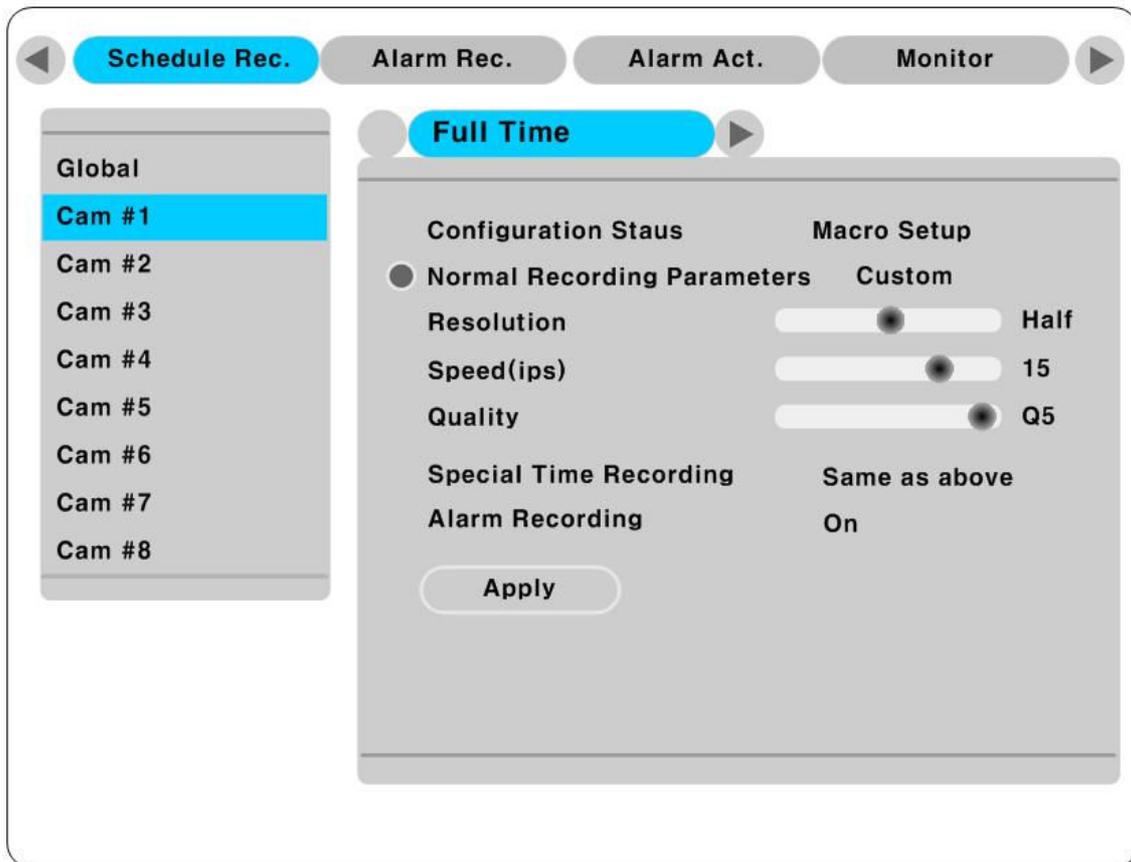

If any channel like to record with Text, set Alarm recording to 'On'. Full Time is to set all Week day & night, Weekend day & night, and change menu to set Weekday and Weekend differently.


< Attention >

Every pressing 'Help' button, it differ the step of showing video data. Default value at Monitoring shows channel number only. And whenever pressing 'Help', it changes to channel name & text sign stage, event status sign, HDD status sign. In opposite, default value at Playback changes in stages of all data sign, channel name and text sign, event status sign, channel numbe sign. So to view text data when Monitoring or Playback, press Help button at once for the stage of channel name & text sign.

18.2. Using Keyboard

There are 2 essential setups to use Keyboard; RS232 menu of Serial Setup, PTZ menu of Serial Setup

18.2.1. Setup in COM1 menu of Serial Setup

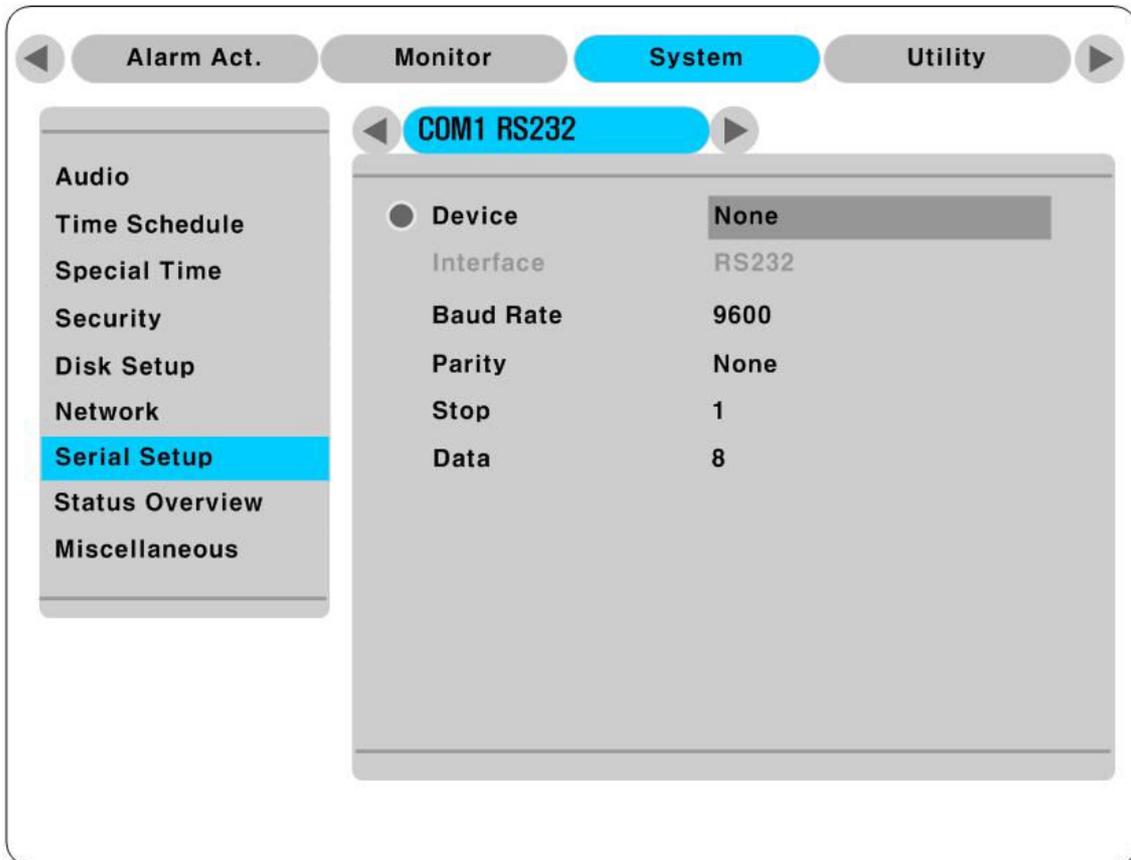

Set connectable device in RS232 in Serial Setup menu to Keyboard. Also set Baud Rate, Parity, Stop, Data with relevant value.

18.2.2. Setup in PTZ menu of Serial Setup

Set communication between HVRM-D800E and camera to control via Keyboard & other devices.


Inquire to seller for the detailed information about Setup with other products.

APPENDIX

#1. HDD

#1.1. Fundamental notions & terms

HVRM-D800E storing constructure (VFS2)

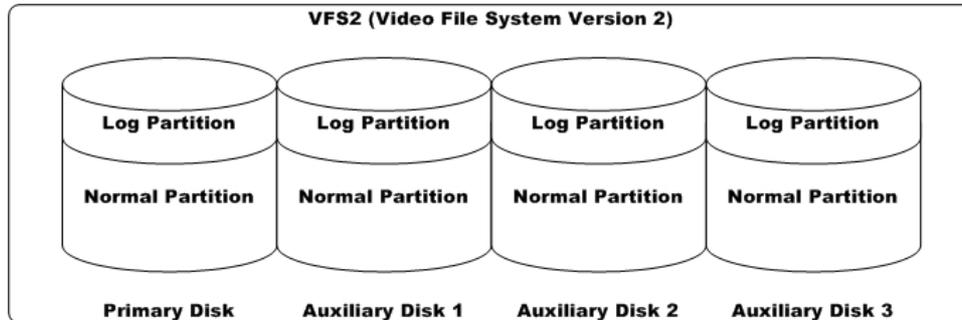

HVRM-D800E series has a peculiar storing constructure, and its features are as follows.

- (1) It is possible to connect 2 sets of HDD internally (Internal, ATA Interface) and 63 sets of HDD externally (External, 1 port of eSATA).
- (2) All of the connected HDDs are recognized as one virtual disk, and HVRM-D800E supports upto 8TB.

<Note>


Log Partition	To store the information of recorded data
Normal Partition	To store the data as normal recording schedule

Backup

- (1) Backup is possible only through 1 eSATA and HDD for backup should be formatted in FAT32 type.
(Its type is indicated as [F] in Disk Manager.)

Disk Manager

- (1) When HDD is added or deleted physically, Disk Manager runs automatically after rebooting. If not, you can run “Disk Manager” manually with moving “Menu→Utility→Disk Manager”.

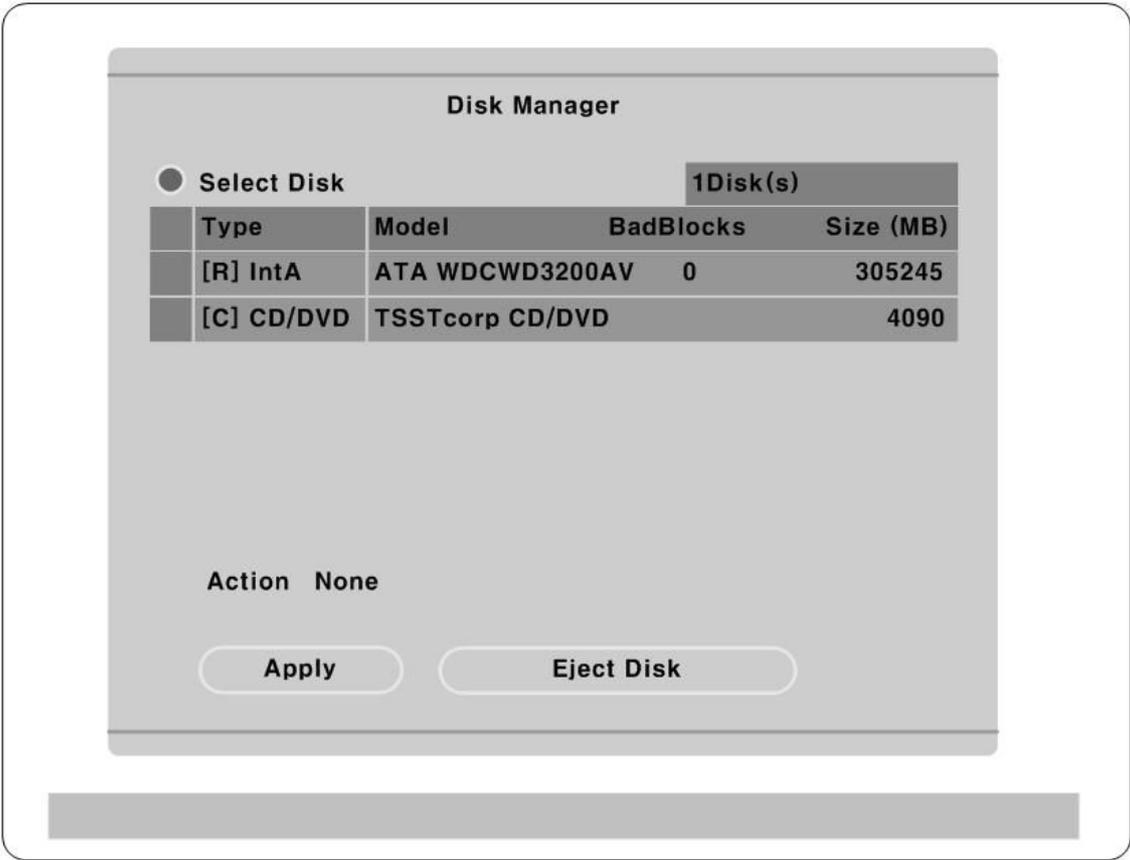

(2) HDD Type at Disk Manager

[R]	Available recording status
[V]	Connected and formatted as HVRM-D800E's file system. If using 'Add Used' command, it will be changed to [R]. There is no need to format.
[F]	Connected but not available HVRM-D800E's file system. After using 'Add', need to format for making as [R]. Indicate FAT32 file system connected for backup.
[C]	CD/DVD-Recorder
[X]	HDD cable is not connected nor has some problem. In case of that, HDD should be removed with using 'Confirm Removed' menu. In case of being [X] at the disk list, the buzzer will ring until closing a disk manager.
IntA	Internal SATA HDD 1
IntB	Internal SATA HDD 2
Ext	External HDD, which can be reordered by the order of recognition




(3) HDD Managing Command

Add	Add a HDD for recording. In case of adding a disk, "Alarm Partition" menu is activated as an available status. "Alarm Partition" means that one HDD divides a partion as Normal Recording & Alarm Recording part.
Add Used	Add a HDD that has been used and formatted. There is no need to reformat. It is possible only when HDD is added as Primary Disk.
Remove	Remove current HDD. HDD can be reused without data loss by the 'Add Used' command.
Confirm Removed	Use when a removed HDD is still listed. ALL DATA WILL BE LOST!
FAT32 Format	: Use when connect to the external HDD Format the partition of below 250GB to copy/backup by FAT32 file system. It is necessary to create partition by using Disk manager on PC for this work. In case the size is over 250GB, format each partition by FAT32 file system after creating multiple partititions smaller than 250GB.

#2. Specification

Item		Description
Video Input	Analog Ch.	8 BNC connectors (NTSC/PAL, Auto detect)
Video Output	Monitor	2 BNC, 1 VGA
Video Compression		MPEG4 & JPEG
Display	Speed	240/200ips (NTSC/PAL)
	Resolution	D1(4CIF), HALF(2CIF), CIF
	Multi Screen	1, 4, 9ch
Recording	Speed	240/200ips (NTSC/PAL) at HALF(2CIF)
	Resolution	D1(4CIF), HALF(2CIF), CIF
	Multi Screen	1, 4, 9ch
Sensor Input / Relay Output		8 input / 4 output, configurable NO/NC
System Control		Key Buttons, Remote Client, IR Remote, Keyboard Controller(Optional)
PTZ Control		RS485
Audio		1ch Input / 1ch Output
Display		Brightness, Contrast and Covert Feature
Camera Title		22 Characters per channel
Recording Mode		Manual(Emergency), Alarm (Pre/Post), Schedule
Recording Quality		5 Levels of compression rate / Record frame rate adjustment
Pre/Post Recording		5sec / 60sec
Motion Detection		22x15 (NTSC)/ 22x18 (PAL) grid
Search Mode		Date/Time, Log, Text, Smart
Playback Mode		Forward, Reverse, Pause, 1x, 2x, 4x, 8x, 16x, 32x, 64x
Multiplex Function		Simultaneous Live Display/Playback/Record, Remote Monitoring/Playback
Alarm Notification		Automatic E-mail, Internal Buzzer, Relay-out, Pop-up Screen, Network Event
File System		Intelligent Power Failure Recovery
Watermark		Yes
Password Protection		2 Level (Admin/User)
Backup		CD/DVD Writer (DVD-R 4.7G Media, CD-R 700MB Media), eSATA, USB, Network
Interface		1 RS-232C, 2 RS 485
Storage		2 Internal SATA HDD + 1 External SATA

Network	TCP/IP, ARP, ICMP, DHCP, PPPoE, UDP, SMTP, SNMP, FTP, SNT, HTTP	
Remote Control	Software application: Control Center Lite (supplied basically) Remote observation through Web Browser Functions: Monitor, Search, Playback, Backup, Event Monitor, PTZ	
Operation System	Embedded Linux	
Temperature	Operation	+0°C ~ +40°C
	Storage	-20°C ~ +60°C
Relative	Operation	93% RH Below
	Storage	95% RH Below
Dimensions (mm)	420(W) x 294(D) x 98(H)	
Weight	5.5Kg	
Power Consumption (Applied Adaptor)	Max. 60W, Typical 35W (12VDC 5A)	
Total Integration Solution & API	Control Center, WinDVRs, WESP SDK	

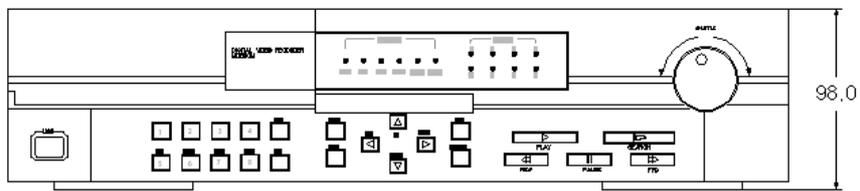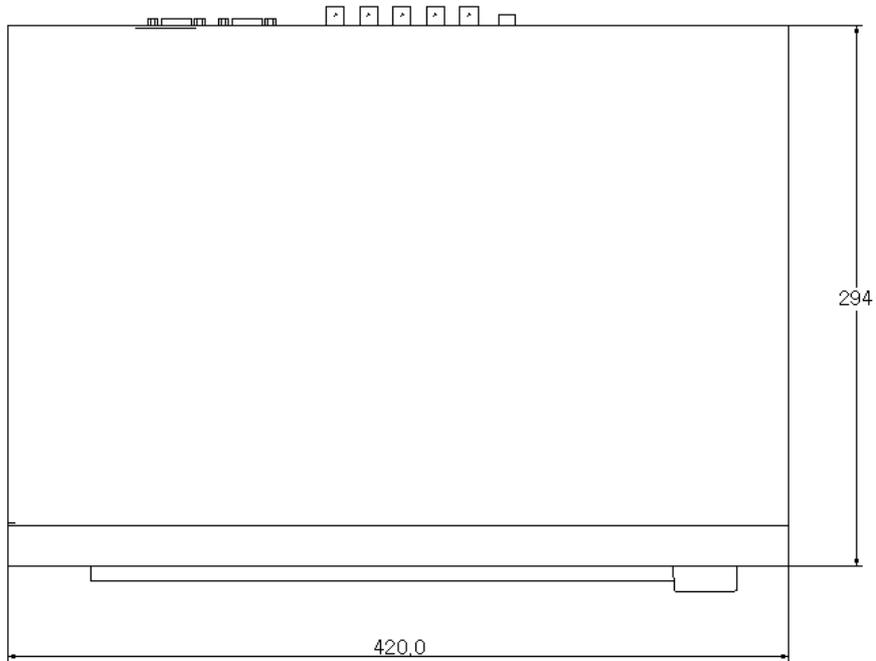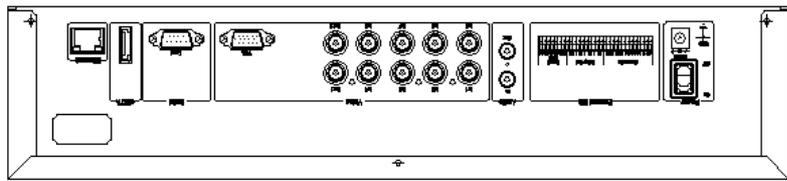

HUNT ELECTRONIC USA INC.

11790 Jersey Blvd.

Rancho Cucamonga, CA 91730

Tel: (888)993-4868, (909)987-6999

Fax: (909)987-6997

techsupport@huntcctv.com

www.huntcctv.com

The content of this manual can differ according to firmware or Software upgrading, and the standard and appearance of products may be changed for the improvement of quality without an advance notice.